
# Service Manual Air Conditioner



Destination Europe Turkey









This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the products dealt with in this service information by anyone else could result in serious injury or death.

## IMPORTANT SAFETY NOTICE =

There are special components used in this equipment which are important for safety. These parts are marked by  $\Delta$  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

## A PRECAUTION OF LOW TEMPERATURE

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.



© Panasonic Corporation 2018

# TABLE OF CONTENTS

		PAGE
1.	Safe	ety Precautions3
2.	Prec	caution for Using R32 Refrigerant5
3.	Spe	cifications9
4.	Feat	tures15
5.	Loca	ation of Controls and Components16
5	5.1 5.2 5.3	Indoor Unit
6.	Dim	ensions18
	6.1 6.2	Indoor Unit & Remote Control18 Outdoor Unit21
7.	Refr	igeration Cycle Diagram24
	7.1 7.2	CS-FZ25UKE CU-FZ25UKE CS-FZ35UKE CU-FZ35UKE24 CS-FZ50UKE CU-FZ50UKE CS-FZ60UKE CU-FZ60UKE25
8.	Bloc	ck Diagram26
	3.1 3.2	CS-FZ25UKE CU-FZ25UKE CS-FZ35UKE CU-FZ35UKE
9.	Wiri	ng Connection Diagram28
	9.1 9.2	Indoor Unit
10.	Elec	tronic Circuit Diagram33
	10.1 10.2	Indoor Unit
11.	Prin	ted Circuit Board38
		Indoor Unit
12.	Inst	allation Instruction43
1	2.1  2.2  2.3	Select the Best Location43 Indoor Unit
13.		allation and Servicing Air Conditioner lg R3254
1	3.1  3.2  3.3  3.4	About R32 Refrigerant
1	3.5  3.6  3.7	Procedures

		F	AGE
	13.8	<reference> Analysis method for no error code, no cooling / no warming</reference>	
	14. Ope	ration Control	74
	14.1	Basic Function	
	14.2	Indoor Fan Motor Operation	
	14.3	Outdoor Fan Motor Operation	
	14.4	Airflow Direction	
	14.5	Timer Control	
	14.6	Sleep Mode Operation	79
	14.7	Random Auto Restart Control	
	14.8 14.9	Indication Panel Quiet Operation (Cooling Mode/Cooling	79
	14.9	Area of Dry Mode)	70
	14.10	Quiet Operation (Heating)	
	-	Powerful Mode Operation	
		ection Control	
	15.1 15.2	Protection Control for All Operations Protection Control for Cooling & Soft Dry	
		Operation	
	15.3	Protection Control for Heating Operation	
	16. Ser\	vicing Mode	86
	16.1	Auto OFF/ON Button	86
	16.2	Heat Only Operation	87
	16.3	Remote Control Button	88
	17. Trou	ubleshooting Guide	91
	17.1	Refrigeration Cycle System	91
	17.2	Relationship Between the Condition of th	
		Air Conditioner and Pressure and Electric	
		Current	
	17.3	Breakdown Self Diagnosis Function	
	17.4	Error Codes Table	
	17.5	Self-diagnosis Method	96
	18. Disa	assembly and Assembly Instructions	124
	18.1	CS-FZ25UKE CS-FZ35UKE	124
	18.2	CS-FZ50UKE	
	18.3	CS-FZ60UKE	
	18.4	Outdoor Electronic Controller Removal	
		Procedure	138
	19. Tecl	hnical Data	141
	19.1	Cool Mode Performance Data	141
	19.2	Heat Mode Performance Data	
:	20. Serv	vice Data	144
	20.1	Cool Mode Outdoor Air Temperature	
	20.1	Characteristic	144
	20.2	Heat Mode Outdoor Air Temperature	
		Characteristic	148
	20.3	Piping Length Correction Factor	
2	21. Exp	loded View and Replacement Parts	
			155
	21.1	Indoor Unit	155
	21.2		

• Specifications, designs and contents in this Service Manual are subject to change without notice.

## 1. Safety Precautions

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each
  indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the
  seriousness is classified by the following indications.

MARNING This indication shows the possibility of causing death or serious injury.	
	This indication shows the possibility of causing injury or damage to properties only.

• The items to be followed are classified by the symbols:

$\bigcirc$	Symbol with white background denotes item that is PROHIBITED.
•	Symbol with dark background denotes item that must be carried out.

• Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

1.	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst and serious injury.	$\Diamond$	
2.	Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.	$\bigcirc$	
3.	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	$\bigcirc$	
4.	The appliance shall be stored in a well ventilated room with indoor floor area larger than $A_{min}$ (m <sup>2</sup> ) [refer Table A] and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.	$\oslash$	
5.	Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.	$\bigcirc$	
6.	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.	$\bigcirc$	
7.	Do not sit or step on the unit, you may fall down accidentally.	$\bigcirc$	
8.	The appliance shall be installed, and/or operated in a room with floor area larger than $A_{min}$ (m <sup>2</sup> ) [refer Table A] and keep away from ignition sources, such as heat/sparks/open flame or hazardous areas such as gas appliances, gas cooking, reticulated gas supply systems or electric cooking appliances, etc.	$\oslash$	
9.	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.	$\bigcirc$	
10.	<ul> <li>When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into</li> <li>refrigeration cycle (piping).</li> <li>Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.</li> </ul>		
11.	Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.	$\Diamond$	
12.	Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.	$\Diamond$	
13.	Do not perform flare connection inside a building or dwelling or room, when joining the heat exchanger of indoor unit with interconnecting piping. Refrigerant connection inside a building or dwelling or room must be made by brazing or welding. Joint connection of indoor unit by flaring method can only be made at outdoor or at outside of a building or dwelling or room. Flare connection may cause gas leak and flammable atmosfere.	$\oslash$	
14.	<ul> <li>For R32 model, use piping, flare nut and tools which is specified for R32 refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.</li> <li>Thickness for copper pipes used with R32 must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.</li> <li>It is desirable that the amount of residual oil less than 40 mg/10 m.</li> </ul>		
15.	Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, elect shock or fire.	rical	
16.	For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.		
17.	Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.		
18.	Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not produce, the set will drop and cause injury.	operly	

19.	For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.
20.	Do not use joint cable for indoor/outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction <b>CONNECT THE CABLE TO THE INDOOR UNIT</b> and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.
21.	Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
22.	This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
23.	During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
24.	During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
25.	Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
26.	After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
27.	Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
28.	Be aware that refrigerants may not contain an odour.
29.	This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

1.	Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	$\bigcirc$
2.	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.	$\bigcirc$
3.	Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.	$\bigcirc$
4.	Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.	$\bigcirc$
5.	Do not touch the sharp aluminium fin, sharp parts may cause injury.	$\bigcirc$
6.	Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage furniture.	ge the
7.	Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage o and/or property.	· injury
8.	<ul> <li>Power supply connection to the room air conditioner.</li> <li>Use power supply cord 3 × 1.5 mm<sup>2</sup> (1.0 ~ 1.5HP), 3 × 2.5 mm<sup>2</sup> (2.0 ~ 2.25HP) type designation 60245 IEC 57 or heavier cord.</li> <li>Connect the power supply cord of the air conditioner to the mains using one of the following method.</li> <li>Power supply point should be in easily accessible place for power disconnection in case of emergency.</li> <li>In some countries, permanent connection of this air conditioner to the power supply is prohibited.</li> <li>1) Power supply connection to the receptacle using power plug.</li> <li>Use an approved 15/16A (1.0 ~ 1.5HP), 16A (2.0 ~ 2.25HP), power plug with earth pin for the connection to the socket.</li> <li>2) Power supply connection to a circuit breaker for the permanent connection.</li> <li>Use an approved 16A (1.0 ~ 2.25HP) circuit breaker for the permanent connection. It must be a double pole switch with a minir 3.0 mm contact gap.</li> </ul>	num
9.	Installation work. It may need two people to carry out the installation work.	

# 2. Precaution for Using R32 Refrigerant

• The basic installation work procedures are the same as conventional refrigerant (R410A, R22) models. However, pay careful attention to the following points:

	Since the working pressure is higher than that of refrigerant R22 models, some of the piping and installation and service tools are special.
1.	Especially, when replacing a refrigerant R22 model with a new refrigerant R32 model, always replace the conventional piping and flare nuts with the R32 and R410A piping and flare nuts on the outdoor unit side.
	For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.
2.	Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety.
	Therefore, check beforehand. [The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch).]
3.	Be more careful than R22 so that foreign matter (oil, water, etc.) does not enter the piping.
З.	Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)

1.	<ul> <li>Installation (Space)</li> <li>Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.</li> <li>Must ensure that pipe-work shall be protected from physical damage.</li> <li>Must comply with national gas regulations, state municipal rules and legislation. Notify relevant authorities in accordance with all applicable regulations.</li> <li>Must ensure mechanical connections be accessible for maintenance purposes.</li> <li>In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.</li> <li>When disposal of the product, do follow to the precautions in #12 and comply with national regulations.</li> </ul>
2.	<ul> <li>Servicing</li> <li>2-1. Service personnel</li> <li>Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment specification.</li> <li>Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.</li> <li>Servicing shall be performed only as recommended by the manufacturer.</li> <li>2-2. Work</li> <li>Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.</li> <li>For repair to the refrigerating system, the precautions in #2-2 to #2-8 must be followed before conducting work on the system.</li> <li>Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.</li> <li>All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.</li> <li>Avoid working in confined spaces.</li> <li>Wear appropriate protective equipment, including respiratory protection, as conditions warrant.</li> <li>Ensure that the conditions within the area have been made safe by limit of use of any flammable material. Keep all sources of ignition and hot metal surfaces away.</li> <li>Cas. Checking for presence of refrigerant</li> <li>The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentically safe.</li> <li>In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.</li> <li>In case of leakage/spillage happened, do notify persons downwind of the leaking/spill, isolate immediate hazar area and keep unauthorized personnel out.</li> <li>Presence</li></ul>
	<ul> <li>In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.</li> <li>In case of leakage/spillage happened, do notify persons downwind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.</li> <li>2-4. Presence of fire extinguisher</li> </ul>

• Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

2-5. No ignition sources No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ianition risks. "No Smoking" signs shall be displayed. 2-6. Ventilated area Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere. 2-7. Checks to the refrigeration equipment Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants. The charge size is in accordance with the room size within which the refrigerant containing parts are installed. The ventilation machinery and outlets are operating adequately and are not obstructed. If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant. Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected. Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against being so corroded. 2-8. Checks to electrical devices Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. Initial safety checks shall include but not limit to:-That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking. That there is no live electrical components and wiring are exposed while charging, recovering or purging the system. That there is continuity of earth bonding. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with • If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. The owner of the equipment must be informed or reported so all parties are advised thereinafter. Repairs to sealed components During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation. Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc. 3. Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications. The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. NOTE: Intrinsically safe components do not have to be isolated prior to working on them. Repair to intrinsically safe components Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. 4. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak. Cabling Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse 5. environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans. Detection of flammable refrigerants Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks. 6. A halide torch (or any other detector using a naked flame) shall not be used.

7.	<ul> <li>Leak detection methods</li> <li>Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.)</li> <li>Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.</li> <li>Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.</li> <li>Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.</li> <li>If a leak is suspected, all naked flames shall be removed/extinguished.</li> <li>If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.</li> </ul>
	<ul> <li>Removal and evacuation</li> <li>When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:         <ul> <li>remove refrigerant -&gt; • purge the circuit with inert gas -&gt; • evacuate -&gt; • purge again with inert gas -&gt; • open the circuit by cutting or brazing</li> </ul> </li> </ul>
8.	<ul> <li>The refrigerant charge shall be recovered into the correct recovery cylinders.</li> <li>The system shall be "flushed" with OFN to render the unit safe.</li> <li>This process may need to be repeated several times.</li> <li>Compressed air or oxygen shall not be used for this task.</li> <li>Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.</li> <li>This process shall be repeated until no refrigerant is within the system.</li> <li>When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.</li> <li>This operation is absolutely vital if brazing operations on the pipe work are to take place.</li> <li>Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.</li> </ul>
9.	<ul> <li>Charging procedures</li> <li>In addition to conventional charging procedures, the following requirements shall be followed. <ul> <li>Ensure that contamination of different refrigerants does not occur when using charging equipment.</li> <li>Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.</li> <li>Cylinders shall be kept upright.</li> <li>Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.</li> <li>Label the system when charging is complete (if not already).</li> <li>Extreme care shall be taken not to over fill the refrigeration system.</li> </ul> </li> <li>Prior to recharging the system it shall be pressure tested with OFN (refer to #7).</li> <li>The system shall be leak tested on completion of charging but prior to commissioning.</li> <li>A follow up leak test shall be carried out prior to leaving the site.</li> <li>Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.</li> </ul>
10.	<ul> <li>Decommissioning</li> <li>Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.</li> <li>It is recommended good practice that all refrigerants are recovered safely.</li> <li>Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.</li> <li>It is essential that electrical power is available before the task is commenced.</li> <li>a) Become familiar with the equipment and its operation.</li> <li>b) Isolate system electrically.</li> <li>c) Before attempting the procedure ensure that:</li> </ul> • mechanical handling equipment is available, if required, for handling refrigerant cylinders; <ul> <li>all personal protective equipment is available and being used correctly;</li> <li>the recovery process is supervised at all times by a competent person;</li> <li>recovery equipment and cylinders conform to the appropriate standards.</li> </ul>
	<ul> <li>d) Pump down refrigerant system, if possible.</li> <li>e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.</li> <li>f) Make sure that cylinder is situated on the scales before recovery takes place.</li> <li>g) Start the recovery machine and operate in accordance with manufacturer's instructions.</li> <li>h) Do not over fill cylinders. (No more than 80 % volume liquid charge).</li> <li>i) Do not exceed the maximum working pressure of the cylinder, even temporarily.</li> <li>j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.</li> <li>k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.</li> <li>e Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.</li> </ul>

11.	<ul> <li>Labelling</li> <li>Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.</li> <li>The label shall be dated and signed.</li> <li>Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.</li> </ul>
	<ul> <li>Recovery</li> <li>When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.</li> <li>When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.</li> <li>Ensure that the correct number of cylinders for holding the total system charge are available.</li> <li>All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).</li> <li>Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.</li> <li>Recovery cylinders are evacuated and, if possible, cooled before recovery occurs.</li> <li>The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable</li> </ul>
12.	<ul> <li>refrigerants.</li> <li>In addition, a set of calibrated weighing scales shall be available and in good working order.</li> <li>Hoses shall be complete with leak-free disconnect couplings and in good condition.</li> <li>Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.</li> <li>The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.</li> <li>Do not mix refrigerants in recovery units and especially not in cylinders.</li> <li>If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.</li> <li>The evacuation process shall be carried out prior to returning the compressor to the suppliers.</li> <li>Only electric heating to the compressor body shall be employed to accelerate this process.</li> </ul>

Only electric reating to the compressor body shall be employed to
 When oil is drained from a system, it shall be carried out safely.

# 3. Specifications

		Model		CS-FZ25UKE			CS-FZ35UKE	
Indoor		POS (EAN)	5025232874552			5025232874569		
		Model CU-FZ25UKE			CU-FZ35UKE			
	Outdoor	POS (EAN)				5025232874750 EUROVENT		
	Performance Test (	. ,						
		Phase, Hz		Single, 50			Single, 50	
Р	ower Supply	V		230			230	
			Min.	Mid.	Max.	Min.	Mid.	Max.
		kW	0.85	2.50	3.00	0.85	3.40	3.90
	Capacity	BTU/h	2900	8530	10200	2900	11600	13300
		kcal/h	730	2150	2580	730	2920	3350
F	Running Current	А	-	3.00	_	-	4.70	-
	Input Power	W	250	680	900	255	1.07k	1.28k
An	nual Consumption		-	340	-	-	535	_
	EER CLASS		-	A	-	-	В	-
		W/W	3.40	3.68	3.33	3.33	3.18	3.05
<b>b</b>	EER	BTU/hW	11.60	12.54	11.33	11.37	10.84	10.39
	Ditatio	kcal/hW	2.92	3.16	2.87	2.86	2.73	2.62
	Pdesign SEER	kW ()A/(A/)		2.5 6.2			3.4 6.1	
ErP	Annual	(W/W)					-	
	Consumption	kWh		141		195		
	Class			A++			A++	
	Power Factor	%	-	99	-	-	99	-
Indoc	r Noise (H / L / QLo)	dB-A	37 / 26 / 20 38 / 30 / 20					
		Power Level dB	53 / - / -			54 / - / -		
Outdo	or Noise (H / L / QLo)	dB-A	48/-/- 48/-/-					
		Power Level dB	0.00	64 / - / -	2.00	0.00	64 / - / -	4.40
	0	kW	0.80	3.15	3.60	0.80	3.84	4.40
	Capacity	BTU/h	2730	10700	12300	2730	13100	15000
		kcal/h	690	2710	3100	690	3300	3780
F	Running Current	A	-	3.50	-	-	4.60	-
	Input Power	W	195	780	1.04k	195	1.05k	1.29k
	COP CLASS		-	A	-	-	A	-
		W/W	4.10	4.04	3.46	4.10	3.66	3.41
	COP	BTU/hW	14.00	13.72	11.83	14.00	12.48	11.63
,		kcal/hW	3.54	3.47	2.98	3.54	3.14	2.93
·	Pdesign	kW		1.9			2.4	
	Tbivalent	°C		-10			-10	
ErP	SCOP	(W/W)		4.1			4.1	
	Annual Consumption	kWh		649			820	
	Class		A+		A+			
	Power Factor	%	_	97	_	_	99	_
		dB-A		37 / 27 / 24			38 / 33 / 25	I
Indoo	r Noise (H / L / QLo)	Power Level dB		53 / - / -		54 / - / -		
		dB-A	49 / - / -			50 / - / -		
Outdo	or Noise (H / L / QLo)	Power Level dB	64 / - / -					
	mp. : Capacity (kW) /					65 / - / -		
			2.61 / 920 / 2.84			3.19 / 1.14k / 2.80		
Extr Low Temp. : Capacity (kW) / I.Power (W) / COP Max Current (A) / Max Input Power (W)					2.60 / 1.05k / 2.48			
	• • • • • • • •		4.8 / 1.04k			7.2 / 1.58k		

Mo			Model	CS-FZ25UKE	CS-FZ35UKE		
Outdoor			POS (EAN)	5025232874552	5025232874569		
			Model	CU-FZ25UKE	CU-FZ35UKE		
			POS (EAN)	5025232874743	5025232874750		
		Туре		Hermetic Motor / Rotary	Hermetic Motor / Rotary		
Compress	sor N	Notor Type		Brushless (6-poles)	Brushless (6-poles)		
		utput Power	W	500	500		
	Ту			Cross-flow Fan	Cross-flow Fan		
	Mate			ASG20K1	ASG20K1		
	Motor	Туре		DC (8-poles)	DC (8-poles)		
	Input F		W	47.3	47.3		
	Output	Power	W	40	40		
		Cool	rpm	580	580		
an	QL	-o Heat	rpm	750	770		
л Г		Cool	rpm	730	800		
Indoor Fan	L	o Heat	rpm	830	950		
		Cool	rpm	900	960		
Spee	d M	e Heat	rpm	980	1050		
		Cool	rpm	1080	1120		
	Н	i Heat	rpm	1140	1160		
		Cool	rpm	1130	1220		
	Sł	Hi Heat	rpm	1190	1230		
	Ту	pe		Propeller Fan	Propeller Fan		
-	Mate			PP	PP		
-an	Motor Type			DC (8-poles)	DC (8-poles)		
	Input Power		W	_	-		
	Output Power		W	40	40		
	Cool		rpm	820	860		
Spee	d H	li Heat	rpm	820	860		
Мо	Moisture Removal		L/h (Pt/h)	1.5 (3.2)	2.0 (4.2)		
		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	4.90 (173)	4.90 (173)		
	QL	-o Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	6.74 (238)	6.95 (245)		
		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	6.52 (230)	7.28 (257)		
	L		m <sup>3</sup> /min (ft <sup>3</sup> /min)	7.60 (268)	8.90 (314)		
Indoor		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	8.41 (297)	9.00 (318)		
Airflow	M	e Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	9.27 (327)	10.03 (354)		
		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	10.30 (365)	10.70 (380)		
	H	i Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	11.00 (390)	11.20 (395)		
		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	10.84 (383)	11.81 (417)		
	Sł	Hi Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	11.49 (406)	11.92 (421)		
Outdoo	r	Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	30.50 (1075)	31.10 (1100)		
Airflow		i Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	30.50 (1075)	31.10 (1100)		
	Control Device			Expansion Valve	Expansion Valve		
Refrigera	<b>nt</b>	efrigerant Oil	cm <sup>3</sup>	FW50S (250)	FW50S (250)		
Cycle		rigerant Type	g (oz)	R32, 580 (20.5)	R32, 670 (23.7)		
		• •	SWP	675	675		
F-Gas		CO2 (Precharg	eq (ton) jed Amount / m Amount)	0.392 / 0.442 0.452 / 0.503			

		Model	CS-FZ2	5UKE	CS-FZ3	5UKE		
Indoor				POS (EAN)	5025232	874552	5025232874569	
		Model	CU-FZ2	5UKE	CU-FZ35UKE			
	Outdoor		POS (EAN)	5025232874743		5025232874750		
			Height (I/D / O/D)	mm (inch)	290 (11-7/16) / 5	542 (21-11/32)	290 (11-7/16) / 542 (21-11/32)	
D	imension	Unit	Width (I/D / O/D)	mm (inch)	850 (33-15/32) /	850 (33-15/32) / 780 (30-23/32)		780 (30-23/32)
			Depth (I/D / O/D)	mm (inch)	199 (7-27/32) / 289 (11-13/32)		199 (7-27/32) / 289 (11-13/32)	
	Weight	Net	(I/D / O/D)	kg (lb)	8 (18) / 2	26 (57)	8 (18) / 2	27 (60)
	Pipe Dia	meter (L	iquid / Gas)	mm (inch)	6.35 (1/4) /	9.52 (3/8)	6.35 (1/4) /	9.52 (3/8)
	Sta	Indard L	ength	m (ft)	5.0 (1	6.4)	5.0 (1	6.4)
ing	Length I	Range (	min – max)	m (ft)	3 (9.8) ~ 1	5 (49.2)	3 (9.8) ~ 1	5 (49.2)
Piping	I/D & O/	/D Heig	ht Different	m (ft)	15.0 (4	19.2)	15.0 (4	9.2)
	Additio	onal Ga	s Amount	g/m (oz/ft)	10 (0	).1)	10 (0	.1)
	Length	for Add	itional Gas	m (ft)	7.5 (2	4.6)	7.5 (24.6)	
D		Inner	Diameter	mm	16.	7	16.7	
Dra	ain Hose	Length		mm	65	0	65	)
		Fin Material			Aluminium (Pre Coat)		Aluminium (Pre Coat)	
	Indoor	Fin Type			Slit Fin		Slit Fin	
Ex	Heat changer	Row × Stage × FPI			2 × 15 × 17		2 × 15 × 17	
		Size (W × H × L)		mm	610 × 315 × 25.4		610 × 315 × 25.4	
		Fin Material			Alumir	nium	Alumir	nium
C	Dutdoor	Fin Type			Corrugated Fin (Pre Coat)		Slit Fin (Pre Coat)	
Ex	Heat changer	Row × Stage × FPI			1 × 24 × 17		2 × 24 × 21	
		Size (W × H × L)		mm	18.2 × 504 × 710		25.4 × 504 × 828.5:808.5	
		Material Type		Material Polypropelene		pelene	Polypropelene	
А	ir Filter				One-touch		One-touch	
	Pov	ower Supply			Indoor		Indoor	
	Power	ver Supply Cord			Nil		Nil	
	Th	hermostat			Electronic Contol		Electronic Contol	
Prote		ection Device			Electronic Contol		Electronic	: Contol
					Dry Bulb	Wet Bulb	Dry Bulb	Wet Bulb
		Casling		Maximum °C (°F)	32 (89.6)	23 (73.4)	32 (89.6)	23 (73.4)
Indoor Ope		ration	Cooling	Minimum °C (°F)	16 (60.8)	11 (51.8)	16 (60.8)	11 (51.8)
	Range		Llooting	Maximum °C (°F)	30 (86.0)	_	30 (86.0)	_
			Heating	Minimum °C (°F)	16 (60.8)	_	16 (60.8)	_
			Cooling	Maximum °C (°F)	43 (109.4)	26 (78.8)	43 (109.4)	26 (78.8)
Ou	Itdoor Op	eration	Cooling	Minimum °C (°F)	-10 (14.0)	_	-10 (14.0)	_
	Range	è	Heating	Maximum °C (°F)	24 (75.2)	18 (64.4)	24 (75.2)	18 (64.4)
			Heating	Minimum °C (°F)	-15 (5.0)	-16 (3.2)	-15 (5.0)	-16 (3.2)

1. Cooling capacities are based on indoor temperature of 27°C Dry Bulb (80.6°F Dry Bulb), 19.0°C Wet Bulb (66.2°F Wet Bulb) and outdoor air temperature of 35°C Dry Bulb (95°F Dry Bulb), 24°C Wet Bulb (75.2°F Wet Bulb)

 Heating capacities are based on indoor temperature of 20°C Dry Bulb (68°F Dry Bulb) and outdoor air temperature of 7°C Dry Bulb (44.6°F Dry Bulb), 6°C Wet Bulb (42.8°F Wet Bulb)

3. Heating low temperature capacity, Input Power and COP measured at 230 V, indoor temperature of 20°C, outdoor 2/1°C.

4. Heating extreme low temperature capacity, Input Power and COP measured at 230 V, indoor temperature of 20°C, outdoor -7/-8°C.

5. Standby power consumption ≤ 2.0W (when switched OFF by remote control, except under self-protection control).

6. Specifications are subjected to change without prior notice for further improvement.

7. Maximum heating capacity shown are the values based on powerful operation.

8. If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.

9. The annual consumption is calculated by multiplying the input power by an average of 500 hours per year in cooling mode.

10. SEER and SCOP classification is at 230V only in accordance with EN-14825. For heating, SCOP indicates the value of only Average heating season. Other fiche data indicates in an attached sheet.

		Model		CS-FZ50UKE		CS-FZ60UKE		
Indoor		POS (EAN)	5025232874576			5025232874583		
		Model		CU-FZ50UKE			CU-FZ60UKE	
Outdoor POS (EAN) Performance Test Condition				5025232874767			502523287477	4
				EUROVENT			EUROVENT	
	T chomance Test e	Phase, Hz		Single, 50			Single, 50	
Po	ower Supply	V		230			230	
		v	Min.	Z30 Mid.	Max.	Min	Z30 Mid.	Max
		1204			-	Min.		Max.
	Capacity	kW BTU/h	0.98	5.00 17100	5.40	0.98	6.25 21300	7.10 24200
	Capacity	kcal/h	3340 840	4300	18400 4640	3340 840	5380	6110
R	unning Current	A	-	7.40	4040	-	8.60	-
	Input Power	W	285	1.65k	1.86k	280	1.93k	2.40k
Ann	ual Consumption		_	825		_	965	
	EER CLASS		_	B	_	_	A	_
		W/W	3.44	3.03	2.90	3.50	3.24	2.96
	EER	BTU/hW	11.72	10.36	9.89	11.93	11.04	10.08
		kcal/hW	2.95	2.61	2.49	3.00	2.79	2.55
}	Pdesign	kW		5.0			6.3	
	SEER	(W/W)		6.5			6.2	
ErP	Annual Consumption	kWh		269			356	
	Class	A++				A++		
	Power Factor	%	-	97	_	_	98	-
		dB-A	44 / 37 / 34 45 / 37 / 34					
Indoor	Noise (H / L / QLo)	Power Level dB	60 / - / -			61 / - / -		
Outdoo		dB-A	48 / - / -			49 / - / -		
Outdoo	r Noise (H / L / QLo)	Power Level dB	63 /				64 / - / -	
		kW	0.98	5.40	7.50	0.98	6.80	8.50
	Capacity	BTU/h	3340	18400	25600	3340	23200	29000
		kcal/h	840	4640	6450	840	5850	7310
R	unning Current	А	_	7.20	_	-	8.70	_
	Input Power	W	350	1.58k	2.45k	340	1.94k	2.73k
	COP CLASS		_	В	_	_	В	-
		W/W	2.80	3.42	3.06	2.88	3.51	3.11
	COP	BTU/hW	9.54	11.65	10.45	9.82	11.96	10.62
		kcal/hW	2.4	2.94	2.63	2.47	3.02	2.68
n 	Pdesign	kW		4.0			4.6	
20 20	Tbivalent °C -10				-10			
	SCOP	(W/W)	3.9			3.9		
ErP	Annual							
	Consumption	kWh		1436			1651	
	Class			A			А	1
	Power Factor	%	-	95	_	-	97	-
Indoor	Noise (H / L / QLo)	dB-A		44 / 37 / 34		45 / 37 / 34		
110001		Power Level dB	60 /			61 / - / -		
Outdoo	r Noise (H / L / QLo)	dB-A	49 / - / -			49 / - / -		
Juidoo	1 11013E (T / L / QLO)	Power Level dB	64 / - / -			64 / - / -		
Low Temp. : Capacity (kW) / I.Power (W) / COP			5.43 / 2.17k / 2.50			6.16 / 2.42k / 2.55		
Extr Low T	emp. : Capacity (kW)	/ I.Power (W) / COP	4.58 / 2.10k / 2.18			5.24 / 2.45k / 2.14		
	Current (A) / Max In		11.2 / 2.45k			11.9 / 2.73k		
ivia/			7.40			8.70		

la de ser				Model	CS-FZ50UKE	CS-FZ60UKE		
Indoor				POS (EAN)	5025232874576	5025232874583		
Outdoor				Model	CU-FZ50UKE	CU-FZ60UKE		
				POS (EAN)	5025232874767	5025232874774		
Туре			уре		Hermetic Motor / Rotary	Hermetic Motor / Rotary		
Compressor Motor Type			or Type		Brushless (4-poles)	Brushless (4-poles)		
	Output Power			W	900	900		
		Туре			Cross-flow Fan	Cross-flow Fan		
		Material			ASG20K1	ASG20K1		
	N	lotor Typ	be		DC (8-poles)	DC (8-poles)		
	In	put Pow	ver	W	47.3	94.8		
	Ou	Itput Pov	wer	W	40	40		
ĺ			Cool	rpm	900	880		
an		QLo	Heat	rpm	960	990		
Indoor Fan			Cool	rpm	960	960		
pul		Lo	Heat	rpm	1030	1070		
	Speed	Ме	Cool	rpm	1090	1110		
	Speed	INIG	Heat	rpm	1170	1210		
		Hi	Cool	rpm	1230	1260		
			Heat	rpm	1320	1350		
		SHi	Cool	rpm	1300	1340		
		311	Heat	rpm	1370	1430		
	Туре				Propeller Fan	Propeller Fan		
	Material				PP	PP		
Outdoor Fan	Motor Type		be		DC (8-poles)	DC (8-poles)		
loor	Input Power		ver	W	_	_		
Outc	Output Power		wer	W	40	40		
	Speed	Hi Cool		rpm	820	770		
	Heat		Heat	rpm	820	750		
	Moistu	pisture Removal		L/h (Pt/h)	2.8 (5.9)	3.5 (7.4)		
		QLo	Cool	m³/min (ft³/min)	8.33 (294)	11.37 (401)		
		QLU	Heat	m³/min (ft³/min)	8.93 (315)	13.05 (461)		
		Lo	Cool	m³/min (ft³/min)	8.93 (315)	12.59 (445)		
			Heat	m³/min (ft³/min)	9.63 (340)	14.28 (504)		
	Indoor	Ме	Cool	m³/min (ft³/min)	10.23 (361)	14.89 (526)		
4	Airflow		Heat	m³/min (ft³/min)	11.03 (389)	16.42 (580)		
		Hi	Cool	m³/min (ft³/min)	11.60 (410)	17.20 (605)		
			Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	12.50 (440)	18.70 (660)		
		SHi	Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	12.33 (435)	18.41 (650)		
			Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min)	13.03 (460)	19.78 (698)		
	Dutdoor	Hi	Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min)	32.7 (1155)	42.6 (1505)		
	Airflow	Heat		m³/min (ft³/min)	32.7 (1155)	41.5 (1465)		
R	Control Device				Expansion Valve	Expansion Valve		
	Cycle	Refrigerant Oil		cm <sup>3</sup>	FW50S (450)	FW50S (450)		
		Refrige	erant Type	g (oz)	R32, 1.14k (40.2)	R32, 1.15k (40.6)		
	F-Gas	CO20 (Precharg		GWP eq (ton) jed Amount / m Amount)	675 0.770 / 0.845	675 0.776 / 1.004		

				Model	CS-FZ5	0UKE	CS-FZ6	0UKE
Indoor				POS (EAN)	5025232	874576	5025232874583	
		Model	CU-FZ5	0UKE	CU-FZ60UKE			
	Outdoor		POS (EAN)	5025232874767		5025232874774		
			Height (I/D / O/D)	mm (inch)	290 (11-7/16) /	619 (24-3/8)	290 (11-7/16) / 695 (27-3/8)	
Di	mension	Unit	Width (I/D / O/D)	mm (inch)	870 (34-9/32) / 8	324 (32-15/32)	1070 (42-5/32) /	875 (34-15/32)
			Depth (I/D / O/D)	mm (inch)	214 (8-7/16) / 299 (11-25/32)		240 (9-15/32) / 320 (12-5/8)	
١	Weight	Net	(I/D / O/D)	kg (lb)	9 (20) / 3	38 (84)	12 (26) /	43 (95)
	Pipe Dia	neter (L	iquid / Gas)	mm (inch)	6.35 (1/4) / 1	12.70 (1/2)	6.35 (1/4) / 1	2.70 (1/2)
	Sta	indard L	ength	m (ft)	5.0 (1	6.4)	5.0 (1	6.4)
Piping	Length I	Range (	min – max)	m (ft)	3 (9.8) ~ 1	5 (49.2)	3 (9.8) ~ 3	0 (98.4)
Pip	I/D & O/	D Heig	ht Different	m (ft)	15.0 (4	19.2)	15.0 (4	9.2)
	Additio	onal Ga	s Amount	g/m (oz/ft)	15 (0	0.2)	15 (0	.2)
	Length	for Add	itional Gas	m (ft)	7.5 (2	4.6)	7.5 (24.6)	
Dee		Inner	Diameter	mm	16.	16.7		7
Dra	ain Hose	L	ength	mm	650		650	
		Fin Material			Aluminium (Pre Coat)		Aluminium (Pre Coat)	
	ndoor	Fin Type			Slit Fin		Slit Fin	
	Heat changer	Row × Stage × FPI			2 × 15 × 21		2 × 15 × 17	
		Size (W $\times$ H $\times$ L)		mm	610 × 315 × 25.4		810 × 315 × 25.4	
		Fin Material Fin Type			Alumir	nium	Alumir	nium
	outdoor				Corrugated Fin (Pre Coat)		Corrugated Fin (Pre Coat)	
	Heat changer	Row × Stage × FPI			2 × 28 × 17		2 × 31 × 19	
		Size (W × H × L)		mm	36.38 × 588 × 856.3:827.7		36.4 × 651 × 854.5:824.5	
•	ir Filtor	Material			Polypropelene		Polypropelene	
A	ir Filter	Туре			One-touch		One-touch	
	Pov	wer Supply			Indoor		Indoor	
	Power	r Supply Cord			Nil		Nil	
	Th	nermostat			Electronic Contol		Electronic Contol	
	Prote	ection Device			Electronic	c Contol	Electronic	: Contol
					Dry Bulb	Wet Bulb	Dry Bulb	Wet Bulb
				Maximum °C (°F)	32 (89.6)	23 (73.4)	32 (89.6)	23 (73.4)
Ind	door Ope	ration		Minimum °C (°F)	16 (60.8)	11 (51.8)	16 (60.8)	11 (51.8)
	Range			Maximum °C (°F)	30 (86.0)	-	30 (86.0)	_
			Heating	Minimum °C (°F)	16 (60.8)	_	16 (60.8)	
			Cooling	Maximum °C (°F)	43 (109.4)	26 (78.8)	43 (109.4)	26 (78.8)
Ou	tdoor Op	eration	Cooling	Minimum °C (°F)	-10 (14.0)	-	-10 (14.0)	
	Range		Heating	Maximum °C (°F)	24 (75.2)	18 (64.4)	24 (75.2)	18 (64.4)
			Heating	Minimum °C (°F)	-15 (5.0)	-16 (3.2)	-15 (5.0)	-16 (3.2)

Cooling capacities are based on indoor temperature of 27°C Dry Bulb (80.6°F Dry Bulb), 19.0°C Wet Bulb (66.2°F Wet Bulb) and outdoor air 1. temperature of 35°C Dry Bulb (95°F Dry Bulb), 24°C Wet Bulb (75.2°F Wet Bulb) Heating capacities are based on indoor temperature of 20°C Dry Bulb (68°F Dry Bulb) and outdoor air temperature of 7°C Dry Bulb

2. (44.6°F Dry Bulb), 6°C Wet Bulb (42.8°F Wet Bulb)

3.

Heating low temperature capacity, Input Power and COP measured at 230 V, indoor temperature of 20°C, outdoor 2/1°C. Heating extreme low temperature capacity, Input Power and COP measured at 230 V, indoor temperature of 20°C, outdoor -7/-8°C. Standby power consumption  $\leq$  2.0W (when switched OFF by remote control, except under self-protection control). 4.

5.

6. Specifications are subjected to change without prior notice for further improvement. Maximum heating capacity shown are the values based on powerful operation. 7.

If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with 8. rated voltage 230V shall be used.

9. The annual consumption is calculated by multiplying the input power by an average of 500 hours per year in cooling mode.

10. SEER and SCOP classification is at 230V only in accordance with EN-14825. For heating, SCOP indicates the value of only Average heating season. Other fiche data indicates in an attached sheet.

## 4. Features

### Inverter Technology

- Wider output power range
- Energy saving
- Quick Cooling
- Quick Heating
- More precise temperature control

#### • Environment Protection

• Non-ozone depletion substances refrigerant (R32)

#### • Long Installation Piping

Long piping up to 15 meters (FZ25/35/50UKE), 30 meters (FZ60UKE)

#### • Easy to use remote control

#### Quality Improvement

- o Random auto restart after power failure for safety restart operation
- Gas leakage protection
- Prevent compressor reverse cycle
- o Inner protector to protect compressor

#### • Operation Improvement


- o Quiet mode to reduce the indoor unit operation sound
- Powerful mode to reach the desired room temperature quickly

#### • Serviceability Improvement


• Breakdown Self Diagnosis function

## 5. Location of Controls and Components

## 5.1 Indoor Unit

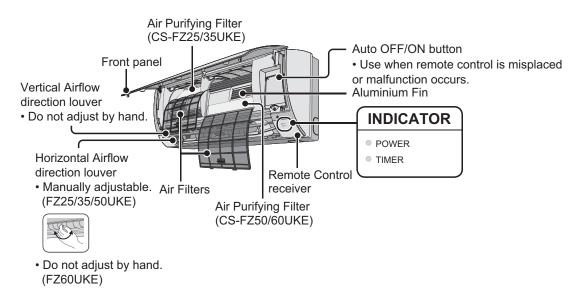


## 5.2 Outdoor Unit

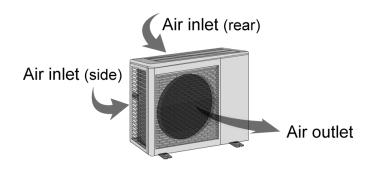


## 5.3 Remote Control

## 5.3.1 CS-FZ25UKE CS-FZ35UKE CS-FZ50UKE

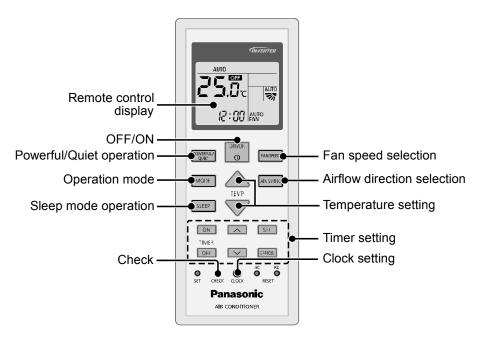


## 5.3.2 CS-FZ60UKE

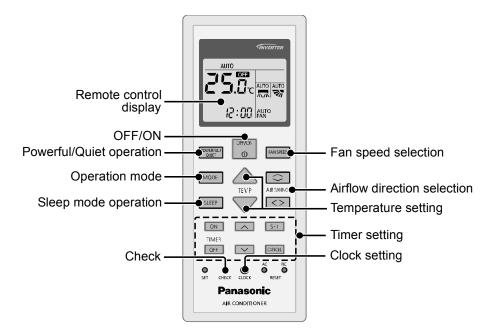

## 6. Dimensions


## 6.1 Indoor Unit & Remote Control

## 6.1.1 CS-FZ25UKE CS-FZ35UKE

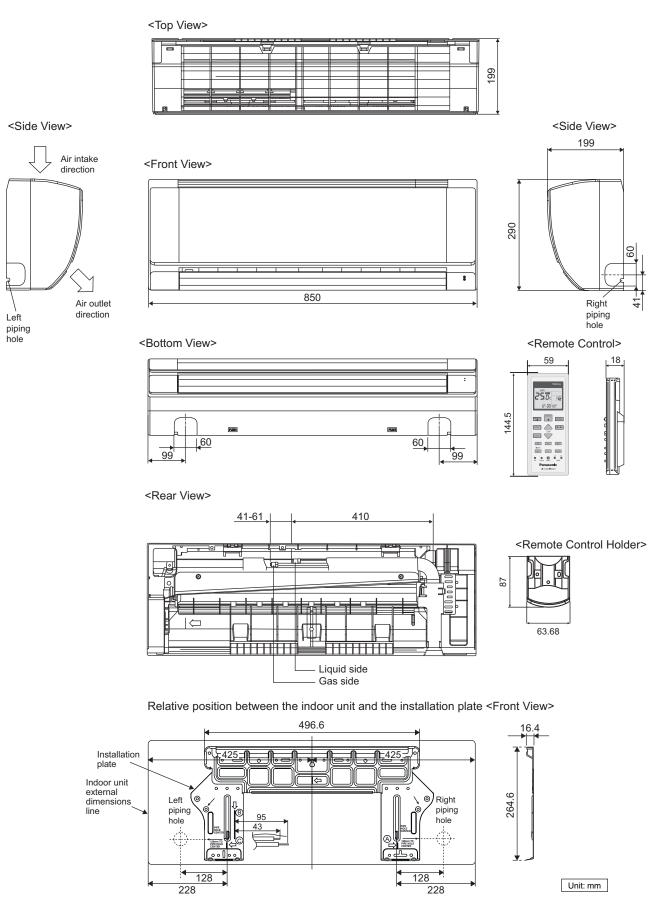



## 6.1.2 CS-FZ50UKE


<Top View>



<Side View>

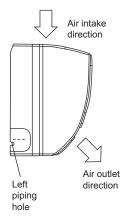

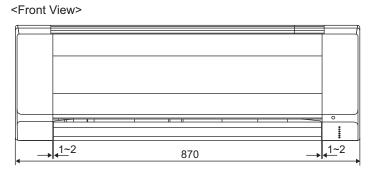

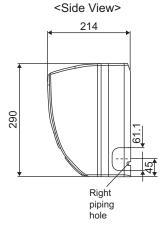


<Bottom View>



<Remote Control transmitter>




<Back View>

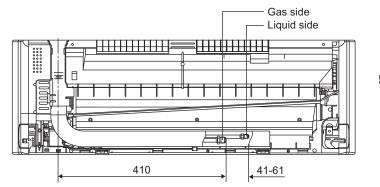

<Remote Control Holder>




Relative position between the indoor unit and the installation plate <Front View>

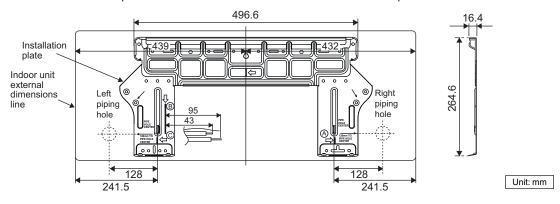



## 6.1.3 CS-FZ60UKE


<Top View>




<Side View>

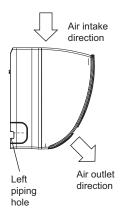

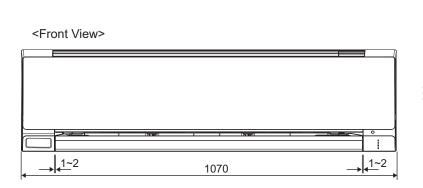


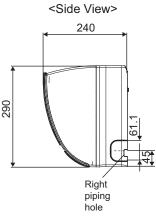


<Bottom View>

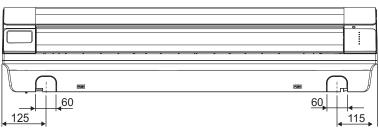




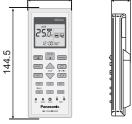

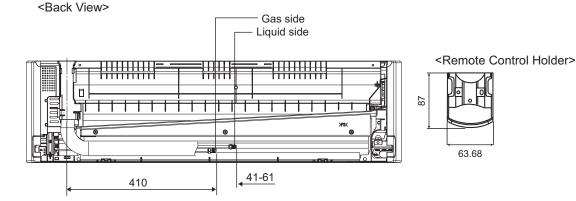


Relative position between the indoor unit and the installation plate <Front View>

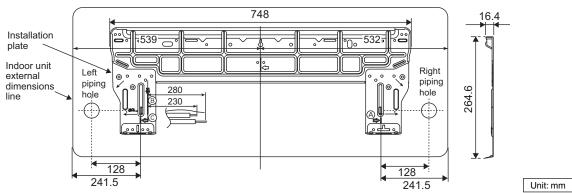


## 6.2 Outdoor Unit

## 6.2.1 CU-FZ25UKE CU-FZ35UKE

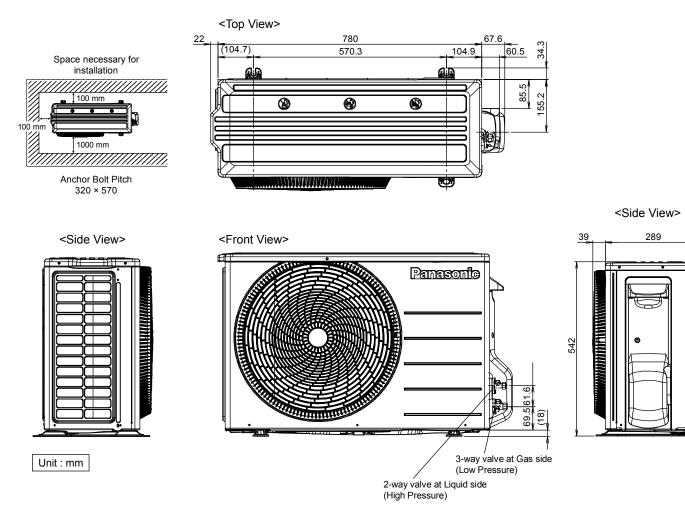


#### 6.2.2 CU-FZ50UKE

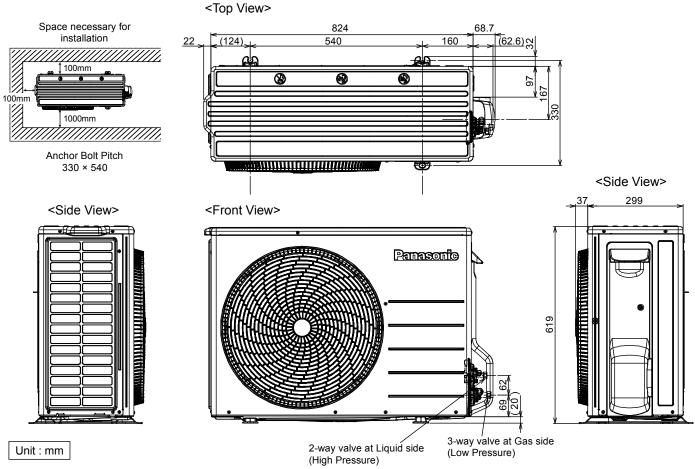


Unit : mm

## 6.2.3 CU-FZ60UKE

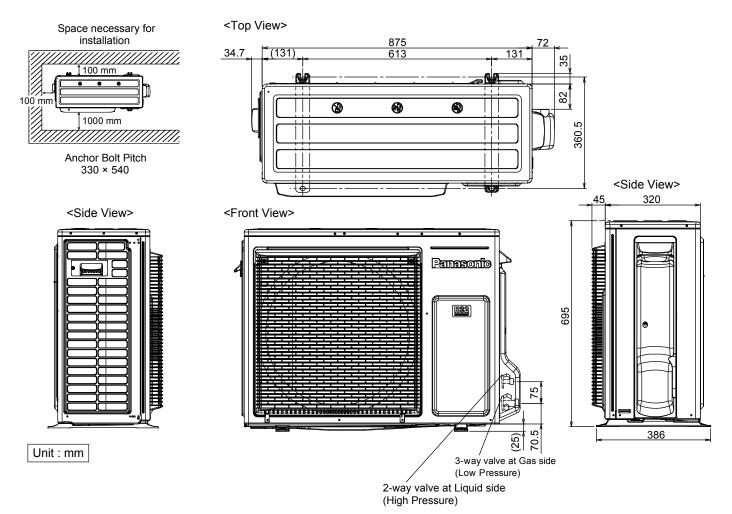

## 7. Refrigeration Cycle Diagram

## 7.1 CS-FZ25UKE CU-FZ25UKE CS-FZ35UKE CU-FZ35UKE

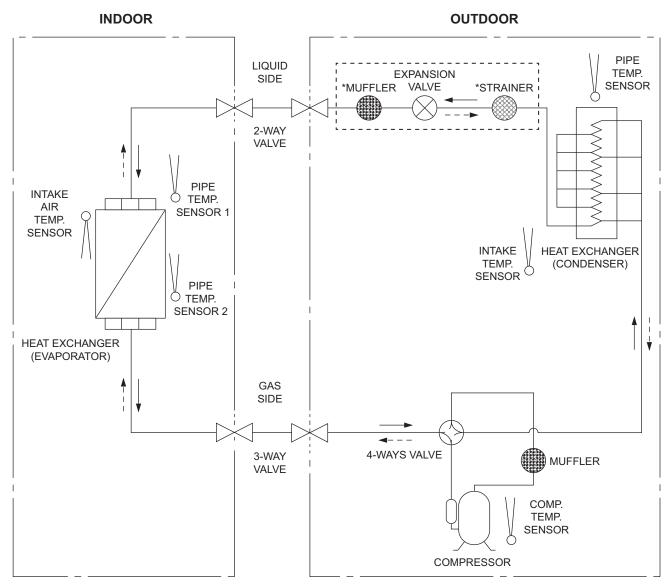


COOLING

---► HEATING

\* Not a standard replacement part.

## 7.2 CS-FZ50UKE CU-FZ50UKE CS-FZ60UKE CU-FZ60UKE

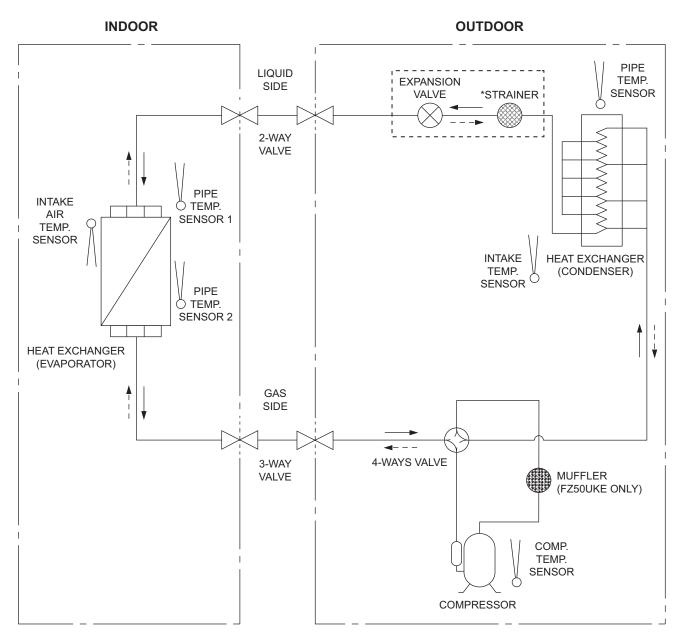


COOLING


---► HEATING

\* Not a standard replacement part.

- 8. Block Diagram
- 8.1 CS-FZ25UKE CU-FZ25UKE CS-FZ35UKE CU-FZ35UKE

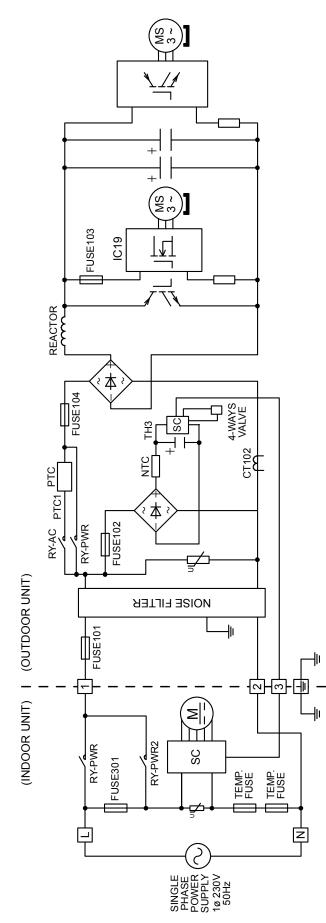


8.2 CS-FZ50UKE CU-FZ50UKE CS-FZ60UKE CU-FZ60UKE

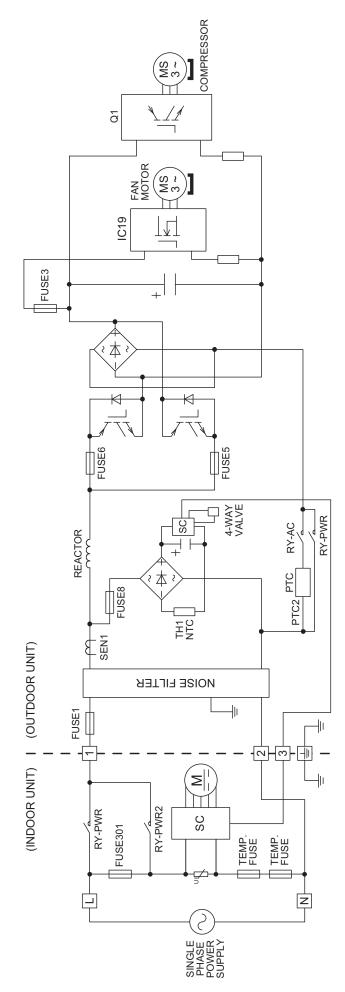


## 9. Wiring Connection Diagram

## 9.1 Indoor Unit


## 9.1.1 CS-FZ25UKE CS-FZ35UKE

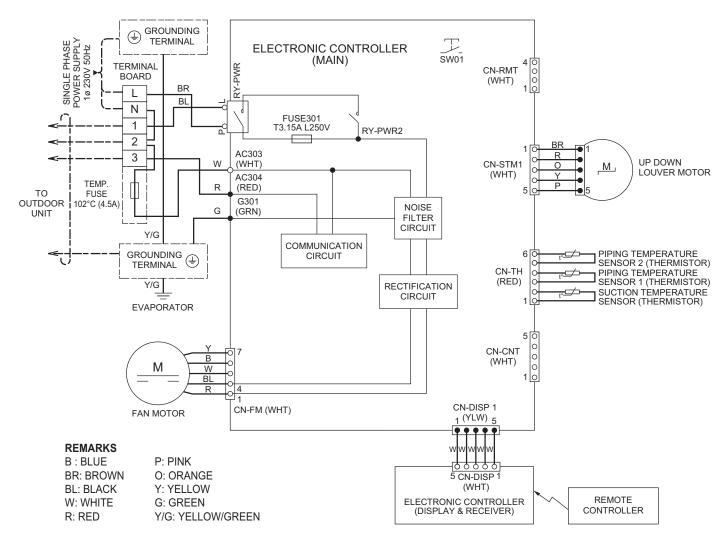

## 9.1.2 CS-FZ50UKE

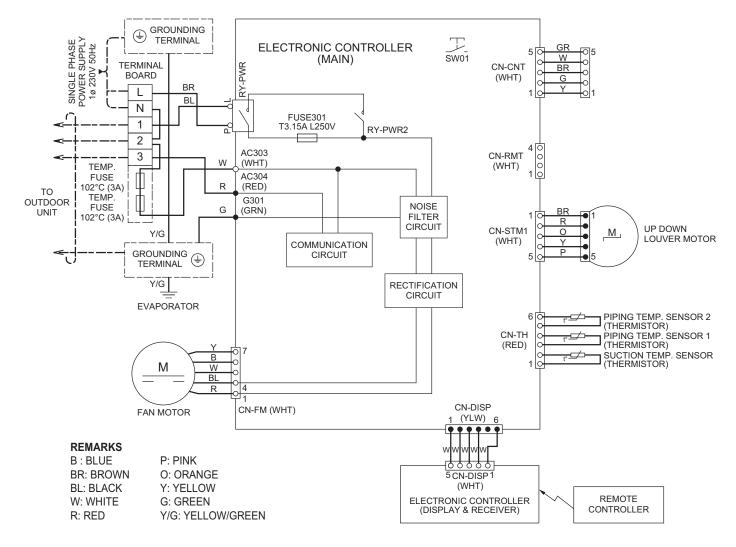


## 9.1.3 CS-FZ60UKE

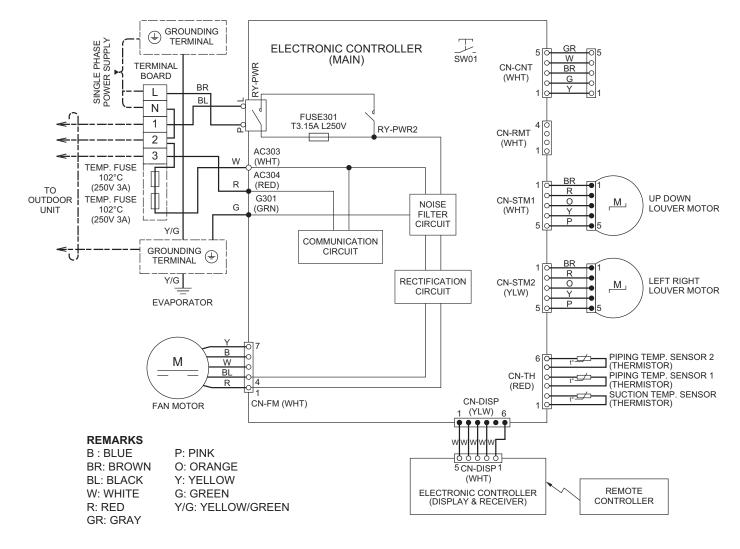

#### 9.2 **Outdoor Unit**

#### 9.2.1 CU-FZ25UKE CU-FZ35UKE

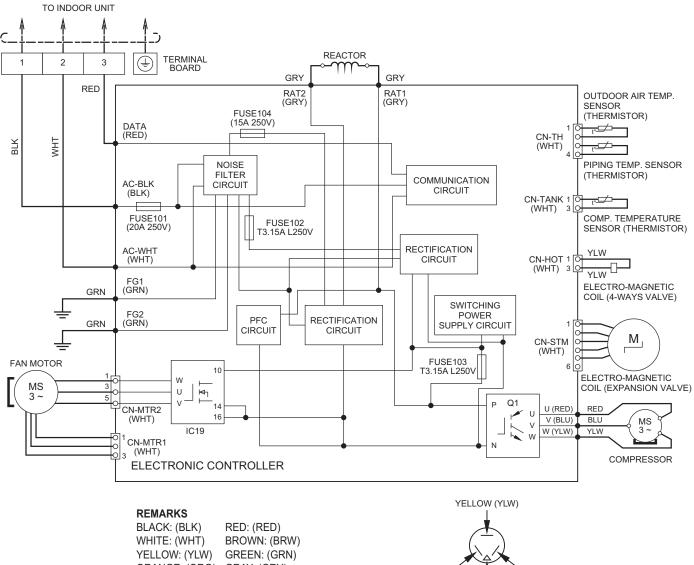

ORANGE: (ORG) GRAY: (GRY) BLUE: (BLU) YELLOW/GREEN: (YLW/GRN)




#### Resistance of Compressor Windings

•	0
MODEL	CU-FZ25/35UKE
CONNECTION	9SS072XAD21
U-V	3.034 Ω
U-W	3.021 Ω
V-W	3.009 Ω

Note: Resistance at 20°C of ambient temperature.


## 9.2.2 CU-FZ50UKE CU-FZ60UKE

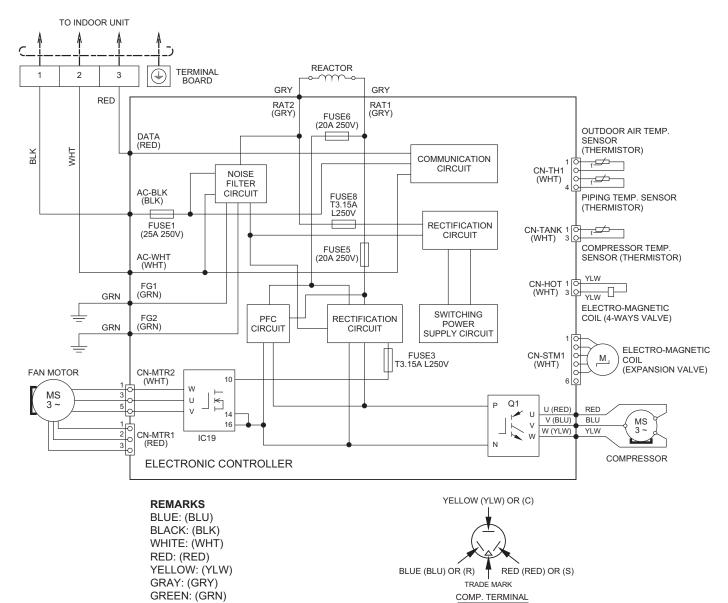


## **10. Electronic Circuit Diagram**

## 10.1 Indoor Unit


## 10.1.1 CS-FZ25UKE CS-FZ35UKE

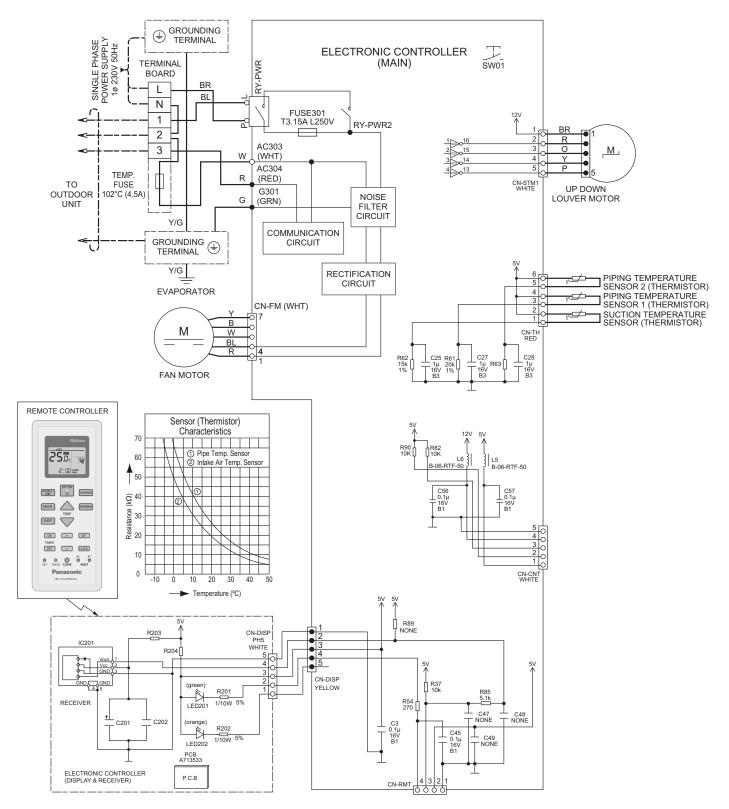

## 10.1.2 CS-FZ50UKE

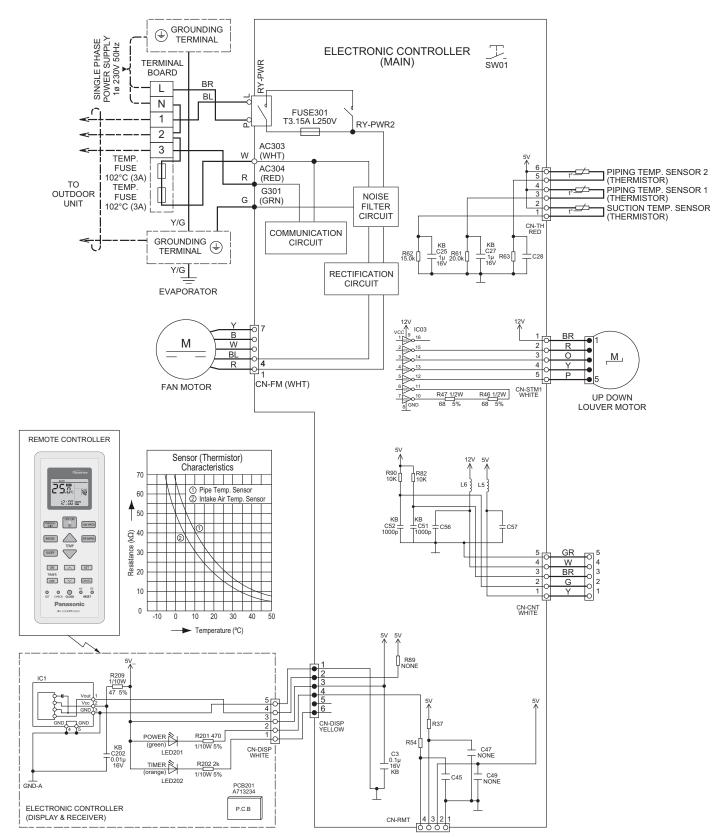

## 10.1.3 CS-FZ60UKE

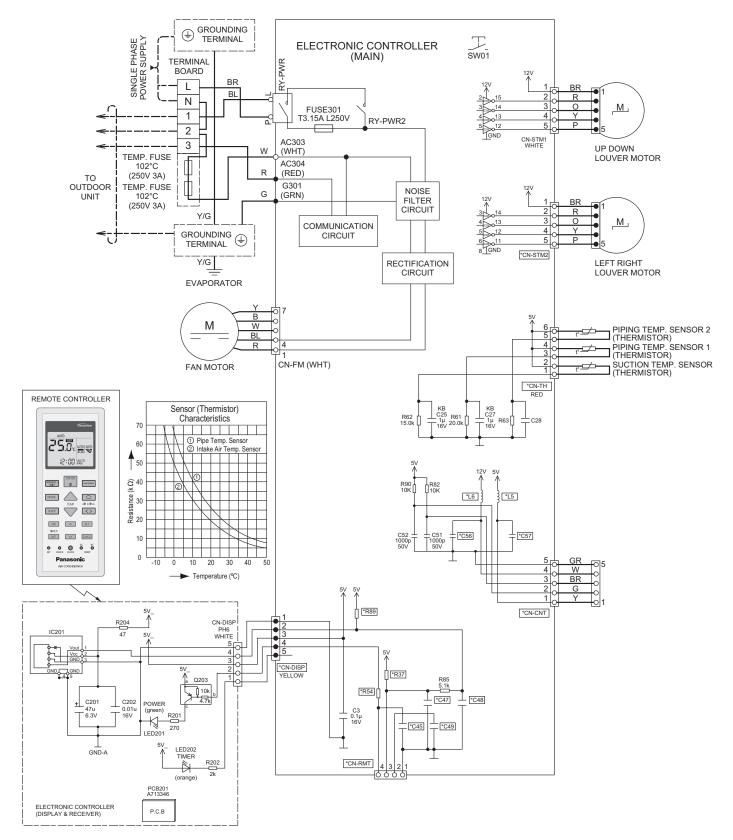


## 10.2 Outdoor Unit

## 10.2.1 CU-FZ25UKE CU-FZ35UKE

10

0 -10 0 10 20 30 40 50

Temperature (°C) -

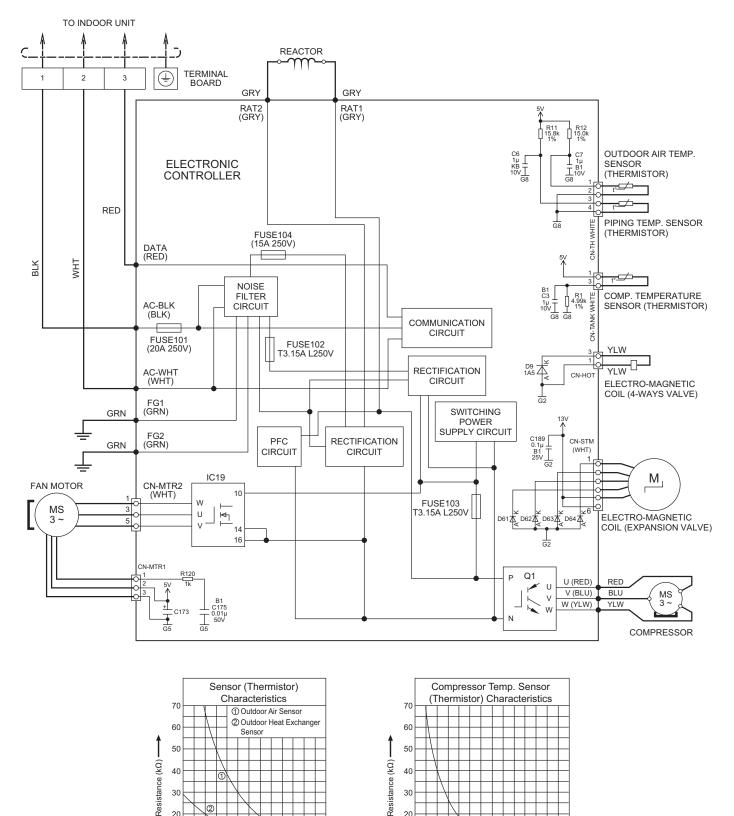

10


20 40 60 80

100 120

Temperature (°C) -

140


## 10.2.2 CU-FZ50UKE CU-FZ60UKE

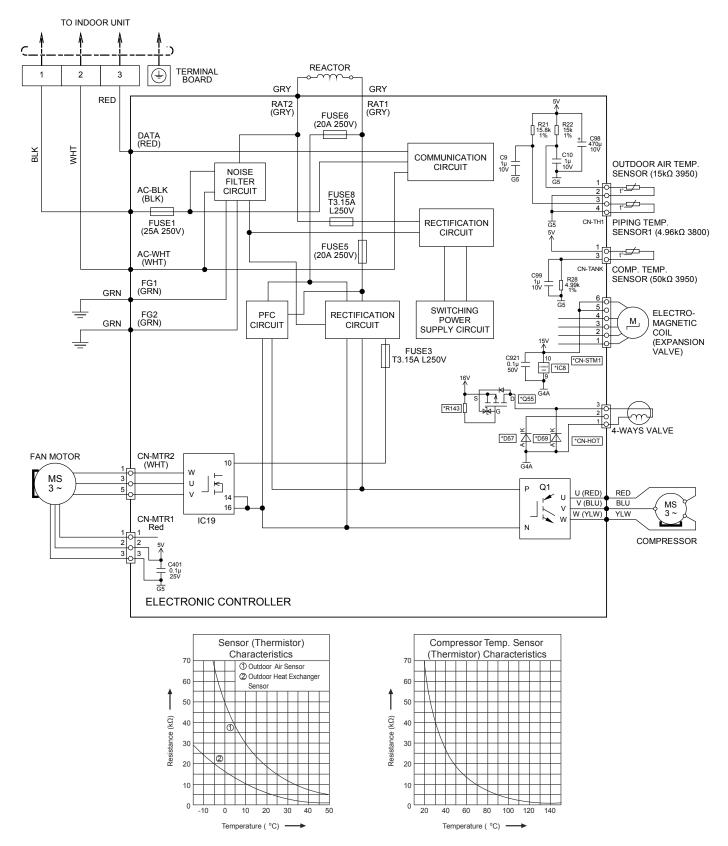

# **11. Printed Circuit Board**


- 11.1 Indoor Unit
- 11.1.1 Main Printed Circuit Board

# 11.1.1.1 CS-FZ25UKE CS-FZ35UKE

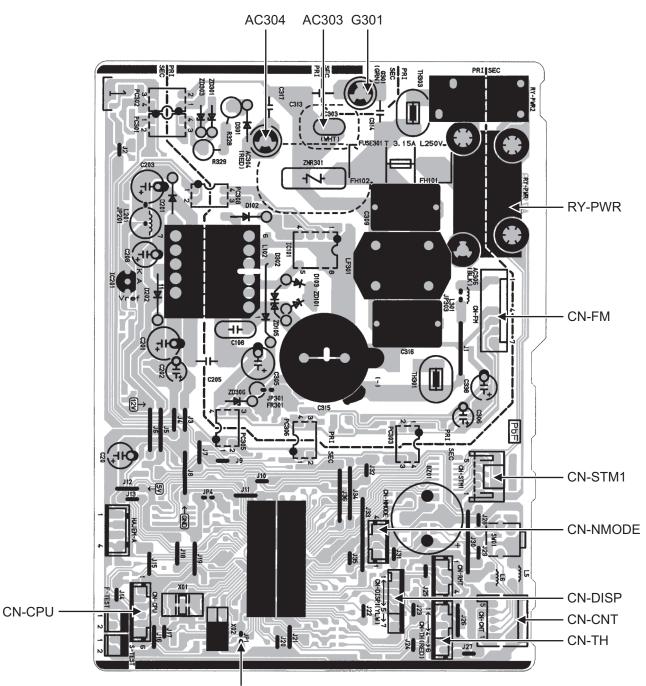


JP1 (Random Auto Restart enable/disable)

# 11.1.1.2 CS-FZ50UKE CS-FZ60UKE

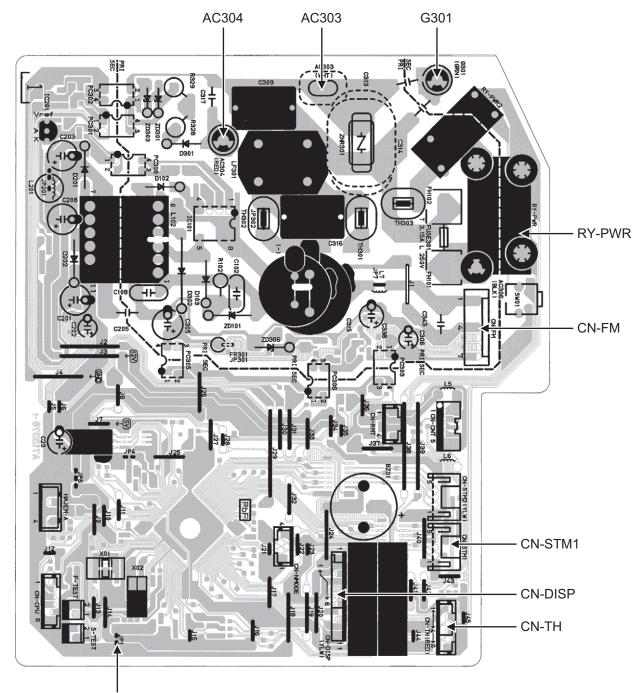


JP1 (Random Auto Restart enable/disable)

- 11.1.2 Indicator & Receiver Printed Circuit Board
- 11.1.2.1 CS-FZ25UKE CS-FZ35UKE

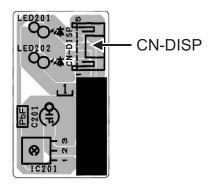


11.1.2.2 CS-FZ50UKE CS-FZ60UKE

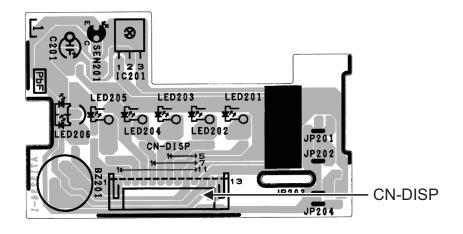


# 11.2 Outdoor Unit

11.2.1 Main Printed Circuit Board

## 11.2.1.1 CU-FZ25UKE CU-FZ35UKE

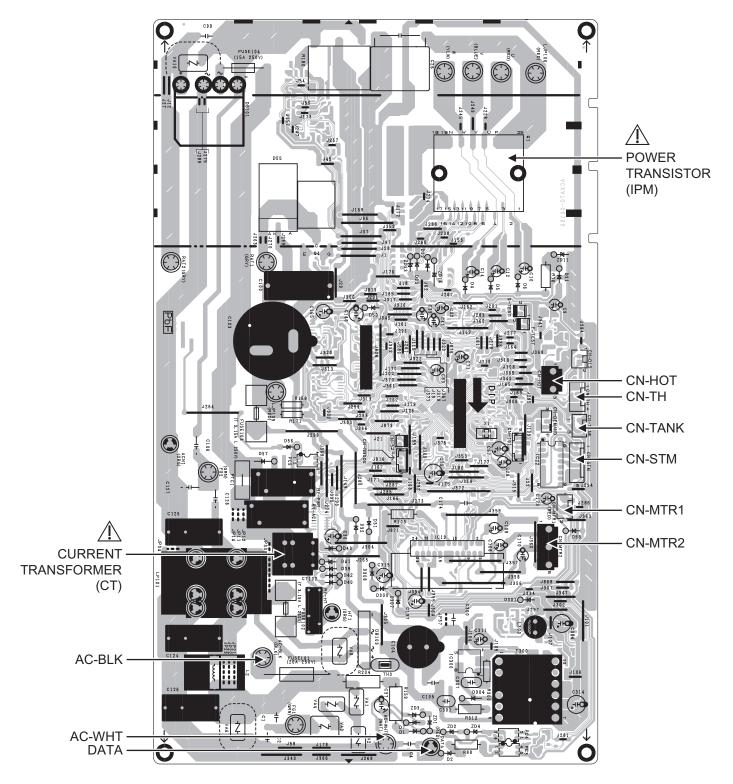

## 11.2.1.2 CU-FZ50UKE CU-FZ60UKE

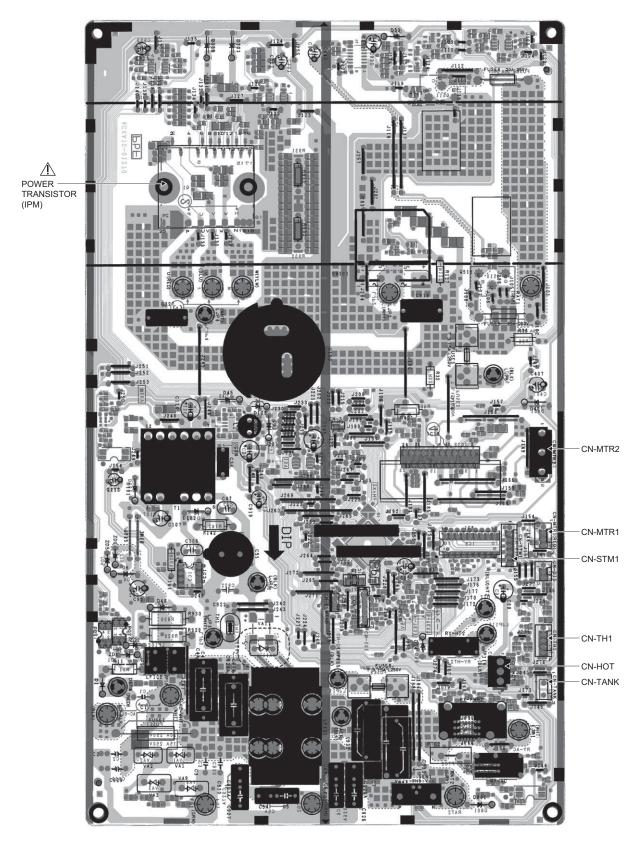

# **12.Installation Instruction**

# 12.1 Select the Best Location

#### 12.1.1 Indoor Unit

- Do not install the unit in excessive oil fume area such as kitchen, workshop and etc.
- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.
- Installation height for the indoor unit is recommended at 2.5 m.

## 12.1.2 Outdoor Unit

- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the table.

Capacity	Piping size		Std	Max	Min.	Max.	Addi- tional	Piping Length	Ind A <sub>min</sub>	oor (m²)							
Model	W (HP)	Gas	Liquid	Length Eleva- F	Piping Length (m)	Piping Length (m)	Dofri	for add.	for wall	2.5 m for wall mounted							
FZ25***	1.0HP	9.52			15	3	15	10	7.5	0.41	0.21						
FZ35***	1.5HP	mm (3/8")					(3/8")	(3/8") 6.35	0.00		15	3	15	10	7.5	0.53	0.27
FZ50***	2.0HP	12.7	mm (1/4")	5	15	3	15	15	7.5	1.50	0.78						
FZ60***	2.25HP	mm (1/2")			15	3	30	15	7.5	2.11	1.09						

#### Table A


#### Example: For FZ25\*\*\*

If the unit is installed at 10 m distance, the quantity of additional refrigerant should be 25 g .... (10-7.5) m × 10 g/m = 25 g.

 $A_{\min} = (M / (2.5 \times (LFL)^{(5/4)} \times h_0))^2$ 

- $A_{\min}$  = Required minimum room area, in m<sup>2</sup>
- *M* = Refrigerant charge amount in appliance, in kg
- *LFL* = Lower flammable limit (0.306 kg/m<sup>3</sup>)
- $h_0$  = Installation height of the appliance:
  - : (1.8 m for wall mounted is standard
  - reference installed height)
  - : (2.5 m for wall mounted is recommended installed height given by manufacturer)



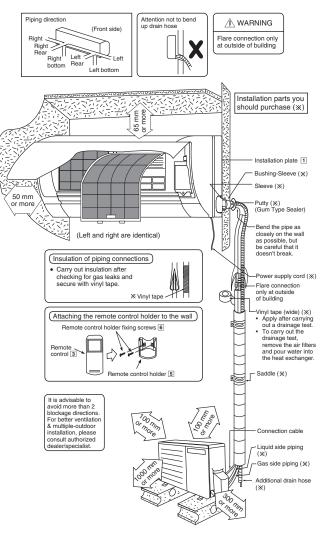


• This illustration is for explanation purposes only. The indoor unit will actually face a different way.


# 12.2 Indoor Unit

## 12.2.1 How to Fix Installation Plate

The mounting wall shall be strong and solid enough to prevent it from vibration.

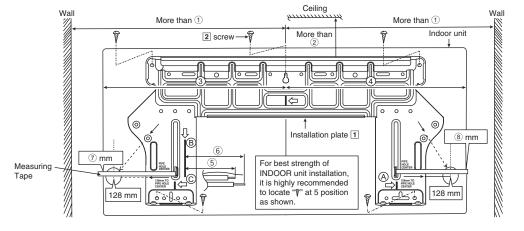

Model	Dimension							
woder	1	2	3	4	5	6	7	8
FZ25***, FZ35***	480 mm	90 mm	425 mm	425 mm	43 mm	95 mm	228 mm	228 mm
FZ50***	490 mm	85 mm	439 mm	432 mm	43 mm	95 mm	241.5 mm	241.5 mm

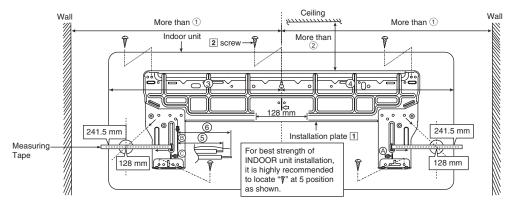

Model	Dimension						
Model	1	2	3	4	5	6	
FZ60***	590 mm	85 mm	539 mm	532 mm	230 mm	280 mm	

The center of installation plate should be at more than ① at right and left of the wall.

The distance from installation plate edge to ceiling should more than 2.

From installation plate center to unit's left side is (3).

From installation plate center to unit's right side is ④.

- B : For left side piping, piping connection for liquid should be about (5) from this line.
  - : For left side piping, piping connection for gas should be about (6) from this line.
  - 1 Mount the installation plate on the wall with 5 screws or more (at least 5 screws). (If mounting the unit on the concrete wall, consider using anchor bolts.)
    - Always mount the installation plate horizontally by aligning the marking-off line with the thread and using a level gauge.
  - 2 Drill the piping plate hole with ø70 mm hole-core drill.
    - Line according to the left and right side of the installation plate. The meeting point of the extended line is the center of the hole. Another method is by putting measuring tape at position as shown in the diagram above. The hole center is obtained by measuring the distance namely 128 mm for left and right hole respectively.
    - Drill the piping hole at either the right or the left and the hole should be slightly slanting to the outdoor side.


#### 12.2.2 To Drill a Hole in the Wall and Install a Sleeve of Piping

- 1 Insert the piping sleeve to the hole.
- 2 Fix the bushing to the sleeve.
- 3 Cut the sleeve until it extrudes about 15 mm from the wall.


# 

• When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable.

4 Finish by sealing the sleeve with putty or caulking compound at the final stage.

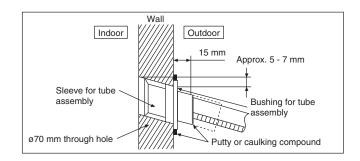

#### 12.2.3 **Indoor Unit Installation**

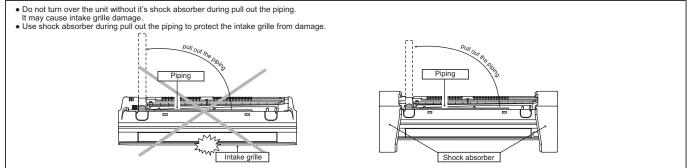

#### 12.2.3.1 For the Right Rear Piping


Step-1	Pull out the Indoor piping
Step-2	Install the Indoor Unit
-	
Step-3	Secure the Indoor Unit
-	
Step-4	Insert the power supply cord and connection cable
	<ul> <li>Insert the cables from bottom of the unit through the control board hole until terminal board area.</li> </ul>


#### 12.2.3.2 For the Right and Right **Bottom Piping**

Step-1	Pull out the Indoor piping
-	
Step-2	Install the Indoor Unit
Step-3	Insert the power supply cord and connection cable
	Insert the cables from bottom of the unit through the control board hole until terminal board area.
Step-4	Secure the Indoor Unit


#### 12.2.3.3 For the Embedded Piping

Step-1	Replace the drain hose
-	
Step-2	Bend the embedded piping
-	Use a spring bender or equivalent to bend the piping so that the piping is not crushed.
Step-3	Pull the connection cable into Indoor Unit
₽	<ul> <li>The power supply cord and indoor unit and outdoor unit connection cable can be connected without removing the front grille.</li> </ul>
Step-4	Cut and flare the embedded piping
₽	<ul> <li>When determining the dimensions of the piping, slide the unit all the way to the left on the installation plate.</li> <li>Refer to the section "Cutting and flaring the piping".</li> </ul>
Step-5	Install the Indoor Unit
Step-6	Connect the piping
	<ul> <li>Please refer to "Connecting the piping" column in outdoor unit section. (Below steps are done after connecting the outdoor piping and gas-leakage confirmation.)</li> </ul>
Step-7	Insulate and finish the piping
	Please refer to "Insulation of piping connection" column as mentioned in indoor/outdoor unit installation.
Step-8	Secure the Indoor Unit

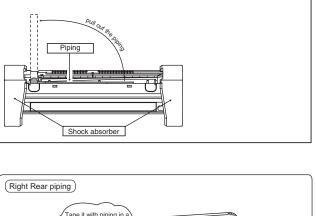

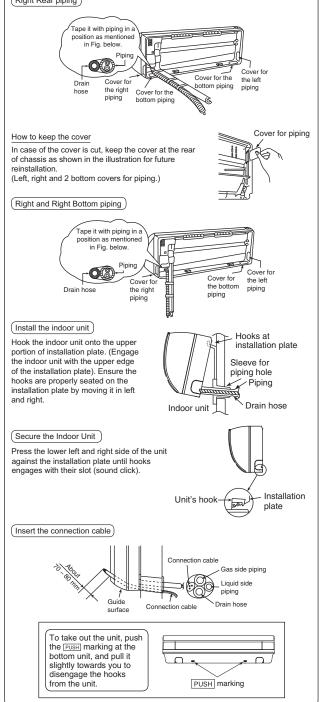

#### (This can be used for left rear piping and bottom piping also.)

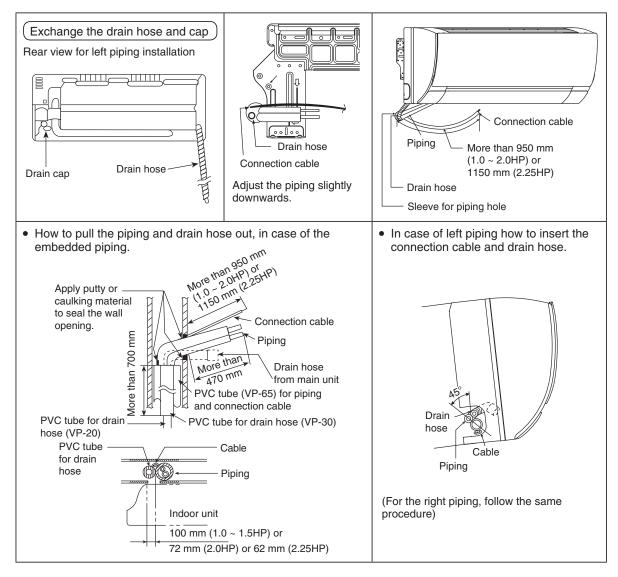


## 12.2.4 Connect the Cable to the Indoor Unit

The power supply cord, indoor and outdoor unit connection cable can be connected without removing the front grille. 1 Install the indoor unit on the installing holder that mounted on the wall.

- 2 Open the front panel and grille door by loosening the screw.
- 3 Cable connection to the power supply through Isolating Devices (Disconnecting means).
  - Connect the approved polychloroprene sheathed power supply cord 3 × 1.5 mm<sup>2</sup> (1.0 ~ 1.5HP) or 3 × 2.5 mm<sup>2</sup> (2.0 ~ 2.25HP), type designation 60245 IEC 57 or heavier cord to the terminal board, and connect the other end of the cable to Isolating Devices (Disconnecting means).
  - Do not use joint power supply cord. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short.
  - In unavoidable case, joining of power supply cord between isolating devices and terminal board of air conditioner shall be done by using approved socket and plug rated 15/16A (1.0 ~ 1.5HP) or 16A (2.0 ~ 2.25HP). Wiring work to both socket and plug must follow to national wiring standard.
- 4 Bind all the power supply cord lead wire with tape and route the power supply cord via the left escapement.
- 5 **Connection cable** between indoor unit and outdoor unit shall be approved polychloroprene sheathed  $4 \times 1.5 \text{ mm}^2$  (1.0 ~ 1.5HP) or  $4 \times 2.5 \text{ mm}^2$  (2.0 ~ 2.25HP) flexible cord, type designation 60245 IEC 57 or
- 4 × 1.5 mm (1.0 ~ 1.5HP) or 4 × 2.5 mm (2.0 ~ 2.25HP) flexible cord, type designation 60245 IEC 57 or heavier cord. Allowable connection cable length of each indoor unit shall be 30 m or less
- 6 Bind all the indoor and outdoor connection cable with tape and route the connection cable via the right escapement.
- 7 Remove the tapes and connect the power supply cord and connection cable between indoor unit and outdoor unit according to the diagram below.

Terminals on the outdoor unit			1	2	3	
Colour of wires (connection cable)						
Terminals on the indoor unit	L	Ν	1	2	3	
(Power supply cord)						
Terminals on the isolating devices (Disconnecting means)	(L)	(N)	]			

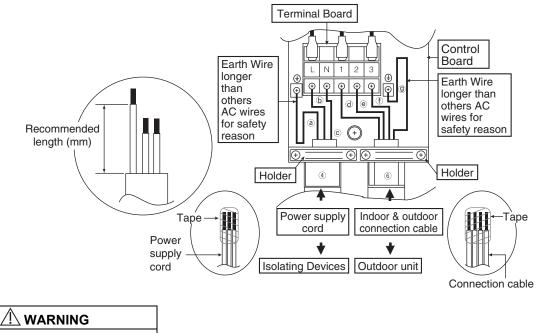


This equipment must be properly earthed.

Note:

- Isolating Devices (Disconnecting means) should have minimum 3.0 mm contact gap.
- Ensure the colour of wires of outdoor unit and the terminal Nos. are the same to the indoor's respectively.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires as shown in the figure for the electrical safety in case of the slipping out of the cord from the anchorage.


12.2.4.1 Wire Stripping and Connecting Requirement

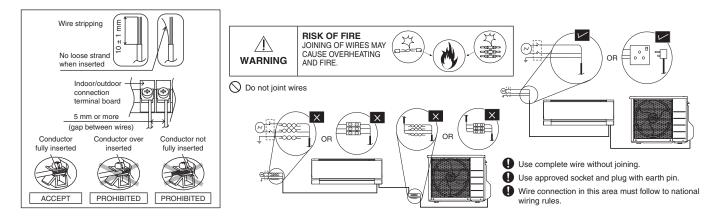

# 12.3 Outdoor Unit

#### 12.3.1 Install the Outdoor Unit

- After selecting the best location, start installation to Indoor/Outdoor Unit Installation Diagram.
  - Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut (ø10 mm).
     When installing at roof, please consider strong wind and earthquake.
  - 2 When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt, screws or nails.

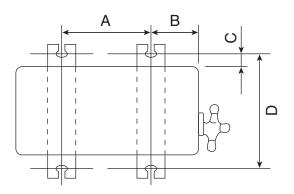


## 12.3.2 Connect the Piping

#### 12.3.2.1 Connecting the Piping to Indoor

For connection joint location at outside building Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping

- Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.

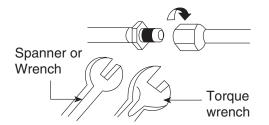

#### 12.3.2.2 Connecting the Piping to Outdoor

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge.


Make flare after inserting the flare nut (locate at valve) onto the copper pipe.

Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table.

Model	А	В	С	D
FZ25***, FZ35***	570 mm	105 mm	18.5 mm	320 mm
FZ50***	540 mm	160 mm	18.5 mm	330 mm
FZ60***	613 mm	131 mm	24 mm	360.5 mm

For connection joint location at inside building


- Decide the length.
- Cut and remove the tube connectors at indoor copper pipings (both gas and liquid piping) by using pipe cutter. Remove burrs from cut edge.
- Use pipe expander to expand the end of long piping.
- Align the center of piping and braze the piping joints.




Do not overtighten, overtightening may cause gas leakage.				
Piping size	Torque			
6.35 mm (1/4")	[18 N•m (1.8 kgf•m)]			
9.52 mm (3/8")	[42 N•m (4.3 kgf•m)]			
12.7 mm (1/2")	[55 N•m (5.6 kgf•m)]			
15.88 mm (5/8")	[65 N•m (6.6 kgf•m)]			
19.05 mm (3/4")	[100 N•m (10.2 kgf•m)]			

#### 12.3.3 Evacuation of the Equipment

WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOR UNIT AND PIPES in the following procedure.



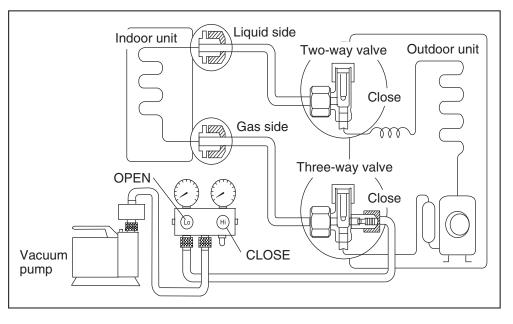


- 1 Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
  - Be sure to connect the end of the charging hose with the push pin to the service port.
- 2 Connect the center hose of the charging set to a vacuum pump.
- 3 Turn on the power switch of the vacuum pump and make sure that the needle in the gauge moves from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa). Then evacuate the air approximately ten minutes.
- 4 Close the Low side value of the charging set and turn off the vacuum pump. Make sure that the needle in the gauge does not move after approximately five minutes.

Note : BE SURE TO TAKE THIS PROCEDURE IN ORDER TO AVOID REFRIGERANT GAS LEAKAGE.

- 5 Disconnect the charging hose from the vacuum pump and from the service port of the 3-way valve.
- 6 Tighten the service port caps of the 3-way valve at a torque of 18 N•m with a torque wrench.
- 7 Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves to "OPEN" using a hexagonal wrench (4 mm).
- 8 Mount valve caps onto the 2-way valve and the 3-way valve.
  - Be sure to check for gas leakage.
  - If gauge needle does not move from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa), in step ③ above take the following measure:
    - If the leak stops when the piping connections are tightened further, continue working from step ③.
  - If the leak does not stop when the connections are retightened, repair location of leak.
  - Do not release refrigerant during piping work for installation and reinstallation.
  - Take care of the liquid refrigerant, it may cause frostbite.

## 12.3.4 Connect the Cable to the Outdoor Unit

- 1 Remove the control board cover from the unit by loosening the screw.
- 2 Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 × 1.5 mm<sup>2</sup> (1.0 ~ 1.5HP) or 4 × 2.5 mm<sup>2</sup> (2.0 ~ 2.25HP) flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short. Allowable connection cable length of each indoor unit shall be 30 m or less.



- 3 Secure the cable onto the control board with the holder.
- 4 Attach the control board cover back to the original position with screw.
- 5 For wire stripping and connection requirement, refer to instruction 12.2.4 of indoor unit.

## 12.3.5 Piping Insulation

- 1 Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
- 2 If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 6 mm or above.

#### 12.3.6 Cutting and Flaring the Piping

- 1 Please cut using pipe cutter and then remove the burrs.
- 2 Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
- 3 Please make flare after inserting the flare nut onto the copper pipes.




1. To cut




Handle Bar Core Clamp handle Red arrow mark 3. To flare

Bar 0 – 0.5 mm



When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

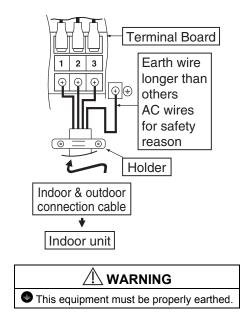


• Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires for safety reason.

#### 12.3.7 How to Take Out Front Grille

Please follow the steps below to take out front grille if necessary such as when servicing.


- Set the vertical airflow direction louvers to the 1 horizontal position.
- 2 Slide down the 2 caps (1.0 ~ 2.0HP) or 3 caps (2.25HP) on the front grille as shown in the illustration at right, and then remove the 2 (1.0 ~ 2.0HP) or 4 (2.25HP) mounting screws.
- 3 Pull the lower section of the front arille towards you to remove the front grille.

When reinstalling the front grille, first set the vertical airflow direction louver to the horizontal position and then carry out above step 2 - 3 in the reverse order.

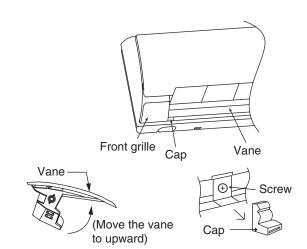

#### 12.3.8 **Auto Switch Operation**

- The below operations will be performed by pressing the "AUTO" switch. AUTO OPERATION MODE 1
  - The Auto operation will be activated immediately once the Auto Switch is pressed and release before 5 sec...
  - TEST RUN OPERATION (FOR PUMP DOWN/SERVICING 2 PURPOSE) The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec.. A "pep" sound will occur at the fifth sec., in order to identify the starting of Test Run operation.

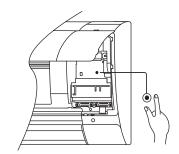


- HEATING TRIAL OPERATION 3 Press the "AUTO" switch continuously for more than 8 sec. to below 11 sec. and release when a "pep pep" sound is occured at eight sec. (However, a "pep" sound is occurred at fifth sec..) Then press Remote controller "A/C Reset" button once. Remote controller signal will activate operation to force heating mode.
- REMOTE CONTROLLER RECEIVING SOUND ON/OFF The ON/OFF of Remote controller receiving sound can be change over by the following steps: a) Press "AUTO" switch continuously for more than 16 sec. to below 21 sec..

  - A "pep", "pep", "pep", "pep" sound will occur at the sixteenth sec.. b) Press the "A/C Reset" button once. Remote controller signal will activate the Remote controller sound setting mode.
  - c) Press the "AUTO" switch once to select Remote controller receiving sound ON/OFF. A "peep" sound indicates receiving sound ON, and a "pep" sound indicates receiving sound OFF.
- HEATING ONLY OPERATION 5 Press the "AUTO" switch continuously for more than 8 sec, to below 11 sec, and release when the "pep pep" sound is occurred at eight sec. (however, a "pep" sound is occurred at fifth sec.). Then press Remote controller "Check" button once. Remote controller signal will activate heating only operation mode.

#### 12.3.9 **Disposal of Outdoor Unit Drain Water**


- If a drain elbow is used, the unit should be placed on a stand which is taller than 3 cm.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

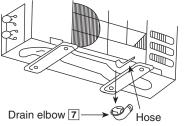

Install the hose at an angle so that the water smoothly flows out.


#### 12.3.10 Check the Drainage

- Open front panel and remove air filters. (Drainage checking can be carried out without removing the front grille.)
- Pour a glass of water into the drain tray-styrofoam.
- Ensure that water flows out from drain hose of the indoor unit.

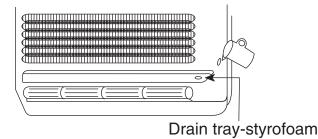


#### 12.3.11 Evaluation of the Performance

- Operate the unit at cooling/heating operation mode for fifteen minutes or more.
- Measure the temperature of the intake and discharge air.
- Ensure the difference between the intake temperature and the discharge is more than 8°C during Cooling operation or more than 14°C during Heating operation.

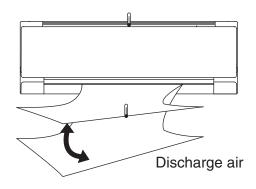

## 12.3.12 Installation of Air Purifying Filter

- 1. Open the front panel.
- 2. Remove the air filters.
- 3. Put the Air purifying filter into place as shown in illustration at right.

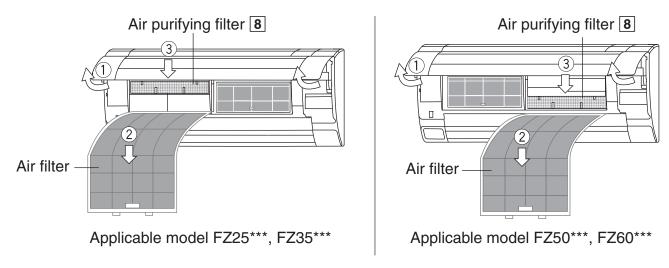

# 13. Installation and Servicing Air Conditioner using R32

# 13.1 About R32 Refrigerant

For air conditioning refrigerants such as R410A, the refrigerants were collected back in order to prevent their air dissipation, to curbe the global warming impact, in case they were released into the atmosphere. In the "4th Environmental Basic Plan", 80% reduction of greenhouse gas emissions by 2050 is required, and due to this requirement, further reduction in the emission of high greenhouse effect gas, such as CFCs, is required. Therefore, the conversion of air conditioning refrigerant into the ones who has smaller greenhouse effect, even if it is dissipated into the atmosphere, became our responsibility.

Nevertheless, in case of air conditioning refrigerant, it would be the best if there is a refrigerant which has smaller impact on global warming, but ensures good energy efficiency and performance, and is safe; however, there is no such refrigerant which satisfies all these conditions. As a result, we have been considering the practical usage, within the safety frame-work, of R32 refrigerant which has short lifetime in the atmosphere, and has smaller effect of global warming, but is slightly flammable.

In 2004, due to the revision of air conditioner safety standards by the International Electro-safety Commission (IEC), the safety standards of air conditioners using slightly flammable refrigerant was issued. In 2010, the regulations of American Society of Heating, Refrigerating and Air-Conditioning Engineers in the United States (ANSI/ASHRAE34) was issued adopting the grades for refrigerants which are difficult to inflame due to their slow burning rates, and as a result have smaller damages in cases of fire. The burning rate of R32 is lower by 10cm / per second, and safety standardization for various usage is now being processed.

# 13.2 Characteristics of R32 Refrigerant

#### 1. Chemical Characteristics

R32 is one of the refrigerants used in R410A, has almost no toxicity, and chemically stable compound formed by hydrogen, carbon and fluorine.

R32 has short lifetime of 4 to 9 years in case of being released into the atmosphere; therefore, it has smaller greenhouse gas effect but has slight inflammability because of the large proportion of hydrogen.

	R32	R410A	R22
Chemical Formula	CH2F2	CH2F2 / CHF2CF3	CHCLF2
Composition	Single Composition	R32 / R125A	Cingle Composition
(mixture ratio wt.%)	Single Composition	(50 / 50 wt.%)	Single Composition
Boiling Point (°C)	-51.7	-51.5	-40.8
Pressure (physical) *1	3.14	3.07	1.94
Capacity (physical) *2	160	141	100
COP (physical) *3	95	91	100
Ozone Depletion Potential (ODP)	0	0	0.055
Global Warming Potential (GWP) *4	675	2090	1810
Inflammability *5	Slightly Inflammable (A2L)	Non-inflammable (A1)	Non-inflammable (A1)
Toxicity	None	None	None

Chemical Characteristic Table of R32, R410A and R22.

\*1 : Physical property of temperature condition 50°C

- \*2 : Relative value of temperature condition 0/50°C, providing R22=100
- \*3 : Te/Tc/SC/SH=5/50/3/0°C
- \*4 : GWP=Global Warming Potential, each figure is based on "4<sup>th</sup> IPCC4 Report"
- \*5 : Based on ANSI / ASHRAE std. 34-2010

#### 2. Characteristic of Pressure

As shown in Table 2, R32 does not have much difference in vapor pressure at the same refrigerant temperature comparing to R410A, but comparing to R22, it is higher at 1.6 times more. Thus, the same as in case of R410A, it is necessary to do installation and service using high-pressure tools and components.

Table 2. Saturated vapor pressure comparison table

(Unit: MPa)

Temperature	Refrigerant				
remperature	R32	R410A	R22		
-20	0.30	0.30	0.14		
0	0.71	0.70	0.40		
20	1.37	1.35	0.81		
40	2.38	2.32	1.43		
60	3.84	3.73	2.33		
65	4.29	4.17	2.60		

Reference : Thermal properties table of Japan Society of Refrigerating and Air Conditioning Engineers (60, 65°C) NIST REFPROP V8.0 (-20 ~ 40°C)

# 13.3 Refrigerant piping installation • Tools used in services

#### 13.3.1 Required Tools

R32 refrigerant air conditioners use the common parts as R410A air conditioners for two-way valves and three-way valves (diameters of service ports); thus, they maintain commonality in the maintenance of the compressive strength, the size of pipe flaring, and the size of flare nuts as R410A. Therefore, for refrigerant pipe installation and services, you can use tools for R410A.

However, mixing of refrigerants is not allowed, so that you have to separate the cylinders for the recovery of refrigerants.

Tools used for installation • relocation • replacement of air conditioning units

Works	R32	R410A	R22				
Flaring	Flare tools for R410A (clutch type)		Flare tools for R410A (clutch type)		Flare tools for R410A (clutch type)		Flare tools for R22 (clutch type)
Connection of pipes		Torque wrench (diameter 1/4 3/8)					
Connection of pipes	Torque wrench (di	Toque wrench (diameter 1/2 5/8)					
Manifold gauge charging hose	R32 & R410A Common	R32 & R410A Common (As at November 2013)					
Air purging	Vacuum pump + R	Vacuum pump					
Gas leakage test	Detection liquid or soup water, HFC detector						

\*1. Nut diameters of 1/2 5/8, the size of torque wrench common with R410A

For other installation, you can use general tools such as screw drivers (+, -), metal saws, electric drills, long-nose pliers, hole core drills (Ø70 or Ø65), linen tape, levels, temperature gauges, clamp meters, electric knives, nippers, pipe cutters, reamers or scrapers, spring benders, (diameters 1/4 3/8 1/2 5/8), monkey wrenches, fixing wrenches (17 or 12 mm), feeler gauges, hexagon wrenches (4 mm), testers, megohm testers, etc.

Tools used for services

Works	R32	R410A	R22				
Insertion of refrigerant	Digital scale for refrigerant charging, refrigerant cylinders, cylinder adopters and packing *a						
Recovery of refrigerant	Refrigerant recovery devices, refrigerant cylinders, manifold gauges, charging hoses *b						

\*a. Use cylinder for each refrigerant, cylinder adopter and packing.

\*b. Use refrigerant recovery cylinder separately for each refrigerant (no mixture of refrigerant allowed). <u>Please be</u> aware that there are some refrigerant collection devices which do not have self-certification.

#### 13.3.2 Tools for R32 (common with R410A)

#### 1. Flare gauges

Use flare gauges when you perform flaring with flare tools (crutch type). Flare gauges are used to set the pipe ends at  $0.5 \sim 1.5$  mm from clump bars of flare tools.

#### Flare gauges



#### 2. Flare tools (clutch type)

Flare tools have larger holes of clump bars in order to set the pipe end at  $0 \sim 0.5$  mm, and have stronger springs inside to ensure solid flaring torques. These flare tools can be used commonly for R22.


Flare tools (clutch type)



#### 3. Torque wrenches (diameters 1/2, 5/8)

In order to strengthen the compressive strength, the diameters of wrenches change depending on the flare nut sizes.

Torque wrenches

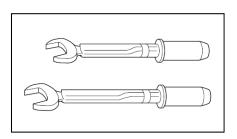

#### Differences in torque wrenches

	R32 (common R410A)	R22		
1/2	26 mm × 55 N•m	24 mm × 55 N•m		
(diameter × torque)	(550 kgf•m)	(550 kgf•m)		
5/8	29 mm × 65 N•m	27 mm × 65 N•m		
(diameter × torque)	(650 kgf•m)	(650 kgf•m)		

#### 4. Manifold gauges

R22 gauges cannot be used because of the high pressures.

Each port of manifold has different shapes in order to prevent inserting wrong refrigerant.

\*However, the port shape for R410A and R32 is the same; therefore, attention need to be paid not to insert wrong refrigerant.

Differences in high/low pressure gauges

	R32 (common R410A)	R22
High pressure gauges (red)	-0.1 ~ 5.3 MPa -76 cmHg ~ 53 kgf / cm^2	-76 cmHg ~ 35 kgf / cm $^2$
Low pressure gauges (blue)	-0.1 ~ 3.8 MPa -76 cmHg ~ 38 kgf / cm²	-76 cmHg ~ 17 kgf / cm $^2$


Difference in manifold port sizes

	R32 (common R410A)	R22		
Port sizes	1/2 UNF20	7/16 UNF20		

#### 5. Charging hoses

The pressure resistance of charge hoses is increased. At the same time, the material is changed to HFC resistant, and the size of each manifold adopter is changed, as the port size of manifold gauge itself. Further, some hoses are with anti-gas pressure backflow valves placed near the adopters. (hoses with the valves recommended)

#### Manifold gauges / Charging hoses

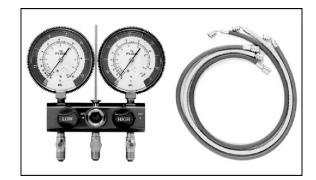

#### Differences in charging hoses

		R32 (common R410A)	R22	
Pressure Resistance	Normal operation pressure	5.1 MPa (52 kgf / cm²)	3.4 MPa (35 kgf / cm²)	
	Burst pressure	27.4 MPa (280 kgf / cm²)	17.2 MPa (175 kgf / cm²)	
Mat	erial	HNBR rubber Internal nylon coating	NBR rubber	

6. Vacuum pump and Vacuum pump adopter When using a vacuum pump, it is necessary to set a solenoid valve in order to prevent backflow of vacuum pump oil into the charge hoses, and use a vacuum pump with oil backflow prevention function, or use the vacuum pump with vacuum pump adopter. If vacuum pump oil (mineral oil-based) mixes with R410A (R32), it may cause damage to the machine.

Vacuum pump



Vacuum pump adopter



7. HFC refrigerant\_Electric gas leakage tester R32 refrigerant is often used for other mixed refrigerant (R410A, R404A, R407C etc.). Therefore, the usage of existing HFC detectors is possible, but in order to detect more accurately, we recommend to use detectors specially set and adjusted for R32 detection.

HFC refrigerant\_Electric gas leakage tester



8. Digital scale for refrigerant charging

R32 and R410A have high pressure level and their evaporation speed is high.

Thus, if you recover the refrigerant by cylinder charging method, the refrigerant evaporates within the weighing scale glass, which makes reading the scale difficult, rather than liquidating the refrigerant into the cylinder. (Charging cylinders for R22 have different pressure resistance, scale, connection port size; therefore, they are not usable) At the same time, the digital scale for refrigerant charging is strengthened by receiving the weight of the refrigerant cylinders with four pillars at the corners. The connection ports of charging hoses have two separate ports for R22 (7/16 UNF20) and R32/R410A (1/2 UNF20) therefore, they can be used for the insertion of the existing refrigerants.

Digital scale for refrigerant charging



#### 9. Refrigerant cylinders

Refrigerant cylinders for R410A are painted in pink, and the ones for R32 are painted in other colors that might subject to change according to the international standards. R32 is a single refrigerant, so that both liquid and gas insertion are possible. Additional charging is also possible.

(R410A is a mixed refrigerant, so only liquid insertion is possible)

Refrigerant cylinders



10. Connection ports of refrigerant cylinders and packing

Charging ports which fit to the charging hose connection port size (1/2 UNF20) is needed. At the same time, the packing has to be of HFC resistant materials.


Connection ports and packing



#### 11. Tools used for refrigerant piping installations and services

	Tools for R410A	Common with R32	Possibility of usage for R22							
1.	Pipe cutters, reamers or scrapers	0	0							
2.	Flare tools (clutch type)	0	0							
3.	Torque wrench (1/4, 3/8)	0	0							
4.	Torque wrench (1/2, 5/8)	0	×							
5.	Manifold gauges · charging hoses	0	×							
6.	Vacuum pumps, vacuum pump adopters	<ul> <li>Connection 5/16</li> </ul>	<ul> <li>Connection 1/4</li> </ul>							
7.	Electric gas leakage testers for HFC *1	0	$\bigtriangleup$							
8.	Digital scale for refrigerant charging	0	0							
9.	HCF recovery devices (connection port 5/16) *2	<ul> <li>Connection 5/16</li> </ul>	<ul> <li>Connection 1/4</li> </ul>							
10.	Refrigerant cylinders (pressure resistant: FC3)	Same specs ×	×							
11.	Refrigerant cylinders (pink)	Other (colors that might subject to change according to the international standards).	×							
12.	Refrigerant cylinder connection ports and packing	0	×							
13.	Allen wrench (4 mm) Electric knives	0	0							
*1	Those testers only for HCFC22 (R22), but not for HCF32 (R32)	and HCF410A (R410A) cannot be for	r common use.							
*2	Recovery devices which are self-certified for each HCF type ca	n be used.								
	<ul> <li>[Knowledge for the common usage of tools for R410A &amp; R32]</li> <li>R410A and R32 machines use different compressor oils.</li> <li>If unregulated compressor oil gets mixed into, it may cause damage to the machine function.</li> <li>Careful pump down will ensure the recovery of compressor oil, and it will minimize the remaining amount of the oil in the manifold gauge and charging hose.</li> <li>If you only perform the recovery of refrigerant and not be able to perform pump down, <u>you have to dispose the compressor oil in the charging hose</u>.</li> </ul>									
	<ul> <li>[Precaution of repairing refrigerant cycle]</li> <li>In the brazing, open 2-way and 3-way valves, and make sure the refrigerant is completely recovered back and not remaining the system.</li> <li>When repairing outside, make sure no refrigerant is in the air, ensure good air flow, and perform the brazing.</li> </ul>									
	<ul> <li>[Inserting wrong refrigerant]</li> <li>It may cause "not cooling" and "not heating" customer claims because each component (expansion valve, compressor, PCB) of the refrigeration cycle is specially adjusted for R32.</li> <li>At the same time, it is not subject to product warranty, if wrong refrigerant was inserted into the system.</li> </ul>									

# 13.4 New installation, Relocation, Repairing of Refrigerant Cycle System The Procedures

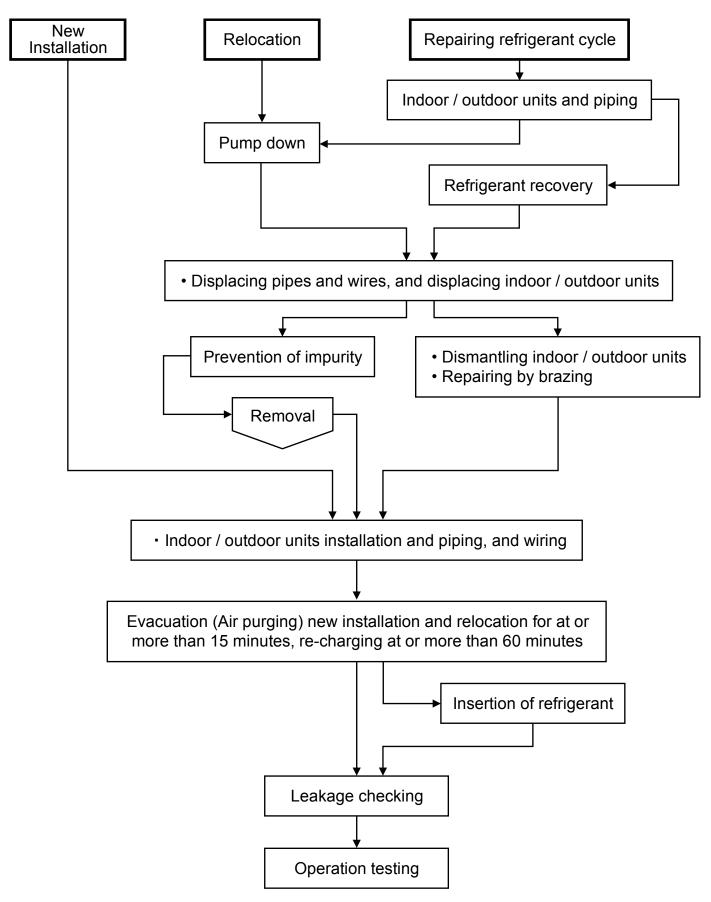

# 13.5 Piping installation of R32

# 13.5.1 Pipe materials used and flaring

Copper pipes are used for refrigerant piping. Pipes which comply with JIS Regulations need to be used. Room air conditioners which use R410A and R32 have higher pressure; thus, using pipes which comply with the Regulations is important.

The pipe thickness is regulated by revised JIS B 8607 "Flaring and brazing fittings for refrigerant" and the pipe thickness for R410A, R32 is shown in the table.

#### Pipe thickness

O and OL	materials	Thickness (mm)					
Diameter	Diameter (mm)	R410A	R22				
1/4	6.35						
3/8	9.52	0.80					
1/2	12.70	0.80					
5/8	15.88	1.00					

#### Caution

- For connection piping, use copper phosphate seamless pipes (1220T) as regulated in "JIS H 3300" and the pipe thickness is 0.8 mm.
- In the market, there are some pipes of 0.7 mm thickness, but do not use these pipes (0.8 mm thickness has to be strictly followed).
- It is recommended to use pipes whose adhesion amount of oil is at or less than 40 mg / 10 m. At the same time, do not use pipes with dent, de-shape, and color change (especially inside).

# 13.5.2 Processing and connection of pipes

For refrigerant pipe installation, be aware of moisture and dirt do not get into the pipes, and make sure of no refrigerant leakage.

- $\ensuremath{\bigcirc}$  The procedure of flaring and precautions
- a) Cutting of pipes : use pipe cutter and cut the pipe slowly not to de-shape the pipe.
- Removal of burrs on the edge of pipe (reamer or scraper)
   If the condition of pipe edge after the deburring is no good or if burrs attaches on the flaring, it may cause refrigerant leakage. Turn the pipe end down and perform deburring carefully.
- c) Insert the flare nut (use the nut which is a part of the CZ parts)
- d) Flaring

Ensure the cleanliness of clump bar and pipe, and perform flaring carefully.

Use the existing flare tools or flare tools for R410A. Be aware that the sizes and dimensions of flaring is different in each flaring tool. If you use the existing flaring tools, use flaring gauge to measure the length of the flaring part.


Dining	Dim	ensions "a" ( R22	mm)	Dimensions "a" (mm) R410A/R32				Nut outer di	ameter (mm)
Piping size	Flare	tools	Flare tools for R410A	Flare tools		Flare tools for R410A		<b>D</b> 22	R410A
(((((((((((((((((((((((((((((((((((((((	(mm) Clutch type Wing nu type		Clutch type	Clutch type Wing nut type		Clutch type		R22	R32
6.35 (1/4")	0.5 ~ 1.0	1.0 ~ 1.5	0 ~ 0.5	1.0 ~ 1.5	1.5 ~ 2.0	0 ~ 0.5		17	17
9.52 (3/8")	0.5 ~ 1.0	1.0 ~ 1.5	0 ~ 0.5	1.0 ~ 1.5	1.5 ~ 2.0	0 ~ 0.5		22	22
12.70 (1/2")	0.5 ~ 1.0	1.5 ~ 2.0	0 ~ 0.5	1.0 ~ 1.5	2.0 ~ 2.5	0 ~ 0.5	Bar	24	26
15.88 (5/8")	0.5 ~ 1.0	1.5 ~ 2.0	0 ~ 0.5	1.0 ~ 1.5	2.0 ~ 2.5	0 ~ 0.5		27	29

# 13.6 Installation, Relocation, and Service

# 13.6.1 Air purge and gas leak test for new installation (using new refrigerant pipes) using vacuum pump


(From the point of view of global environment protection, do not release CFCs into the atmosphere during installation work)

- 1. Connect the charging hose of manifold gauge to the service port of 3-way valve (pushing insect pin).
- 2. Fully open the handle Lo of manifold gauge and operate vacuum pump.
- (If the needle of the low-pressure gauge reaches the vacuum immediately, check 1 procedure again)
- 3. Perform vacuuming 15 minutes or more, and make sure low pressure gauge reaches to -0.1 MPa (-76cmHg). When the vacuuming completes, fully open the handle Lo of manifold gauge and stop the operation of vacuum pump, and leave it for 1 ~ 2 minutes. Then, remove the connection side of the charging hose of vacuum pump adopter after checking the needle of manifold gauge does not turn back.
- 4. Open the stem of 2-way valve to 90° in anti-clock wise, and close the 2-way valve after 10 seconds, and perform gas leakage test.
- 5. Remove the charge hose from the service port of 3-way valve, and open the stems of 2-way and 3-way valves (open the valves to anti-clock wise carefully, do not use full strength to open)
- Tighten the service port cap with torque wrench 18 N•m (1.8 kgf•m) Tighten the caps of 2-way and 3-way valves with torque wrench 18 N•m (1.8kg f•m)
- 7. After the tightening of each cap, check gas leakage around the cap.

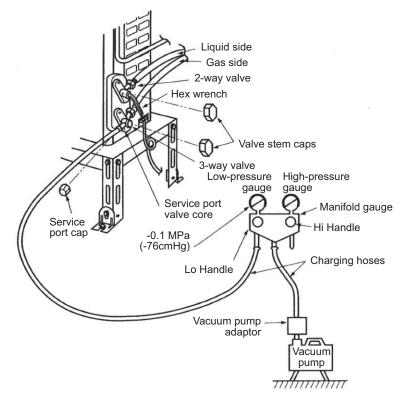

#### 13.6.2 Process of refrigerant recovery

- 1. Connect the center charging hose of manifold gauge to the in-let side of recovery device.
- 2. Connect the valves of the discharge side of recovery device and liquid side of refrigerant cylinder with red hose (charging hose).
- 3. Connect the yellow float switch cable of the recovery device to the refrigerant cylinder.
- 4. Open the low pressure side valve of manifold gauge.
- 5. Slightly loosen the charging hose of in-let connecting side of recovery device and perform air purge.
- 6. Open the liquid valve of refrigerant cylinder and slightly loosen the charging hose in discharging side of recovery device, and perform air purge (the recovery cylinder needs slight inside pressure).
- 7. Insert electric plug of recovery device into electrical outlet (the fan operation starts).
- 8. Turn the valve 1 and 2 of recovery device to pressure equalization point.
- 9. After a few seconds, turn back the valve 1 and 2 to the original position.
- 10. Turn the switch of the recovery device to "ON". (the compressor operation starts)
- 11. When the low pressure of manifold gauge is close to "0", close the low pressure side valve, turn "OFF" the recovery device switch.
- 12. Remove the center charging hose of manifold gauge from the recovery device.

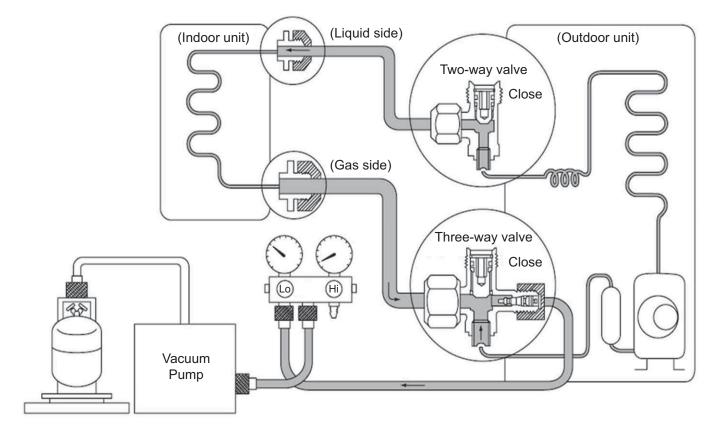

#### 13.6.3 Relocation

- 1. Removing the air conditioning unit
  - a) Recovery of outdoor unit refrigerant by pumping down

Press "forced cooling button" (as a general rule, since 1998 the name of cooling testing button is changed, and this name is unified within the air conditioning industry), and then you are able to start cooling operation in which the room temperature is low, and you can recover the refrigerant from the outdoor unit.

- Check the valve stems of two-way and three-way valves are open by being turned to anti-clockwise (Remove the caps, and confirm the bars are fully open. Use hexagon wrench <4 mm> to open and close the valves).
- Press the "Emergency Operation" button of the indoor units for five seconds and release [Forced cooling operation] (for old models, press "forced cooling" button). Then, operate the air conditioning unit for about 10 minutes.
- 3. Turn the stem of the two-way valve to the clock-wise and close the valve.
- 4. After about 2 ~ 3 minutes, turn the stem of the three-way valve quickly to the clock-wise, and stop the operation.

Caution: In the pump down operation, stop the compressor before removing the refrigerant pipes.

If you do not stop the compressor operation, and if the valve is open and remove the refrigerant pipes, the air may be sucked into the system and causes extreme high temperature in the refrigerant cycle. This may result in rupture or injury, etc.

- 5. Attach and tighten the caps of two-way and three-way valves with torque wrench.
- 6. Remove the connecting pipes (liquid side and gas side).
- b) Removal of indoor and outdoor units
  - 1. Remove the connecting pipes and wires between the indoor and outdoor units.
  - 2. Attach capping flare nuts on the edges of the pipes, connecting the indoor and outdoor units, in order to prevent dust and moisture get into the pipes.
  - 3. Remove the indoor and outdoor units.

#### 2. Unit installation

Use new refrigerant pipes for the installation, and perform air purging using vacuum pump and gas leakage testing stated in 14.5.1.

# 13.6.4 Replacement of air conditioning units and evacuation (when re-using the existing pipes)

When replacing the air conditioning units, you might use the existing pipes, but it is recommended to perform flaring again. In case of unit replacement, even if the unit is new refrigerant air conditioner, if the refrigerant oil is different, it may cause problem. Further, when re-using the existing refrigerant pipes, it is recommended to evacuate the pipes as much as possible, due to the reason that much refrigerant oil may be attached on the surface of the pipes. If the pipes are used without evacuation, the remaining refrigerant oil may cause under-performance and abnormal refrigerant cycle caused by non-compatibility of those oils.

#### 13.6.5 Inter-changeability of refrigerant

Do not operate air conditioning units inserting wrong (or mixed) refrigerant (R22, R410A, R32). It may cause malfunction of the units, and at the same time, <u>may cause serious incident such as rupture of the refrigerant cycle.</u>


## 13.6.6 Re-insertion of refrigerant in service

When re-insertion is needed, follow the procedures to ensure the insertion of new refrigerant at correct amount.

- 1. Attach charging hose (blue) to the service port of the outdoor unit.
- 2. Attach charging hose (red) to the vacuum pump. Fully open the 2-way and 3-way valves.
- 3. Place the refrigerant cylinder on the digital scale for refrigerant charging and connect the charge hose (yellow) to the connection port of the vacuum pump and the digital scale. Leave the cylinder valve fully open.
- 4. Fully open the handles Lo and Hi of the manifold gauge, and switch on the vacuum pump, and then perform evacuation for at or more than one hour.
- Confirm the compound gauge of -0.1 MPa (-76cmHg) and fully open the handles of Lo and Hi, and switch off the vacuum pump. Leave it for about 1 ~ 2 minutes and confirm the needle of the compound gauge does not turn back.

Refer to the picture below to follow the procedures below.

- 6. Remove the charging hose (red) of the manifold gauge from the vacuum pump adopter.
- 7. After adjusting the digital scale to zero, open the cylinder valve and the valve Lo of the manifold gauge, and insert the refrigerant.
- If it is not possible to insert the refrigerant at regulated amount at once, operate the cooling mode and gradually insert the refrigerant (recommended amount approx. 150 g / 1 time)
   \*Do not insert much refrigerant at once.
- 9. Close the open/close valve and insert the refrigerant in the charging hose to the outdoor unit. \*Perform this procedure during operating cooling operation. Close the stem of the two-way valve, and when the pressure of the manifold gauge becomes zero (0), quickly remove the charging hose (blue). Immediately open the 2-way valve, and stop the cooling operation.
- 10. Final checking • Confirm the 2-way and 3-way valves are fully open. Attach the caps of the service port and control valve, and then check the gas leakage around the caps.

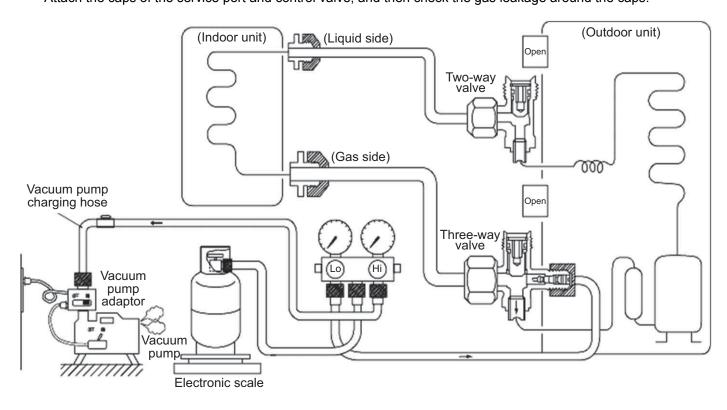


# 13.7 Repairing of refrigerant cycle / Brazing point

# 13.7.1 Preparation for repairing of refrigerant cycle / brazing

Brazing which is a technique needed for repairing refrigerant cycle requires advanced technique and experience, and this brazing procedure can only be performed by the workers who completed "Gas Welding Skill Training" regulated by the Occupational Safety and Health Act, and went through the training programs of refrigerant operations. Dismantling and re-connecting (assembling) refrigerant system requires working space, and the space has to ensure good air flow and fire prevention (water bucket and fire extinguisher). Moreover, the worker has to ensure the wearing of goggles, grabs, safety shoes, and long sleeve shirts, and be aware of work safety and attempt to prevent secondary defect (quality assurance of products). For brazing the indoor / outdoor unit structural components (heat exchangers, compressors, expansion valves, four-way valve blocks), after the recovery of all refrigerant, confirm that no refrigerant remains in the system, and fully open the 2-way and 3-way valves. When the brazing is conducted outside, check and make sure no refrigerant is contained in the air (be careful with vaporized refrigerant). Furthermore, protect the compressor terminal with metal plates, and heat but use wet clothes to cool down (releasing the heat) the expansion valves, and four way valves (prevent destruction of parts). In brazing, it is important to pour the brazing material without melting the base metal based on capillary action principle. In case of holes and oxidizing caused by overheating, do not perform re-brazing or alteration but replace the parts.

## 13.7.2 Adjustment of vacuum pump pressure

- 1. Cylinder with adjustment handle
  - 1. Check and confirm the adjustment handle of the 1<sup>st</sup> pressure adjuster is loosen (anticlockwise). If cylinder valve is opened when the 1<sup>st</sup> gauge pressure adjust handle is closed, the 2<sup>nd</sup> gauge might get broken.

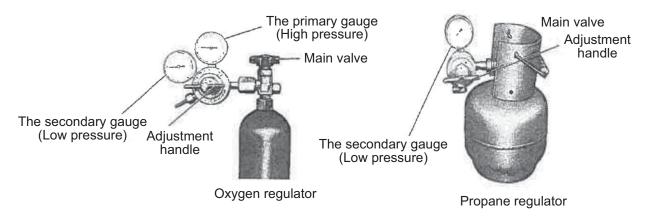

- 2. Open the cylinder valve, and check the remaining amount with the first t side pressure gauge.
- 3. Check the pressure of 2<sup>nd</sup> gauge and turn the adjustment handle to clock-wise direction to adjust the pressure.

$$\odot$$
 Oxygen 2<sup>nd</sup> side gauge pressure  $\cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot 0.5$  MPa (5.0 kgf / cm<sup>2</sup>)

 $\odot$  Propane 2<sup>nd</sup> side gauge pressure  $\cdot \cdot \cdot \cdot \cdot \cdot \cdot 0.05$  MPa (0.5 kgf / cm<sup>2</sup>)


2. Cylinder without adjustment valve

2<sup>nd</sup> side gauge pressure is adjusted by the adjuster.

Check the both side valves of the torch and open the cylinder valve to check the remaining refrigerant in the cylinder.

Caution: Do not attach oil component on the connection port of the adjuster.

Especially, use an oxygen cylinder adjuster which is no oil substance type. Do not dismantle or repair the adjuster and pressure gauge.

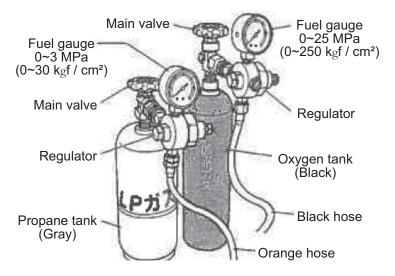

#### 13.7.3 Checking of gas provision

Checking there is no fire around the torch, and then confirm the provision of gas.


- 1. Slightly open the "propane valve" of the torch, and make sure the gas comes out from the torch crater and then close the "propane valve".
- 2. Slightly open the "oxygen valve" of the torch and make sure the gas comes out from the torch crater and then close the "oxygen valve".

Check there is no gas leakage around the hose connection.

#### 13.7.4 Adjustment of flame

- 1. Slightly open the "propane valve" of the torch and lit with spark lighter.
- This moment, the flame is only by propane and the color is red.
- 2. Gradually open the "oxygen valve" of the torch to mix oxygen, and adjust the amount of propane and oxygen with the valve to make the flame suitable for brazing work.

If the white core flame splits into two, the torch crater might be clogged. In this case, remove the crater from the torch and check.

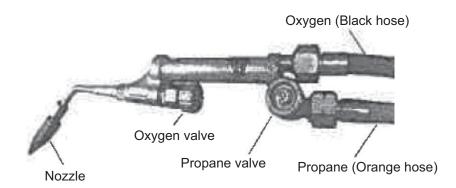


## 13.7.5 Types of flame

Types of flame change based on the proportion of propane and oxygen.

#### [Neutral Flame]

#### Perform brazing with this flame

(This is a flame when oxygen and propane are mixed at proper proportion, and has lesser effect on the brazed metals)




Outer flame (Light orange color)

#### [Carbide Flame]

When propane is excessive, the flame has white color flame in between the white core flame and outer flame. (This is due to the lack of oxygen and the proportion of unburned propane is excessive.


The black carbon created during the brazing work may contaminate the surface of the brazed metal).



Outer flame (Blue color)

#### [Oxidizing Flame]

Oxygen is more compared to the neutral flame. Although the flame size is small, this has the highest flame heat. However, due to the excessive oxygen contained in the flame, the brazing point gets oxidized. (This flame may cause holes, due to the high heat. The pipe may get melt)



Outer flame (Blue orange color)

#### 13.7.6 Closing the flame

#### [In case of short break]

- 1. Close the "propane valve" of the torch.
- 2. Close the "oxygen valve" of the torch.

#### [In case of finishing work]

- 1. As above, close the flame following the procedure of "In case of short break".
- 2. Completely close the valves of oxygen and propane cylinders.

3. Release the remaining gas inside the hose by opening the "oxygen valve" and "propane valve" of the torch. Confirm the 1<sup>st</sup> and 2<sup>nd</sup> side gauge pressures of "oxygen" and "propane" cylinder pressure adopter are "zero".

# 13.7.7 Selection of brazing material

Catagory	JIS Standard		Compo	osition of	ingredie	nts (%)		Terr	nperature	(°C)	Tensile (Refer		Characteristics
Category	Number	Ag	Cu	Zu	Cd	Ni	Р	Solidus	Liquidus	Brazing temp	Kgf•cm <sup>2</sup>	Base material	and applications
	BAg∙ 1A	49.0 ~ 51.0	14.5 ~ 16.5	14.5 ~ 18.5	17.0 ~ 19.0		_	approx. 625	approx. 635	635 ~ 760	45.5	S20C	Liquidity is good at low temperature, it is preferable to a small junction of the gap in the universal form.
	BAg∙ 1	44.0 ~ 56.0	14.0 ~ 16.0	14.0 ~ 18.0	23.0 ~ 25.0		_	approx. 605	approx. 620	620 ~ 760	45.5	S20C	It has similar performance to the BAg • 1A, and suitable for every base material except the light weight metal.
BAg	BAg∙2	34.0 ~ 36.0	25.0 ~ 27.0	19.0 ~ 23.0	17.0 ~ 19.0	_		approx. 605	approx. 700	700 ~ 845	45.5	S20C	It is a brazing filler metal in universal form, suitable for a slightly larger gap junction.
	BAg∙3	48.0 ~ 51.0	14.5 ~ 16.5	13.5 ~ 17.5	15.0 ~ 17.0	2.5 ~ 3.5	_	approx. 630	approx. 690	690 ~ 815	35 ~ 70	SS ~ SUS	It has good corrosion resistance in stainless steel-based brazing, suitable for brazing tungsten carbide, aluminum bronze and copper.
	BCuP-2	_	remain				6.8 ~ 7.5	approx. 710	approx. 785	690 ~ 815	21 ~ 24.5	Cu	Good liquidity, suitable for brazing copper tube.
BCuP	BCuP-3	4.8 ~ 5.2	remain	_	_	_	5.8 ~ 6.7	approx. 645	approx. 815	720 ~ 815	21 ~ 24.5	Cu	Suitable for brazing when the joint spacing is not constant
	BCuP-5	14.5 ~ 15.5	remain		_	_	4.8 ~ 5.3	approx. 645	approx. 800	705 ~ 815	21 ~ 24.5	Cu	When brazing of copper and copper, it is used without a flux, but not possible for brazing basic materials

Use BAg brazing material (silver solder) to increase the welding performance.

#### Caution

BCuP (phosphorus copper wax) is easy to react with sulfur, and makes a brittle compound water soluble, and causes gas leakage. In hot spring areas, use other brazing materials or paint the surface for protection.

#### 13.7.8 Need of flux

#### Use flux to protect the base materials.

- 1. Remove impurity and oxide film on the metal base, and improve the flow of the brazing material.
- 2. Prevent oxidation of the metal surface in brazing.
- 3. Reduce the surface tension of the brazing material.

#### 13.7.9 Need of nitrogen gas

In order to prevent oxidation in the pipe, perform the brazing operation in nitrogen gas flow. Flow rate 0.05 m<sup>3</sup> / h, or pressure reducing valve at 0.02 MPa (0.2kgf / cm<sup>2</sup>) below.


# 13.7.10 Checking of brazing (insert) points


- No impurity on the brazing point If dirt or oil is attached on the brazing point, the brazing filler metal does not reach to junction, and it may cause poor welding.
- 2. Adequate gap space in the brazing point The advantage of capillary current situation is used in brazing. If the gap space is too large, this phenomenon may not occur and it may cause poor welding because brazing filler metal does not flow to join the front part.
- Appropriate size for insertion
   The guideline for pipe insertion dimensions is to
   three times the diameter of the base material, but
   you need to decide the insertion size in
   consideration of the clogging of the brazing
   material. Generally, for thin pipes, you need to
   increase the insert size, and for thick pipe vice
   versa.
- 4. Brazing material to flow from top to bottom Brazing filler metal will easily flow to the connecting portion by capillary action. Further, by bending the brazing portion of [dryer side] of the capillary tube at 15 mm from the tube top to the angle of about 120°, you can prevent the damage of dryer inside and the clogging of brazing material caused by the excessive insertion of capillary tube.


# 13.7.11 Brazing and heating

1. Place the flame to a pipe which has more heat capacity in order to let the brazing material melt by the pipe heat. Heat the pipe up to the melting temperature of the brazing material, but when it is overheating, assess the temperature by pipe color in order not to melt the pipe.

Gap 0.025 ~ 0.05 mm Inner diameter ø6.45 Insert diameter 10 ~ 25 mm Outer diameter ø6.35

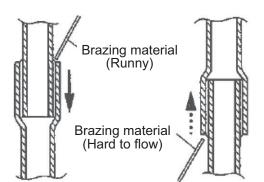

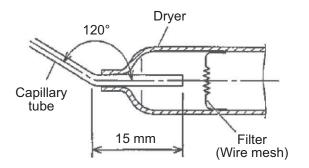

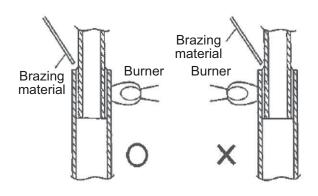

The pre-heating is to heat the base material until the melting temperature, and requires certain training to distinguish the color of the heated base material in order not to melt the material.

- The color and temperature of copper tube
  Becoming red color ••••••480°C
- Dull red ••••••650°C
- Cherish red ••••••760°C
- Brightening cherish red • • • 870°C

#### (Reference)

Melting temperature of copper • • • • • • Approx. 1083°C


Maximum temperature obtained in propane and oxygen ••••• Approx. 1083°C

The important point is to heat the bonding part uniformly within a short period of time until reaching to the brazing temperature in the following manner.

- Apply the flame on to the side with better heat transmission. If the pipe thickness is consistent, by heating like 30% iron and 70% copper, the copper pipe inside reaches to brazing temperature. Iron pipes have low heat transmission and only the part the flame is applied get high temperature, and this causes oxidization of the pipe. The flow of the brazing filler is affected negatively.
- Apply the flame on to the side of larger heat capacity.
   When brazing a thin tubes such as capillary tube and dryer, etc., caution has to be taken to apply

the flame to the dryer side (thick pipe side), in order to prevent burn out by the heat.

4. When brazing the compressor connection pipes (suction and discharge), remove the sound insulation plate and the fan, and place the compressor stand vertically (to prevent the leakage of compressor refrigerating machine oil), and apply the flame from the compressor body side.

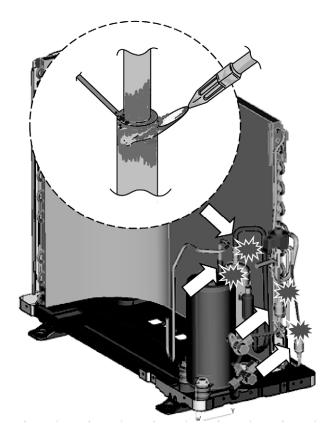

#### 13.7.12 Terminologies of brazing

Pin holes  $\rightarrow$  Small holes are generated on the surface of the brazing metal.

Wet temperature  $\rightarrow$  Liquidus temperature at which the brazing material starts flowing out by heating, generally it is the liquidus-line temperature.

Blow holes  $\rightarrow$  Hollows made by gas in the brazing material of brazing portion (gas reservoirs).

Pits  $\rightarrow$  As a result of blow holes, small dents generated on the outside surface of welding.

Voids  $\rightarrow$  The blazing material does not reach completely to the brazing part. It cannot be identified from outside.

# 13.8 <Reference> Analysis method for no error code, no cooling / no warming

#### 13.8.1 Preparation for appropriate diagnosis


In order to obtain appropriate operation characteristics, minimum 15 minutes or more operation time [testing operation (rated operation)] is required.

Method of rated operation (rated operation)

For the models which have two buttons of "emergency operation and forced cooling operation", press forced cooling button once. For the models which have only emergency operation button, press the button once for 5 seconds and when hear "beep" sound, release the button. Then, cooling operation starts.

- 2. Checking the mal-functions of indoor / outdoor units
  - Any obstacles against heat release and air suction? (short circuit) (Forget to remove the outdoor unit cover or fallen leaves blocking the outdoor unit)
  - 2) Are the indoor unit air filters clean? (obstructing heat suction)
  - 3) Is the setting temperature on the remote controller correct? (is the setting temperature set at lower/higher than the room temperature?)

#### 13.8.2 Understanding and verification of refrigerant cycle

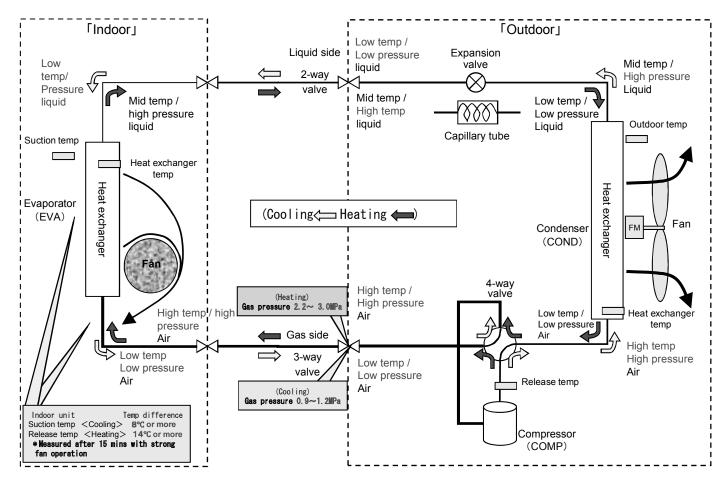

- 1. Measuring temperature
  - 1) Indoor unit suction temperature, release temperature, temperature difference,  $\rightarrow$  Measure by thermometer
  - 2) 2-way valve pipe temperature in cooling mode is low temperature (benchmark : 5 ~ 10°C), in heating mode is medium temperature (benchmark : 25 ~ 35°C).
  - 3) 3-way valve pipe temperature in cooling mode is low temperature (benchmark : 7 ~ 15°C) in heating mode is high temperature (benchmark : 38 ~ 50°C).
- 2. Measuring electric current
  - Measuring electric current in operation → check by clump meter (refer to table of technical characteristic guideline)
- 3. Meauring pressure
  - Measuring gas pressure → check the pressure by manifold gauge (refer to table of technical characteristic guideline)
- 4. Any sound from the expansion valve?

(when starting the operation and the outdoor unit is turned on, the expansion valve is re-set, check if there is any edged sound or clack sound)

### 13.8.3 Guidance for diagnosis of refrigerant cycle

Comparison with	Cooling	node		
normal operation	High	Low		
	Excess insertion of refrigerant	Clogged capillary, expansion valve malfunction		
Refrigerant	Heat releasing obstruction	Clog by moisture		
pressure	Dirty condenser, attachment of impurity	Lack of refrigerant gas		
	Compressor malfunction			
	Excess insertion of refrigerant	Lack of refrigerant gas		
Operation electric	Heat releasing obstruction	Compressor malfunction		
current	Dirty condenser, impurity	Mixture of air		
		(Insufficient evacuation)		
2-way valve	Excess insertion of refrigerant	Clogged capillary, expansion valve malfunction		
temperature	Compressor malfunction	Lack of refrigerant gas		
3-way valve	Lack of refrigerant gas • Compressor malfunction	Excess insertion of refrigerant		
temperature	Clogged capillary, expansion valve malfunction			

Suction	Temperature di	Temperature difference at or less than 8°C in cooling operation • • • Causes						
Suction temperature	<ul> <li>Heat releasing obstruction</li> </ul>	Dirty condenser	<ul> <li>Attachment of impurity</li> </ul>					
&	<ul> <li>Lack of refrigerant gas</li> </ul>	<ul> <li>Excess insertion of refrigerant</li> </ul>						
Release air temperature	Mixture of air	<ul> <li>Mixture of moisture</li> </ul>						
temperature	Clogged capillary	<ul> <li>Expansion valve malfunction</li> </ul>	Compressor malfunction					

Above all are based on the condition that the installation work is properly performed (no issues in indoor / outdoor pipe connections, etc.)


# 14. Operation Control

# 14.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal setting temperature and intake air temperature.

### 14.1.1 Internal Setting Temperature

Once the operation starts, remote control setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the air conditioner settings and the operation environment. The final shifted value will be used as internal setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

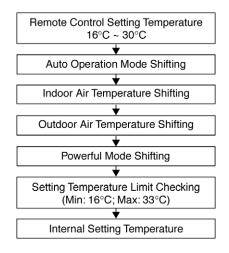

# 14.1.2 Cooling Operation

### 14.1.2.1 Thermostat control

- Compressor is OFF when Intake Air Temperature Internal Setting Temperature < -1.5°C continue for 3 minutes.
- When compressor is OFF (Thermostat OFF) and AUTO FAN is set, the fan will stop periodically.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature > Compressor OFF point.

# 14.1.3 Soft Dry Operation

### 14.1.3.1 Thermostat control

- Compressor is OFF when Intake Air Temperature Internal Setting Temperature < -2.0°C continue for 3 minutes.
- When compressor is OFF (Thermostat OFF) and AUTO FAN is set, the fan will stop periodically.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature > Compressor OFF point.


### 14.1.4 Heating Operation

### 14.1.4.1 Thermostat control


- Compressor is OFF when Intake Air Temperature Internal Setting Temperature > +2.0°C continue for 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature < Compressor OFF point.</li>

# 14.1.5 Automatic Operation

- This mode can be set using remote control and the operation is decided by remote control setting temperature, remote control operation mode and indoor intake air temperature.
- During operation mode judgment, indoor fan motor (with speed of Lo-) is running for 30 seconds to detect the indoor intake air temperature.
- Every 10 minutes, the indoor temperature is judged.
- For the 1st judgment
  - If indoor intake temperature remote control setting temperature  $\geq$  2°C, COOL mode is decided.
  - If -2°C ≤ indoor intake temperature remote control setting temperature < 2°C, DRY mode is decided.</li>
  - $\circ$  If indoor intake temperature remote control setting temperature < -2°C, HEAT mode is decided.



- For the 2nd judgment onwards
  - If indoor intake temperature remote control setting temperature ≥ 3°C, if previous operate in DRY mode, then continue in DRY mode. otherwise COOL mode is decided.
  - o If  $-2^{\circ}C \leq$  indoor intake temperature remote control setting temperature < 3°C, maintain with previous mode
  - If indoor intake temperature remote control setting temperature < -2°C, HEAT mode is decided.



# 14.2 Indoor Fan Motor Operation

### 14.2.1 Basic Rotation Speed (rpm)

### A. Basic Rotation Speed (rpm)

i. Manual Fan Speed

[Cooling, Dry]

• Fan motor's number of rotation is determined according to remote control setting.

Remote control	0	0	0	0	0
Tab	Hi	Ме	Me-	Lo	QLo

#### CS-FZ25UKE CS-FZ35UKE

Remote control	0	0	0	0	0
Tab	Hi	Me+	Ме	Me-	Lo

#### CS-FZ50UKE CS-FZ60UKE

[Heating]

• Fan motor's number of rotation is determined according to remote control setting.

Remote control	0	0	0	0	0
Tab	SHi	Me	Me-	Lo	QLo

#### CS-FZ25UKE CS-FZ35UKE

Remote control	0	0	0	0	0
Tab	SHi	Me+	Ме	Me-	Lo

#### CS-FZ50UKE CS-FZ60UKE

# ii Auto Fan Speed


[Cooling, Dry]

- According to room temperature and setting temperature, indoor fan speed is determined automatically.
- When set temperature is not achieved, the indoor fan will operate according to pattern below.

Fan Speed								[1 patte	rn : 10 s] I		
Higher	a	b	С	d	e	f	g	h	а	b	
Medium Lower											

• When set temperature achieved, the indoor fan speed will be fixed. When thermostat off, the fan stop periodically. [Heating]

• According to indoor pipe temperature, automatic heating fan speed is determined as follows.

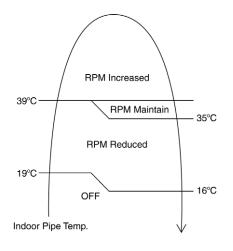


#### **B. Feedback control**

- Immediately after the fan motor started, feedback control is performed once every second.
- During fan motor on, if fan motor feedback ≥ 2550 rpm or < 50 rpm continue for 10 seconds, then fan motor error counter increase, fan motor is then stop and restart. If the fan motor counter becomes 7 times, then H19 fan motor error is detected. Operation stops and cannot on back.

# 14.3 Outdoor Fan Motor Operation

Outdoor fan motor is operated with one fan speed only. It starts when compressor starts operation and it stops 30 seconds after compressor stops operation.



# 14.4 Airflow Direction

- There are two types of airflow, vertical airflow (directed by horizontal vane) and horizontal airflow (directed by vertical vanes).
- Control of airflow direction can be automatic (angles of direction is determined by operation mode, heat exchanger temperature and intake air temperature) and manual (angles of direction can be adjusted using remote control).

### 14.4.1 Vertical Airflow


	Onoration	Mada		Va	ane Angle	(°)	
Operation Mode			1	2	3	4	5
	Auto	Usual (Ventilation)			10 ~ 40		
Cooling	Auto	Control with dew			10 ~ 40		
Cooling	Manual	Usual (Ventilation)	10	17.5	25	32.5	40
Manual		Control with dew	10	17.5	25	32.5	40
	Auto	Usual			10 ~ 40		
Dat	Auto	Control with dew			10 ~ 40		
Dry	Manual	Usual	10	17.5	25	32.5	40
	Control with dew		10	17.5	25	32.5	40
Heating	Manual	Usual	10	21.2	32.5	43.8	55

#### CS-FZ25UKE CS-FZ35UKE

	Operation	Mada		Va	ane Angle	(°)			
Operation Mode			1	2	3	4	5		
	Auto	Usual (Ventilation)		5 ~ 35					
Cooling	Auto	Control with dew			5 ~ 35				
Cooling	Manual	Usual (Ventilation)	5	12.5	20	27.5	35		
	Manuai	Control with dew	5	12.5	20	27.5	35		
	Auto	Usual			5 ~ 35				
Day	Auto	Control with dew		5 ~ 35					
Dry	Usual	5	12.5	20	27.5	35			
	Manual Control with dev		5	12.5	20	27.5	35		
Heating	Manual	Usual	5	17.5	30	42.5	55		


#### CS-FZ50UKE CS-FZ60UKE

- 1 Automatic vertical airflow direction can be set using remote control; the vane swings up and down within the angles as stated above. For heating mode operation, the angle of the vane depends on the indoor heat exchanger temperature as Figure 1 below. It does not swing during fan motor stop. When the air conditioner is stopped using remote control, the vane will shift to close position.
- 2 Manual vertical airflow direction can be set using remote control; the angles of the vane are as stated above and the positions of the vane are as Figure 2 below. When the air conditioner is stopped using remote control, the vane will shift to close position.

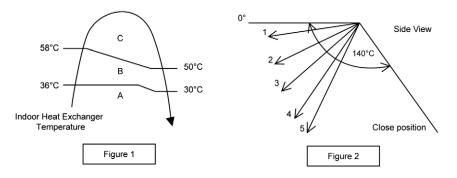

# 14.4.2 Horizontal Airflow (For FZ60UKE only)

1 Automatic horizontal airflow direction can be set using remote control; the vane swings left and right within the angles as stated below. It does not swing during fan motor stop. For heating mode operation, the angle of the vane depends on the indoor heat exchanger temperature as Figure 1 below.

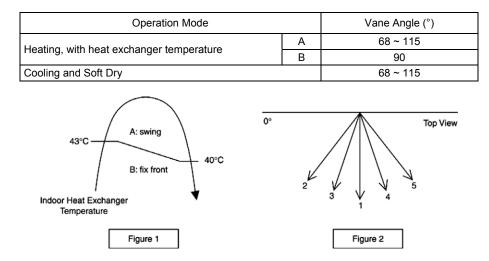

2 Manual horizontal airflow direction can be set using remote control; the angles of the vane are as stated below and the positions of the vane are as Figure 2 above.

Pattern	1	2	3	4	5
Airflow Direction Patterns at Remote Control		$\Box_{\mathcal{F}}$			
Vane Angle (°)	90	70	80	100	110

# 14.4.3 Horizontal Airflow (For FZ25/35/50UKE)

• The horizontal airflow direction louver can be adjusted by hand.

# 14.5 Timer Control


- There are 2 sets of ON and OFF timer available to turn the unit ON or OFF at different preset time.
- If more than one timer had been set, the upcoming timer will be displayed and will activate in sequence.

# 14.5.1 ON Timer Control

• ON timer 1 and ON timer 2 can be set using remote control, the unit with timer set will start operate earlier than the setting time.

This is to provide a comfortable environment when reaching the set ON time.

- 60 minutes before the set time, indoor (at fan speed of Lo-) and outdoor fan motor start operate for 30 seconds to determine the indoor intake air temperature and outdoor air temperature in order to judge the operation starting time.
- From the above judgment, the decided operation will start operate earlier than the set time as shown below.

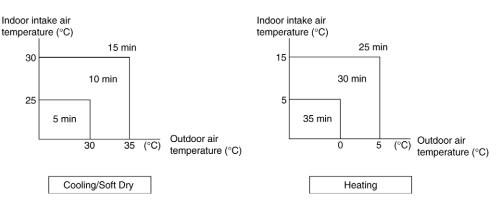

### 14.5.2 OFF Timer Control

OFF timer 1 and OFF timer 2 can be set using remote control, the unit with timer set will stop operate at set time.

# 14.6 Sleep Mode Operation

SLEEP To maximise comfort while sleeping

SLEEP  $\bigcirc 0.5h \rightarrow 1.0h \rightarrow 2.0h \rightarrow 3.0h \rightarrow 4.0h \rightarrow 5.0h \bigcirc 0.0h (CANCEL) \rightarrow 9.0h \rightarrow 8.0h \rightarrow 7.0h \rightarrow 6.0h \bigcirc 0.0h (CANCEL) \rightarrow 9.0h \rightarrow 8.0h \rightarrow 7.0h \rightarrow 6.0h \rightarrow 6.$ 

- This operation provides you with a comfortable environment while sleeping. It will automatically adjust the sleep pattern temperature during the activation period.
- The indoor unit indicator will dim when this operation is activated. This is not applicable if the indicator brightness has been manually dimmed.
- This operation is incorporated with the activation timer (0.5, 1, 2, 3, 4, 5, 6, 7, 8 or 9 hours).
- This operation can be set together with single timer or twin timer. Sleep operation has the priority over OFF timer.
- This operation can be cancelled by pressing the respective button when the sleep timer reaches 0.0h.

# 14.7 Random Auto Restart Control

- When the power supply is cut off during the operation of air conditioner, the compressor will re-operate within three to four minutes (there are 10 patterns between 2 minutes 58 seconds and 3 minutes 52 seconds to be selected randomly) after power supply resumes.
- This type of control is not applicable during ON/OFF Timer setting.
- This control can be omitted by open the circuit of JP1 at indoor unit printed circuit board.

# 14.8 Indication Panel

LED	POWER	TIMER		
Color	Green	Orange		
Light ON	Operation ON	Timer Setting ON		
Light OFF	Operation OFF	Timer Setting OFF		

Note:

- If POWER LED is blinking, the possible operation of the unit are Hot Start, during Deice operation, operation mode judgment, or ON timer sampling.
- If Timer LED is blinking, there is an abnormality operation occurs.

# 14.9 Quiet Operation (Cooling Mode/Cooling Area of Dry Mode)

#### A. Purpose

1

To provide quiet cooling operation compare to normal operation.

#### **B.** Control condition

- a. Quiet operation start condition
  - When "POWERFUL/QUIET" button at remote control is pressed twice.
- b. Quiet operation stop condition
  - When one of the following conditions is satisfied, quiet operation stops:
  - a. POWERFUL/QUIET button is pressed again.
  - b. Stop by OFF/ON switch.
  - c. Timer "off" activates.
- 2 When quiet operation is stopped, operation is shifted to normal operation with previous setting.
- 3 When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
- 4 When operation mode is changed, quiet operation is shifted to quiet operation of the new mode.
- 5 During quiet operation, if timer "on" activates, quiet operation maintains.
- 6 After off, when on back, quiet operation is not memorized.

#### **C.** Control contents

- 1 Fan speed is changed from normal setting to quiet setting of respective fan speed.
- 2 Fan speed for quiet operation is reduced from setting fan speed.

# 14.10 Quiet Operation (Heating)

#### A. Purpose

To provide quiet heating operation compare to normal operation.

#### **B.** Control condition

- a. Quiet operation start condition
  - When "POWERFUL/QUIET" button at remote control is pressed.
- b. Quiet operation stop condition
- 1 When one of the following conditions is satisfied, quiet operation stops:
  - a. POWERFUL/QUIET button is pressed again.
  - b. Stop by OFF/ON switch.
  - c. Timer "off" activates.
- 2 When quiet operation is stopped, operation is shifted to normal operation with previous setting.
- 3 When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
- 4 When operation mode is changed, quiet operation is shifted to quiet operation of the new mode.
- 5 During quiet operation, if timer "on" activates, quiet operation maintains.
- 6 After off, when on back, quiet operation is not memorized.

#### C. Control contents

- a. Fan Speed manual
  - 1 Fan speed is changed from normal setting to quiet setting of respective fan speed.
  - 2 Fan speed for quiet operation is reduced from setting fan speed.
- b. Fan Speed Auto
  - 1 Indoor FM RPM depends on pipe temp sensor of indoor heat exchanger.

# 14.11 Powerful Mode Operation

When the powerful mode is selected, the internal setting temperature will shift lower up to 2°C (for Cooling/Soft Dry) or higher up to 3.5°C (for Heating) than remote control setting temperature for 20 minutes to achieve the setting temperature quickly.

# **15. Protection Control**

# 15.1 Protection Control for All Operations

# 15.1.1 Restart Control (Time Delay Safety Control)


- The Compressor will not turn on within 3 minutes from the moment operation stops, although the unit is turned on again by pressing OFF/ON button at remote control within this period.
- This control is not applicable if the power supply is cut off and on again.
- This phenomenon is to balance the pressure inside the refrigerant cycle.

### 15.1.2 Total Running Current

- 1 When the outdoor unit total running current (AC) exceeds X value, the frequency instructed for compressor operation will be decreased.
- 2 If the running current does not exceed X value for 5 seconds, the frequency instructed will be increased.
- 3 However, if total outdoor unit running current exceeds Y value, compressor will be stopped immediately for 3 minutes.

Model	FZ25UKE		FZ35UKE		FZ50UKE		FZ60UKE	
Operation Mode	X (A)	Y (A)						
Cooling / Soft Dry (A)	5.05	15.02	7.04	15.02	8.87	14.66	12.85	14.66
Cooling / Soft Dry (B)	4.57	15.02	6.60	15.02	8.33	14.66	12.31	14.66
Cooling / Soft Dry (C)	4.57	15.02	6.60	15.02	8.33	14.66	12.31	14.66
Heating	4.49	15.02	5.92	15.02	9.59	14.66	11.59	14.66

4 The first 30 minutes of cooling operation, (A) will be applied.

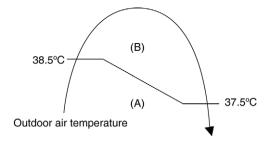


# 15.1.3 IPM (Power transistor) Prevention Control

- Overheating Prevention Control
  - 1 When the IPM temperature rises to 120°C, compressor operation will stop immediately.
  - 2 Compressor operation restarts after 3 minutes the temperature decreases to 110°C.
  - 3 If this condition repeats continuously 4 times within 20 minutes, timer LED will be blinking ("F96" is indicated).
- DC Peak Current Control
  - 1 When electric current to IPM exceeds set value of  $16.0 \pm 2.0A$  (FZ25/35UKE) and  $20.2 \pm 2.7A$  (FZ50UKE), the compressor will stop operate. Then, operation will restart after 3 minutes.
  - 2 If the set value is exceeded again more than 30 seconds after the compressor starts, the operation will restart after 3 minute.
  - 3 If the set value exceeded again within 30 seconds after the compressor starts, the operation will restart after 1 minute. If this condition repeats continuously for 7 times, all indoor and outdoor relays will be cut off, timer LED will be blinking ("F99" is indicated).

# 15.1.4 Compressor Overheating Prevention Control

- Instructed frequency for compressor operation will be regulated by compressor discharge temperature. The changes of frequency are as below.
- If compressor discharge temperature exceeds 103°C, compressor will be stopped, occurs 4 times per 20 minutes, timer LED will be blinking. ("F97" is indicated.)

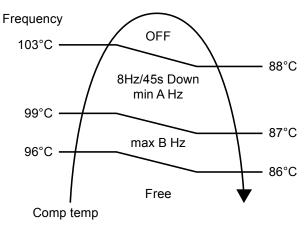

# 15.1.5 Low Pressure Prevention Control (Gas Leakage Detection)

- Control start conditions
  - For 5 minutes, the compressor continuously operates and outdoor total current is between 1.22A and 1.38 A, between 0.75A and 0.95A.
  - During Cooling and Soft Dry operations:
    - Indoor suction temperature indoor piping temperature is below 4°C.
  - $\circ$  During Heating operations :
  - Indoor piping temperature indoor suction is under 5°C.
- Control contents

0

- o Compressor stops (and restart after 3 minutes).
  - If the conditions above happen 2 times within 20 minutes, the unit will:
  - Stop operation
  - Timer LED blinks and "F91" indicated.

### 15.1.6 Low Frequency Protection Control 1

• When the compressor operate at frequency lower than 24 Hz continued for 20 minutes, the operation frequency will be changed to 23 Hz for 2 minutes.

# 15.1.7 Low Frequency Protection Control 2


• When all the below conditions comply, the compressor frequency will change to lower frequency.

Temperature, T, for:	Cooling/Soft Dry	Heating
Indoor intake air (°C)	T < 14 or T ≥ 30	T < 14 or T ≥ 28
Outdoor air (°C)	T < 13 or T ≥ 38	T < 4 or T ≥ 24
Indoor heat exchanger (°C)	T < 30	T ≥ 0

# 15.2 Protection Control for Cooling & Soft Dry Operation

# 15.2.1 Outdoor Air Temperature Control

- The compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.
- This control will begin 1 minute after the compressor starts.
- Compressor frequency will adjust base on outdoor air temperature.

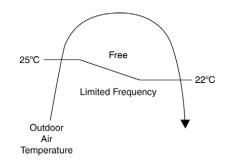

# 15.2.2 Cooling Overload Control

- Detects the Outdoor pipe temperature and carry out below restriction/limitation (Limit the compressor Operation frequency).
- The compressor stop if outdoor pipe temperature exceeds 61°C.
- If the compressor stops 4 times in 20 minutes, Timer LED blinking (F95 indicated: outdoor high pressure rise protection).

# 15.2.3 Freeze Prevention Control 1

- When indoor heat exchanger temperature is lower than 0°C continuously for 6 minutes, compressor will stop operating.
- Compressor will resume its operation 3 minutes after the indoor heat exchanger is higher than 5°C.
- At the same time, indoor fan speed will be higher than during its normal operation.
- If indoor heat exchanger temperature is higher than 5°C for 5 minutes, the fan speed will return to its normal
  operation.

# 15.2.4 Freeze Prevention Control 2

- Control start conditions
  - During Cooling operation and soft dry operation
    - During thermo OFF condition, indoor intake temperature is less than 10°C or
    - Compressor stops for freeze prevention control
  - Either one of the conditions above occurs 5 times in 60 minutes.
- Control contents
  - Operation stops
  - Timer LED blinks and "H99" indicated

# 15.2.5 Dew Prevention Control 1

- To prevent dew formation at indoor unit discharge area.
- This control will be activated if:
  - Outdoor air temperature and Indoor pipe temperature judgment by microcontroller is fulfilled.
  - When Cooling or Dry mode is operated more than 20 minutes or more.
- This control stopped if:
  - $\circ$  Compressor stopped.
  - Remote control setting changed (fan speed / temperature).
  - $\circ$   $\;$  Outdoor air temperature and indoor intake temperature changed.
- Fan speed will be adjusted accordingly in this control.

# 15.2.6 Odor Cut Control

- To reduce the odor released from the unit.
  - Start Condition
    - AUTO FAN Speed is selected during COOL or DRY operation.
    - During freeze prevention control and timer preliminary operation, this control is not applicable.
  - Control content
    - Depends on compressor conditions:
      - 1. Compressor OFF  $\rightarrow$  Compressor ON.
    - The indoor unit fan stops temporarily and then starts to blow at minimum airflow for 30 seconds. 2. Compressor  $ON \rightarrow Compressor OFF$ .
      - The indoor unit fan stops for 90 seconds and then blows at minimum airflow for 20 seconds.

# 15.3 Protection Control for Heating Operation

### 15.3.1 Intake Air Temperature Control

Compressor will operate at limited freq., if indoor intake air temperature is 30°C or above.


# 15.3.2 Outdoor Air Temperature Control

 The Max current value is regulated when the outdoor air temperature rise above 14°C in order to avoid compressor overloading.



#### 15.3.3 Overload Protection Control

- The compressor operating frequency is regulated in accordance to indoor heat exchanger temperature as shown below.
- If the heat exchanger temperature exceeds 60°C, compressor will stop.

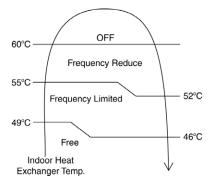

### 15.3.4 Low Temperature Compressor Oil Return Control

 In heating operation, if the outdoor temperature falls below -10°C when compressor starts, the compressor frequency will be regulated up to 600 seconds.

### 15.3.5 Cold Draught Prevention Control

• When indoor pipe temperature is low, cold draught operation starts where indoor fan speed will be reduced.

# 15.3.6 Deice Operation


• When outdoor pipe temperature and outdoor air temperature is low, deice operation start where indoor fan motor and outdoor fan motor stop and operation LED blinks.

# 15.3.7 Low Pressure Protection Control

- During low ambient heating operation (below -15°C), if the pipe temperature drops below -16°C, the max frequency will be reduced and limited.
- If it drops below -20°C and does not arise after 3 minutes, the compressor will stop.
- The compressor will start again if the pipe temperature rises above -18°C.

# 16. Servicing Mode

# 16.1 Auto OFF/ON Button




#### 1 AUTO OPERATION MODE

The Auto operation will be activated immediately once the Auto OFF/ON button is pressed. This operation can be used to operate air conditioner with limited function if remote control is misplaced or malfunction.

#### 2 TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)

The Test Run operation will be activated if the Auto OFF/ON button is pressed continuously for more than 5 seconds. A "beep" sound will heard at the fifth seconds, in order to identify the starting of Test Run operation (Forced cooling operation). Within 5 minutes after Forced cooling operation start, the Auto OFF/ON button is pressed for more than 5 seconds. A 2 "beep" sounds will heard at the fifth seconds, in order to identify the starting of Forced heating operation.

The Auto OFF/ON button may be used together with remote control to set / change the advance setting of air conditioner operation.

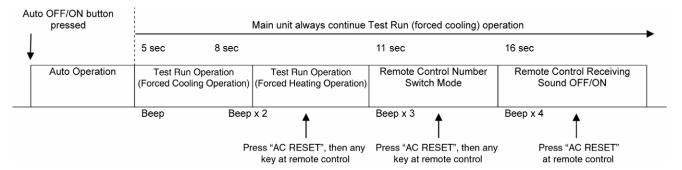

#### 3 REMOTE CONTROL NUMBER SWITCH MODE

The Remote Control Number Switch Mode will be activated if the Auto OFF/ON button is pressed continuously for more than 11 seconds (3 "beep" sounds will occur at 11th seconds to identify the Remote Control Number Switch Mode is in standby condition) and press "AC RESET" button and then press any button at remote control to transmit and store the desired transmission code to the EEPROM.

There are 4 types of remote control transmission code could be selected and stored in EEPROM of indoor unit. The indoor unit will only operate when received signal with same transmission code from remote control. This could prevent signal interference when there are 2 or more indoor units installed nearby together. To change remote control transmission code, short or open jumpers at the remote control printed circuit board.

	Remote Control Printed Circuit Board		
	Jumper A (JA)	Jumper B (JB)	Remote Control No.
	Short	Open	A (Default)
	Open	Open	В
	Short	Short	С
	Open	Short	D

 During Remote Control Number Switch Mode, press any button at remote control to transmit and store the transmission code to the EEPROM. 4 REMOTE CONTROL RECEIVING SOUND OFF/ON MODE

The Remote Control Receiving Sound OFF/ON Mode will be activated if the Auto OFF/ON button is pressed continuously for more than 16 seconds (4 "beep" sounds will occur at 16th seconds to identify the Remote Control Receiving Sound Off/On Mode is in standby condition) and press "AC Reset" button at remote control.


Press "Auto OFF/ON button" to toggle remote control receiving sound.

- Short "beep": Turn OFF remote control receiving sound.
- Long "beep": Turn ON remote control receiving sound.

After Auto OFF/ON Button is pressed, the 20 seconds counter for Remote Control Receiving Sound OFF/ON Mode is restarted.

# 16.2 Heat Only Operation

# 16.2.1 How to Activate/Deactivate Heat only Operation

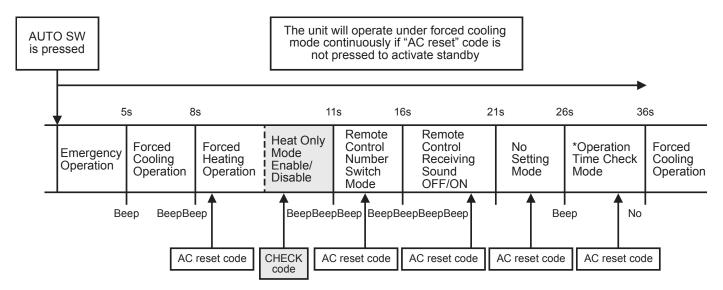

- To enable the "Heat Only" mode, press the AUTO OFF/ON SW for more than 8s and less than 11s, "Beep Beep" sound will be heard, then release the AUTO OFF/ON SW and press remote controller CHECK button. A short "Beep" sound will be heard. "Heat Only" mode is now enable.
- To disable the "Heat Only" mode, press the AUTO OFF/ON SW for more than 8s and less than 11s, "Beep Beep" sound will be heard, then release the AUTO OFF/ON SW and press remote controller CHECK button. A long "Beep" sound will be heard. "Heat Only" mode is now disable.
- To pump down the unit during Heat Only Operation press AUTO switch for 5 seconds.

# 16.2.2 Operation mode during Heating only Operation

• The table below shows the operation mode comparison when Heating Only Operation Mode Activated and Deactivated.

Operation Mode	Heating Only Operation Mode Activated	Heating Only Operation Mode Deactivated	
AUTO	After 30s sampling, regardless of the indoor intake or outdoor intake temperature judgment, the unit will run Heating operation.	After 30s sampling, the unit will judge the operation mode base on remote controller temperature setting and Indoor Intake Sensor (New Auto Mode) or Outdoor Intake Sensor (Old Auto Mode).	
HEAT	The unit will run Heating operation.	The unit will run Heating operation.	
COOL	The unit will stop and Power LED blinking.	The unit will run Cooling operation.	
DRY	The unit will stop and Power LED blinking.	The unit will run Cooling Dry operation.	
NANOE-G Stand-alone	The unit will stop and Power LED blinking.	The unit will run Nanoe-G Stand-alone operation.	
Force Cooling	The unit will run Force Cooling Operation for X_CTRYTM [15] minutes	The unit will run Force Cooling operation.	
Force Heating	The unit will run Force Heating operation.	The unit will run Force Heating operation.	
AUTO (with Timer)	The unit will turn ON by the timer and run Auto Operation. After 30s sampling, regardless of the indoor intake or outdoor intake temperature judgment, the unit will run Heating operation.	The unit will turn ON by the timer and run Auto Operation. After 30s sampling, the unit will judge the operation mode base on remote controller temperature setting and Indoor Intake Sensor (New Auto Mode) or Outdoor Intake Sensor (Old Auto Mode).	
HEAT (with Timer)	The unit will turn ON by the timer and run Heating Operation.	The unit will turn ON by the timer and run Heating Operation.	
COOL (with Timer)	The unit will not turn ON by the timer. Power LED blinking.	The unit will turn ON by the timer and run Cooling Operation.	
DRY (with Timer)	The unit will not turn ON by the timer. Power LED blinking.	The unit will turn ON by the timer and run Cooling Dry Operation.	
Cooling Test Mode	The unit will stop and Power LED blinking.	The unit will operate according to specify Cooling test mode operation parameter.	
Heating Test Mode	The unit will operate according to specify Heating test mode operation parameter.	The unit will operate according to specify Heating test mode operation parameter.	

# 16.3 Remote Control Button

### 16.3.1 SET Button

- To check remote control transmission code and store the transmission code to EEPROM:
- Press "Set" button by using pointer.
- Press "Timer Set" button until a "beep" sound is heard as confirmation of transmission code changed.
- To limit set temperature range for COOL & DRY, HEAT mode.
  - Press "Set" button by using pointer.
  - Press TEMP increment or decrement button to choose No. 3.
  - Press Timer increment or decrement button to select desired temperature low limit of set temperature for COOL & DRY mode.
  - $\circ$   $\;$  Press Timer Set button to confirm low limit selection.
  - Press TEMP increment or decrement button to choose No. 4.
  - Press Timer decrement or increment button to select desired temperature high limit of set temperature for COOL & DRY mode.
  - $\circ$   $\;$  Press Timer Set button to confirm high limit selection.
  - Press TEMP increment or decrement button to choose No. 5.
  - Press Timer increment or decrement button to select desired temperature low limit of set temperature for HEAT mode.
  - $\circ$   $\;$  Press Timer Set button to confirm low limit selection.
  - Press TEMP increment or decrement button to choose No. 6.
  - Press Timer decrement or increment button to select desired temperature high limit of set temperature for HEAT mode.
  - Press Timer Set button to confirm high limit selection.
  - LCD returns to original display if remote control does not operate for 30 seconds or press Timer Cancel button.

# 16.3.2 RESET (RC)

- To clear and restore the remote control setting to factory default.
  - Press once to clear the memory.

# 16.3.3 RESET (AC)

To restore the unit's setting to factory default.
 Press once to restore the unit's setting.

### 16.3.4 TIMER ▲


- To change indoor unit indicator's LED intensity.
  - Press continuously for 5 seconds.

### 16.3.5 TIMER ▼


To change remote control display from Degree Celsius (°C) to Degree Fahrenheit (°F).
 Press continuously for 10 seconds.


# 16.3.6 Special Setting mode

1 LCD display area:

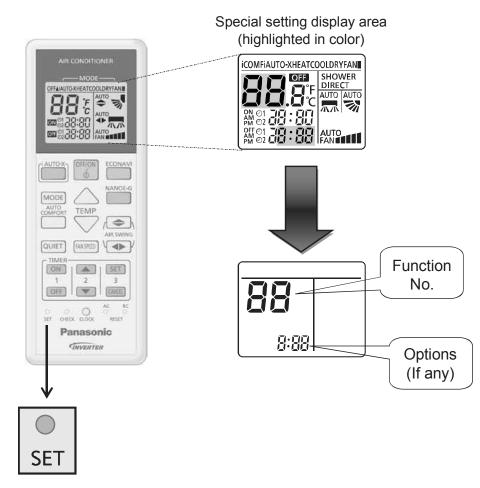

- 2 Cannot enter this special setting mode under the following conditions: 1 Operation ON.
  - <sup>(2)</sup> Under [Real/ON/OFF] time setting mode.
- 3 To enter zone 1 area:

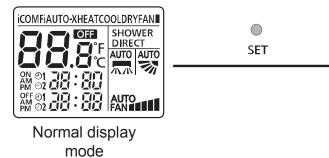


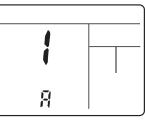

Enter Zone1 [range (1~49)]

≽

4 To enter zone 2 area: (Press SET continuosly for  $T \ge 5$  secs)

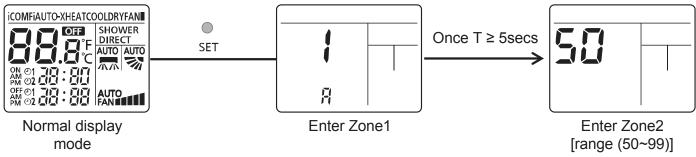

5 Function & Options list:

Note: The functions described in the table may not be applicable to the model and may subject to change without further notice.

		Function	Onting	Remark
	No	Name	Options	
	1	Remote control number selection	A, B, C, D	
	2	Solar radiation sensitivity level adjustment	1, 2, 3, 4, 5	
	3	[iAUTO-X/iAUTO/iCOMF, Cool & Dry] mode set temperature [Low2] selection	16°C ~ [High2]	
	4	[iAUTO-X/iAUTO/iCOMF, Cool & Dry] mode set temperature [High2] selection	[Low2] ~ 30°C	
	5	Heat mode set temperature Low1 selection	16°C ~ [High1]	
Zone 1	6	Heat mode set temperature High1 selection	[Low1] ~ 30°C	
	7	Filter cleaning enable/disable selection	00 / 01	
	8	nanoe-G default ON enable/disable selection	00 / 01	
	9	Dust sensor monitoring & LED enable/disable selection	00 / 01	
	10	Auto restart enable/disable selection	00 / 01	
	11	Dust sensor sensitivity level adjustment	1, 2, 3	
	12 ~ 49	Reserve		
	50	ECO demo ON	None (No display)	
	51	Light sensor check	None (No display)	
	52	nanoe-G / ECO sensor check	None (No display)	
	53	DOA check	None (No display)	
	54	Odor cut control selection [Enable (01) / Disable (00)]	00 / 01	
	55	Frequency tolerance selection [±3Hz (03) / ±7Hz (07)]	03 / 07	
	56	Fixed fan speed selection during heat mode compressor OFF	00 / 01	
	57	nanoe check	None (No display)	
Zone 2	58	Heat mode thermo shift adjustment	-3°C ~ 3°C	
	59	Others (Cool & Dry) mode thermo shift adjustment	-3°C ~ 3°C	
	60	Deice start determination judgment temperature switching	00 / 01	
	61	Cool mode disable selection [Yes (01) / No (00)]	00 / 01	
	62	Heat mode disable selection [Yes (01) / No (00)]	00 / 01	
	63	Base pan heater selection [A/ b]	A / b	
	64	Fan Speed reduction during cool mode thermo-Off [Enable (01) / Disable (00)]	00 / 01	
	65 ~ 99	Reserve		

# 17. Troubleshooting Guide

# 17.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle. Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan. The normal outlet air temperature and pressure of the refrigeration cycle depends on various conditions, the standard values for them are shown in the table on the right.

Normal Pressure and Outlet Air Temperature (Standard)


	Gas pressure MPa (kg/cm²G)	Outlet air temperature (°C)
Cooling Mode	0.9 ~ 1.2 (9 ~ 12)	12 ~ 16
Heating Mode	2.3 ~ 2.9 (23 ~ 29)	36 ~ 45

★ Condition: • Indoor fan speed; High

• Outdoor temperature 35°C at cooling

mode and 7°C at heating mode.

· Compressor operates at rated frequency

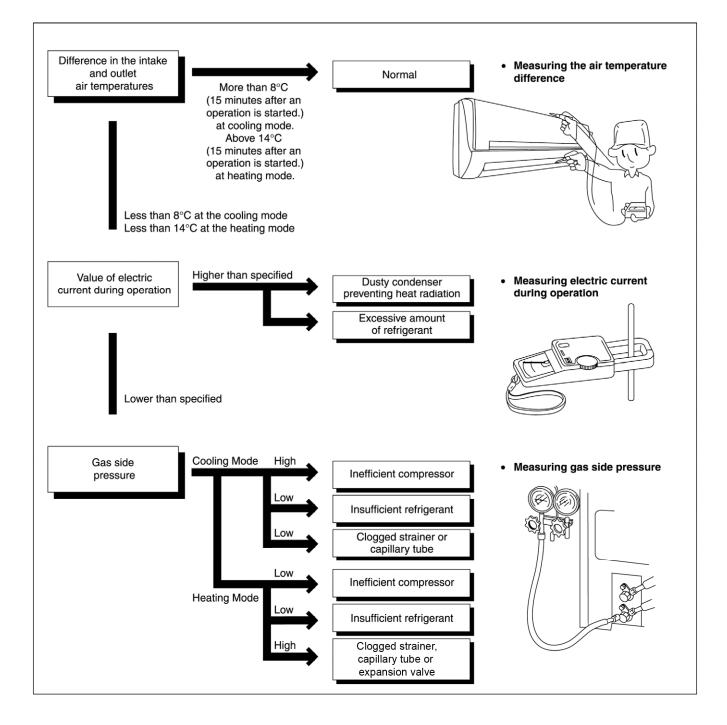

# 17.2 Relationship Between the Condition of the Air Conditioner and Pressure and Electric Current

Condition of the	Cooling Mode			Heating Mode		
air conditioner	Low Pressure	High Pressure	Electric current during operation	Low Pressure	High Pressure	Electric current during operation
Insufficient refrigerant (gas leakage)	R	ч	ч	ч	ч	ч
Clogged capillary tube or Strainer	ĸ	И	ч	7	7	7
Short circuit in the indoor unit	R	ч	ч	7	7	7
Heat radiation deficiency of the outdoor unit	Л	7	л	ч	И	У
Inefficient compression	Я	Ľ	ч	Я	И	и И

• Carry out the measurements of pressure, electric current, and temperature fifteen minutes after an operation is started.

# 17.3 Breakdown Self Diagnosis Function

# 17.3.1 Self Diagnosis Function (Three Digits Alphanumeric Code)

- Once abnormality has occurred during operation, the unit will stop its operation, and Timer LEDs blink.
- Although Timer LED goes off when power supply is turned off, if the unit is operated under a breakdown condition, the LED will light up again.
- In operation after breakdown repair, the Timer LED will no more blink. The last error code (abnormality) will be stored in IC memory.

# 17.3.2 To Make a Diagnosis

- 1 Timer LED start to blink and the unit automatically stops the operation.
- 2 Press the CHECK button on the remote controller continuously for 5 seconds.
- 3 "--" will be displayed on the remote controller display.
   Note: Display only for "--". (No transmitting signal, no receiving sound and no Power LED blinking.)
- 4 Press the "TIMER" ▲ or ▼ button on the remote controller. The code "H00" (no abnormality) will be displayed and signal will be transmitted to the main unit.
- 5 Every press of the button (up or down) will increase abnormality numbers and transmit abnormality code signal to the main unit.
- 6 When the latest abnormality code on the main unit and code transmitted from the remote controller are matched, power LED will light up for 30 seconds and a beep sound (continuously for 4 seconds) will be heard. If no codes are matched, power LED will light up for 0.5 seconds and no sound will be heard.
- 7 The breakdown diagnosis mode will be canceled by pressing the CHECK button continuously for 5 seconds or without any operation the remote control for 30 seconds.
- 8 The LED will be off if the unit is turned off or the RESET button on the main unit is pressed.


#### 17.3.3 To Display Memorized Error Code (Protective Operation) status:

- 1 Turn power on.
- 2 Press the CHECK button on the remote controller continuously for 5 seconds.
- 3 "- -" will be displayed on the remote controller display.
   Note: Display only for "- -". (No transmitting

signal, no receiving sound and no Power LED blinking.)

4 Press the "TIMER" ▲ or ▼ button on the remote controller. The code "H00" (no abnormality) will be displayed and signal will be transmitted to the main unit. The power LED lights up. If no abnormality is stored in the memory, three beeps sound will be heard.

- 5 Every press of the button (up or down) will increase abnormality numbers and transmit abnormality code signal to the main unit.
- 6 When the latest abnormality code on the main unit and code transmitted from the remote controller are matched, power LED will light up for 30 seconds and a beep sound (continuously for 4 seconds) will be heard. If no codes are matched, power LED will light up for 0.5 seconds and no sound will be heard.
- 7 The breakdown diagnosis mode will be canceled unless pressing the CHECK button continuously for 5 seconds or operating the unit for 30 seconds.
- 8 The same diagnosis can be repeated by turning power on again.

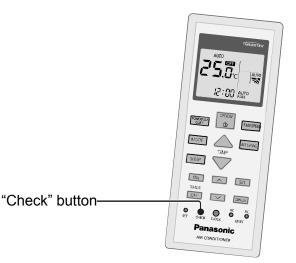

### 17.3.4 To Clear Memorized Error (Protective Operation) Status after Repair:

- 1 Turn power on (in standby condition).
- 2 Press the AUTO button for 5 seconds (A beep receiving sound) on the main unit to operate the unit at Forced Cooling Operation mode.
- 3 Press the CHECK button on the remote controller for about 1 second with a pointed object to transmit signal to main unit. A beep sound is heard from main unit and the data is cleared.

### 17.3.5 Temporary Operation (Depending On Breakdown Status)

- 1 Press the AUTO button (A beep receiving sound) on the main unit to operate the unit. (Remote control will become possible.)
- 2 The unit can temporarily be used until repaired.

Error Code	Operation	Temporary items
H23	Cooling	Emergency
H27, H28	Cooling, Heating	Operation with
H26	Cooling, Heating	limited power

# 17.4 Error Codes Table

Diagnosis display	Abnormality / Protection control	Abnormality Judgment	Protection Operation	Problem	Check location
H00	No memory of failure	-	Normal operation	_	_
H11	Indoor/outdoor abnormal communication	After operation for 1 minute	Indoor fan only operation can start by entering into force cooling operation	Indoor/outdoor communication not establish	<ul> <li>Indoor/outdoor wire terminal</li> <li>Indoor/outdoor PCB</li> <li>Indoor/outdoor connection wire</li> </ul>
H12	Indoor unit capacity unmatched	90s after power supply	_	Total indoor capability more than maximum limit or less than minimum limit, or number of indoor unit less than two	<ul> <li>Indoor/outdoor connection wire</li> <li>Indoor/outdoor PCB</li> <li>Specification and combination table in catalogue</li> </ul>
H14	Indoor intake air temperature sensor abnormality	Continuous for 5s	_	Indoor intake air temperature sensor open or short circuit	Indoor intake air temperature sensor lead wire and connector
H15	Compressor temperature sensor abnormality	Continuous for 5s	_	Compressor temperature sensor open or short circuit	Compressor temperature     sensor lead wire and connector
H16	Outdoor current transformer (CT) abnormality	_	_	Current transformer faulty or compressor faulty	Outdoor PCB faulty or compressor faulty
H19	Indoor fan motor merchanism lock	Continuous happen for 7 times	_	Indoor fan motor lock or feedback abnormal	<ul> <li>Fan motor lead wire and connector</li> <li>Fan motor lock or block</li> </ul>
H23	Indoor heat exchanger temperature sensor abnormality	Continuous for 5s	_	Indoor heat exchanger temperature sensor open or short circuit	<ul> <li>Indoor heat exchanger temperature sensor lead wire and connector</li> </ul>
H24	Indoor heat exchanger temperature sensor 2 abnormality	Continuous for 5s	_	Indoor heat exchanger temperature sensor 2 open or short circuit	<ul> <li>Indoor heat exchanger temperature sensor 2 lead wire and connector</li> </ul>
H25	Indoor ion device abnormality	Port is ON for 10s during ion device off	_	_	ion device PCB
H27	Outdoor air temperature sensor abnormality	Continuous for 5s	_	Outdoor air temperature sensor open or short circuit	Outdoor air temperature sensor lead wire and connector
H28	Outdoor heat exchanger temperature sensor 1 abnormality	Continuous for 5s	_	Outdoor heat exchanger temperature sensor 1 open or short circuit	Outdoor heat exchanger temperature sensor 1 lead wire and connector
H30	Outdoor discharge pipe temperature sensor abnormality	Continuous for 5s	_	Outdoor discharge pipe temperature sensor open or short circuit	<ul> <li>Outdoor discharge pipe temperature sensor lead wire and connector</li> </ul>
H32	Outdoor heat exchanger temperature sensor 2 abnormality	Continuous for 5s	_	Outdoor heat exchanger temperature sensor 2 open or short circuit	Outdoor heat exchanger temperature sensor 2 lead wire and connector
H33	Indoor / outdoor misconnection abnormality	_	_	Indoor and outdoor rated voltage different	Indoor and outdoor units check
H34	Outdoor heat sink temperature sensor abnormality	Continuous for 2s	_	Outdoor heat sink temperature sensor open or short circuit	Outdoor heat sink sensor
H36	Outdoor gas pipe temperature sensor abnormality	Continuous for 5s	Heating protection operation only	Outdoor gas pipe temperature sensor open or short circuit	Outdoor gas pipe temperature sensor lead wire and connector
H37	Outdoor liquid pipe temperature sensor abnormality	Continuous for 5s	Cooling protection operation only	Outdoor liquid pipe temperature sensor open or short circuit	Outdoor liquid pipe temperature sensor lead wire and connector
H38	Indoor/Outdoor mismatch (brand code)	_	_	Brand code not match	Check indoor unit and outdoor unit
H39	Abnormal indoor operating unit or standby units	3 times happen within 40 minutes	_	Wrong wiring and connecting pipe, expansion valve abnormality, indoor heat exchanger sensor open circuit	<ul> <li>Check indoor/outdoor connection wire and connection pipe</li> <li>Indoor heat exchanger sensor lead wire and connector</li> <li>Expansion valve and lead wire and connector</li> </ul>

Diagnosis display	Abnormality / Protection control	Abnormality Judgment	Protection Operation	Problem	Check location
H41	Abnormal wiring or piping connection	_	_	Wrong wiring and connecting pipe, expansion valve abnormality	<ul> <li>Check indoor/outdoor connection wire and connection pipe</li> <li>Expansion valve and lead wire and connector</li> </ul>
H59	ECONAVI sensor abnormality	Continuous for 25s	_	ECONAVI sensor open or short circuit	<ul> <li>ECONAVI sensor (defective or disconnected)</li> <li>ECONAVI PCB</li> </ul>
H64	Outdoor high pressure sensor abnormality	Continuous for 1 minutes	_	High pressure sensor open circuit during compressor stop	<ul><li>High pressure sensor</li><li>Lead wire and connector</li></ul>
H70	Light sensor abnormality	Continuous for 24 hours, 15days		Light sensor open or short circuit	<ul> <li>Light sensor (defective or disconnected)</li> </ul>
H97	Outdoor fan motor mechanism lock	2 times happen within 30 minutes	_	Outdoor fan motor lock or feedback abnormal	<ul> <li>Outdoor fan motor lead wire and connector</li> <li>Fan motor lock or block</li> </ul>
H98	Indoor high pressure protection	_	_	Indoor high pressure protection (Heating)	<ul> <li>Check indoor heat exchanger</li> <li>Air filter dirty</li> <li>Air circulation short circuit</li> </ul>
H99	Indoor operating unit freeze protection	_	_	Indoor freeze protection (Cooling)	<ul> <li>Check indoor heat exchanger</li> <li>Air filter dirty</li> <li>Air circulation short circuit</li> </ul>
F11	4-way valve switching abnormality	4 times happen within 30 minutes	_	4-way valve switching abnormal	<ul><li> 4-way valve</li><li> Lead wire and connector</li></ul>
F17	Indoor standby units freezing abnormality	3 times happen within 40 minutes	_	Wrong wiring and connecting pipe, expansion valve leakage, indoor heat exchanger sensor open circuit	<ul> <li>Check indoor/outdoor connection wire and pipe</li> <li>Indoor heat exchanger sensor lead wire and connector</li> <li>Expansion valve lead wire and connector</li> </ul>
F90	Power factor correction (PFC) circuit protection	4 times happen within 10 minutes	_	Power factor correction circuit abnormal	Outdoor PCB faulty
F91	Refrigeration cycle abnormality	2 times happen within 20 minutes	_	Refrigeration cycle abnormal	Insufficient refrigerant or valve close
F93	Compressor abnormal revolution	4 times happen within 20 minutes	—	Compressor abnormal revolution	Power transistor module faulty or compressor lock
F94	Compressor discharge overshoot protection	4 times happen within 30 minutes	—	Compressor discharge pressure overshoot	Check refrigeration system
F95	Outdoor cooling high pressure protection	4 times happen within 20 minutes	—	Cooling high pressure protection	<ul><li>Check refrigeration system</li><li>Outdoor air circuit</li></ul>
F96	Power transistor module overheating protection	4 times happen within 30 minutes		Power transistor module overheat	<ul><li>PCB faulty</li><li>Outdoor air circuit (fan motor)</li></ul>
F97	Compressor overheating protection	3 times happen within 30 minutes	_	Compressor overheat	Insufficient refrigerant
F98	Total running current protection	3 times happen within 20 minutes	-	Total current protection	<ul> <li>Check refrigeration system</li> <li>Power source or compressor lock</li> </ul>
F99	Outdoor direct current (DC) peak detection	Continuous happen for 7 times	_	Power transistor module current protection	Power transistor module faulty or compressor lock

# 17.5 Self-diagnosis Method


### 17.5.1 H11 (Indoor/Outdoor Abnormal Communication)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

#### **Malfunction Caused**

- Faulty indoor unit PCB.
- Faulty outdoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.

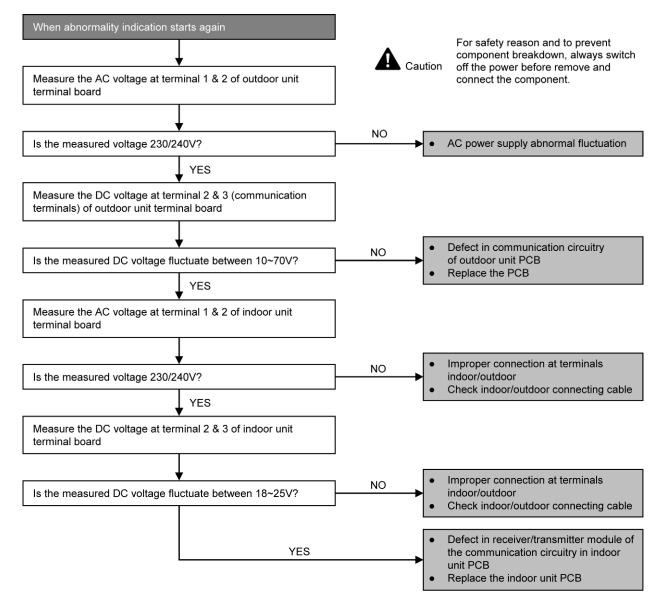


# 17.5.2 H12 (Indoor/Outdoor Capacity Rank Mismatched)

#### **Malfunction Decision Conditions**

• During startup, error code appears when different types of indoor and outdoor units are interconnected.

#### **Malfunction Caused**

- Wrong models interconnected.
- Wrong indoor unit or outdoor unit PCBs mounted.
- Indoor unit or outdoor unit PCBs defective.
- Indoor-outdoor unit signal transmission error due to wrong wiring.
- Indoor-outdoor unit signal transmission error due to breaking of wire 3 in the connection wires between the indoor and outdoor units.

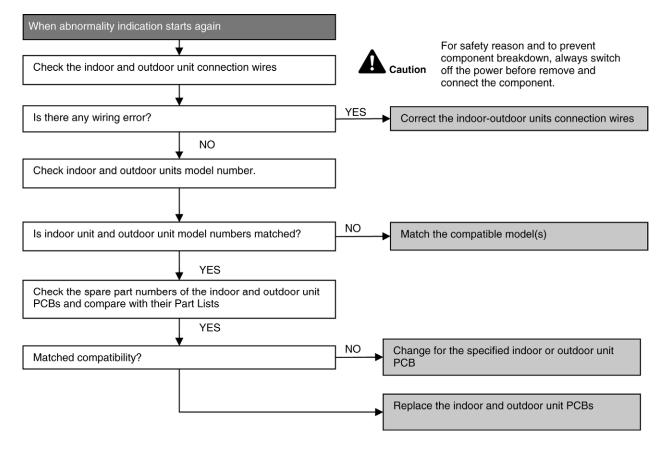


### 17.5.3 H14 (Indoor Intake Air Temperature Sensor Abnormality)


#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the indoor intake air temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

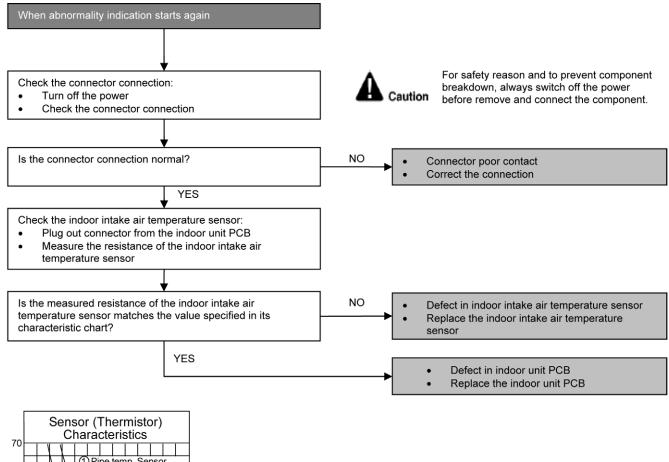

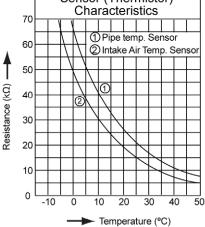

#### 17.5.4 H15 (Compressor Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

During startup and operation of cooling and heating, the temperatures detected by the outdoor compressor • temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

#### Troubleshooting

30

20

10

0

20

40

60


80

Temperature (°C)

100

120

140

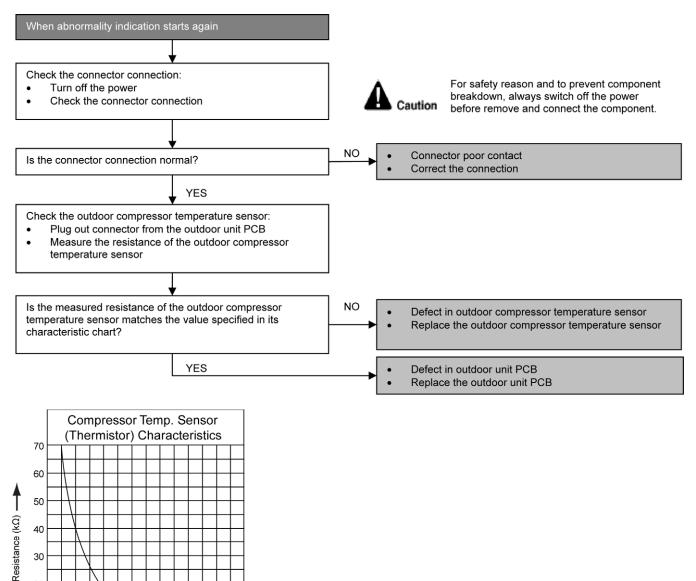


# 17.5.5 H16 (Outdoor Current Transformer)

#### **Malfunction Decision Conditions**

• An input current, detected by Current Transformer CT, is below threshold value when the compressor is operating at certain frequency value for 3 minutes.

#### **Malfunction Caused**

- Lack of gas
- Broken CT (current transformer)
- Broken Outdoor PCB

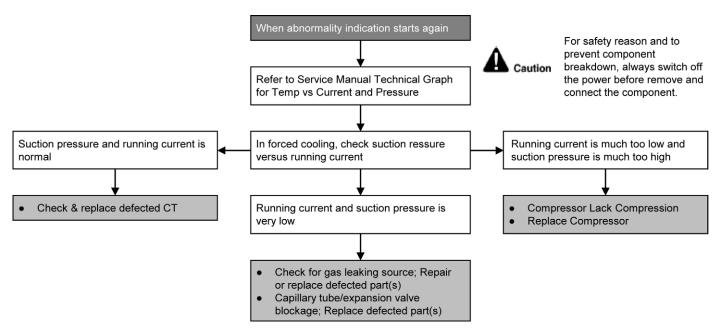


# 17.5.6 H19 (Indoor Fan Motor – DC Motor Mechanism Locked)

#### **Malfunction Decision Conditions**

 The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550rpm or < 50rpm).</li>

#### **Malfunction Caused**

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty indoor unit PCB.

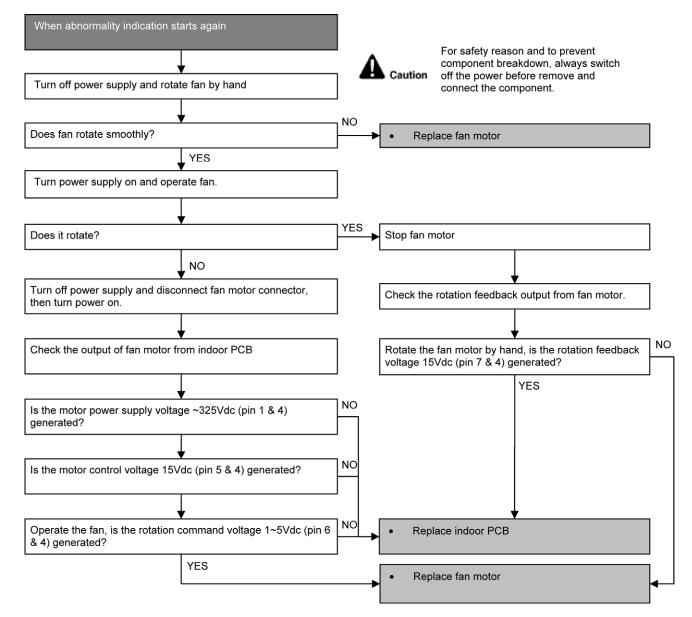


# 17.5.7 H23 (Indoor Pipe Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

 During startup and operation of cooling and heating, the temperatures detected by the indoor heat exchanger temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

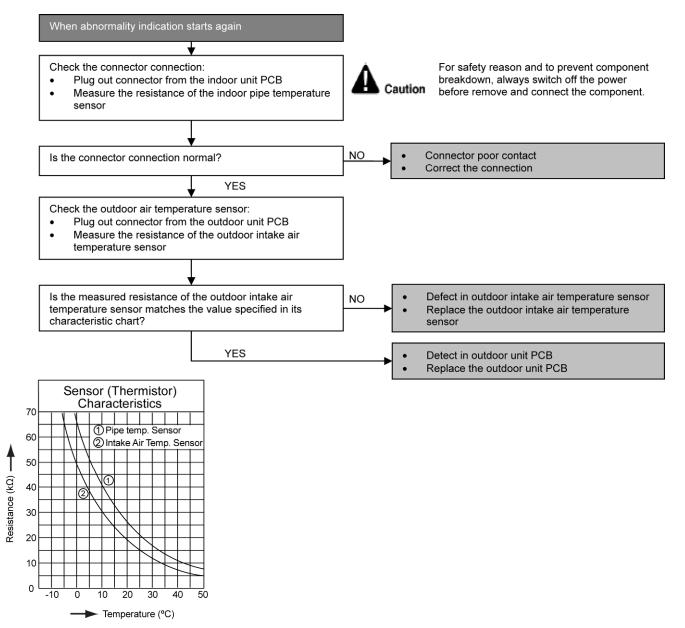


# 17.5.8 H27 (Outdoor Air Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

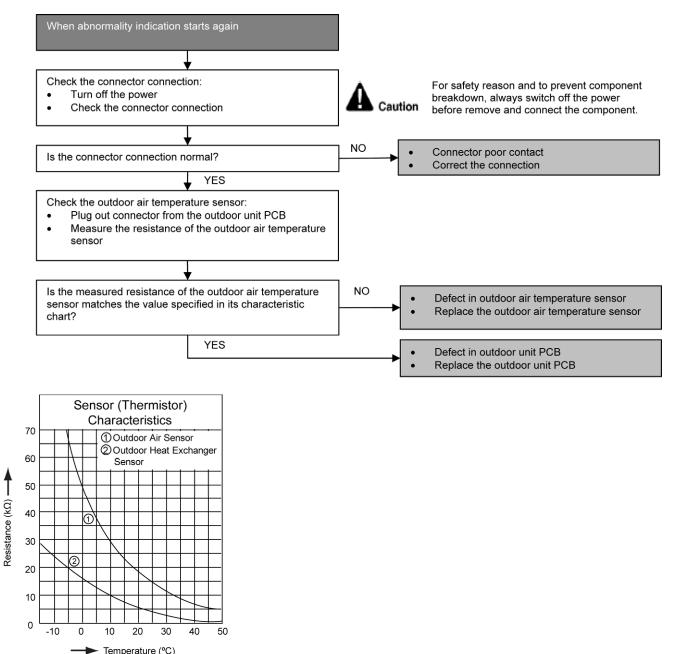


# 17.5.9 H28 (Outdoor Pipe Temperature Sensor Abnormality)


#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor errors.

#### Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

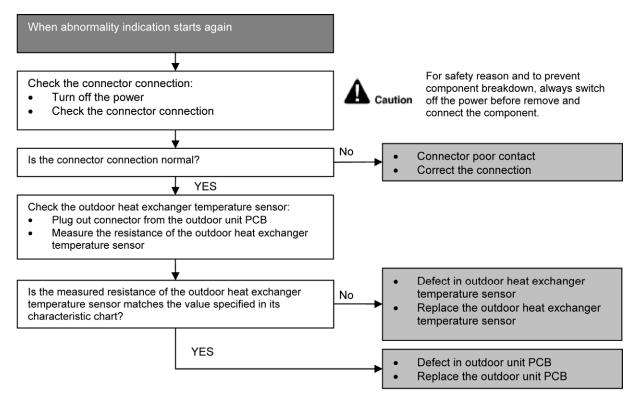

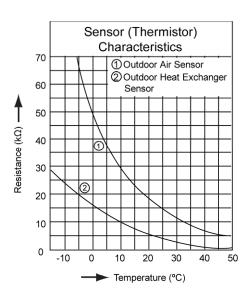


### 17.5.10 H30 (Compressor Discharge Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

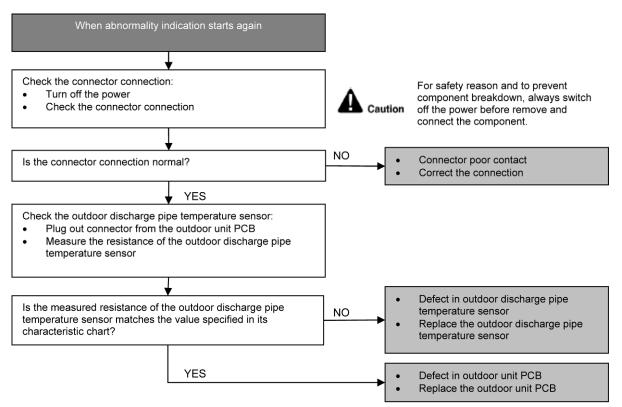


# 17.5.11 H32 (Outdoor Heat Exchanger Temperature Sensor 2 Abnormality)

#### Malfunction Decision Conditions

• During startup and operation of cooling and heating, the temperatures detected by the outdoor heat exchanger temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

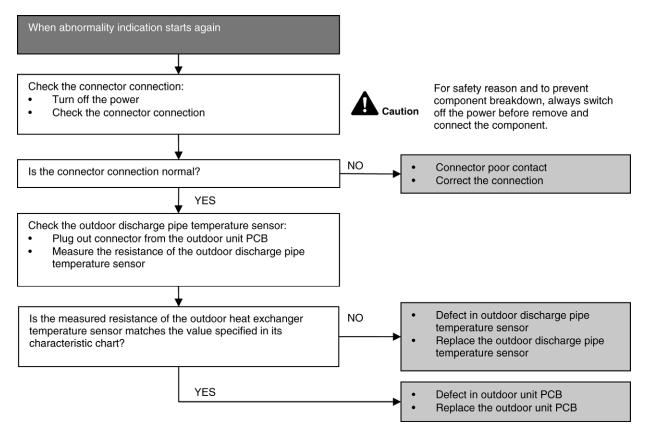


# 17.5.12 H33 (Unspecified Voltage between Indoor and Outdoor)

#### **Malfunction Decision Conditions**

• The supply power is detected for its requirement by the indoor/outdoor transmission.

#### **Malfunction Caused**

- Wrong models interconnected.
- Wrong indoor unit and outdoor unit PCBs used.
- Indoor unit or outdoor unit PCB defective.

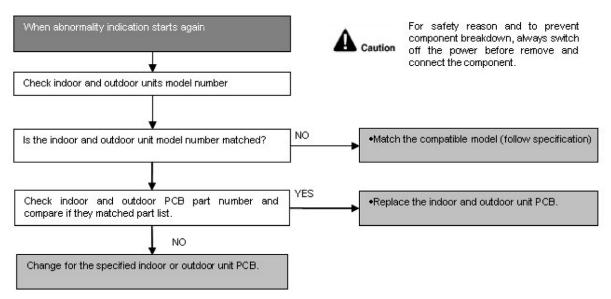


# 17.5.13 H34 (Outdoor Heat Sink Temperature Sensor Abnormality)

### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor heat sink temperature sensor are used to determine sensor errors.

### Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

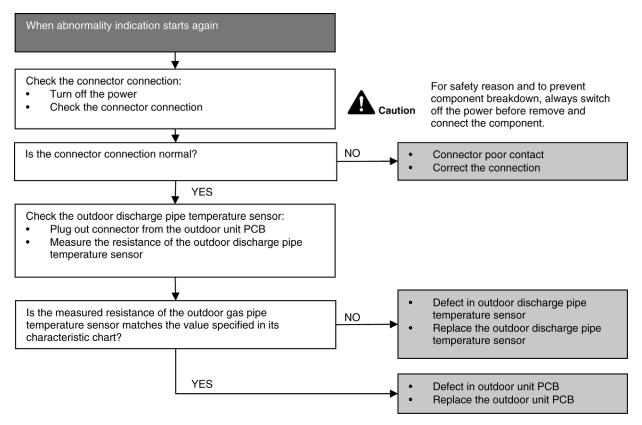


## 17.5.14 H36 (Outdoor Gas Pipe Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor gas pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

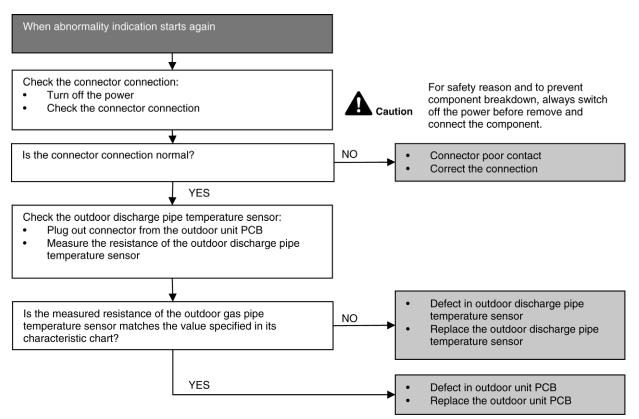


## 17.5.15 H37 (Outdoor Liquid Pipe Temperature Sensor Abnormality)

#### Malfunction Decision Conditions

• During startup and operation of cooling and heating, the temperatures detected by the outdoor liquid pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

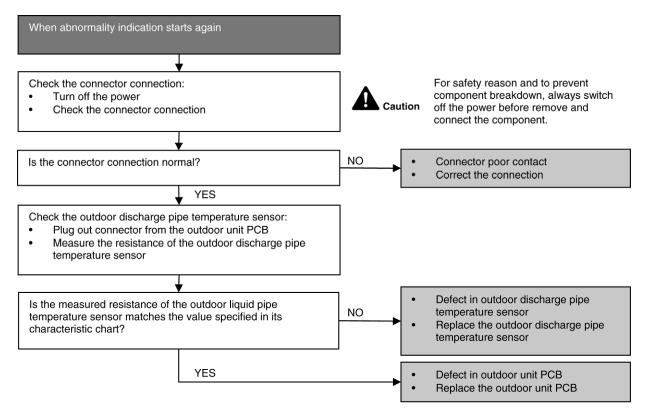


## 17.5.16 H97 (Outdoor Fan Motor – DC Motor Mechanism Locked)

#### **Malfunction Decision Conditions**

• The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor.

#### **Malfunction Caused**

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty outdoor unit PCB.

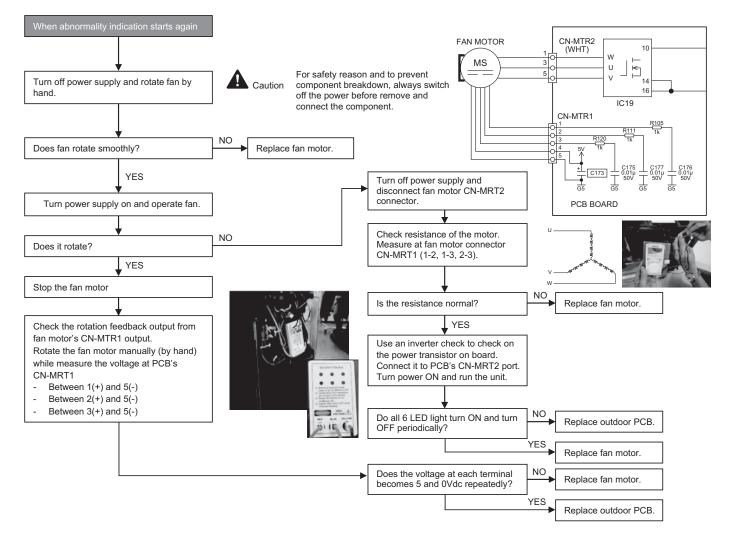


## 17.5.17 H98 (Error Code Stored in Memory and no alarm is triggered / no TIMER LED flashing)

#### **Malfunction Decision Conditions**

- Indoor high pressure is detected when indoor heat exchanger is detecting very high temperature when the unit is operating in heating operation.
- Phenomena: unit is stopping and re-starting very often in heating mode

#### **Malfunction Caused**

- Indoor heat exchanger thermistor
- Clogged air filter or heat exchanger
- Over-bent pipe (liquid side)

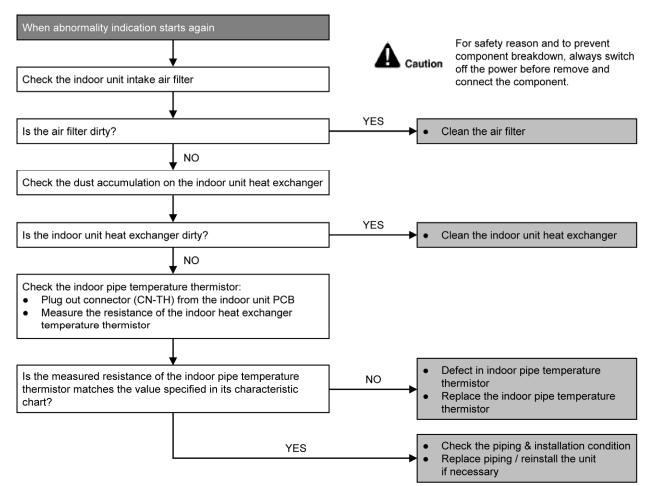

## 17.5.18 H99 (Indoor Freeze Prevention Protection: Cooling or Soft Dry)


#### Error Code will not display (no Timer LED blinking) but store in EEPROM

#### **Malfunction Decision Conditions**

• Freeze prevention control takes place (when indoor pipe temperature is lower than 2°C)

#### **Malfunction Caused**

- Air short circuit at indoor unit
- Clogged indoor unit air filter
- Dust accumulation on the indoor unit heat exchanger
- 2/3 way valve closed
- Faulty indoor unit fan motor
- Refrigerant shortage (refrigerant leakage)
- Clogged expansion valve or strainer
- Faulty indoor pipe temperature sensor
- Faulty indoor unit PCB

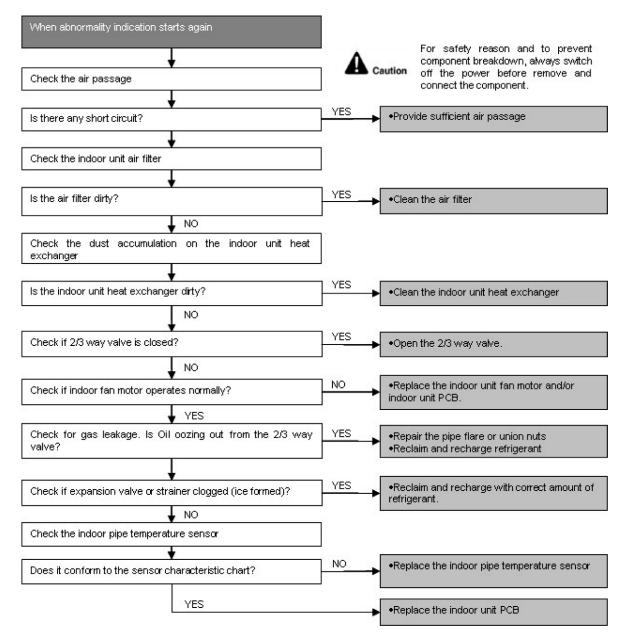

## 17.5.19 F11 (4-way valve Abnormality)


#### **Malfunction Decision Conditions**

 When indoor heat exchanger is cold during heating (except deice) or when indoor heat exchanger is hot during cooling and compressor operating, the 4-way valve is detected as malfunction.

#### **Malfunction Caused**

- Indoor heat exchanger (pipe) thermistor
- 4-way valve malfunction

#### Troubleshooting

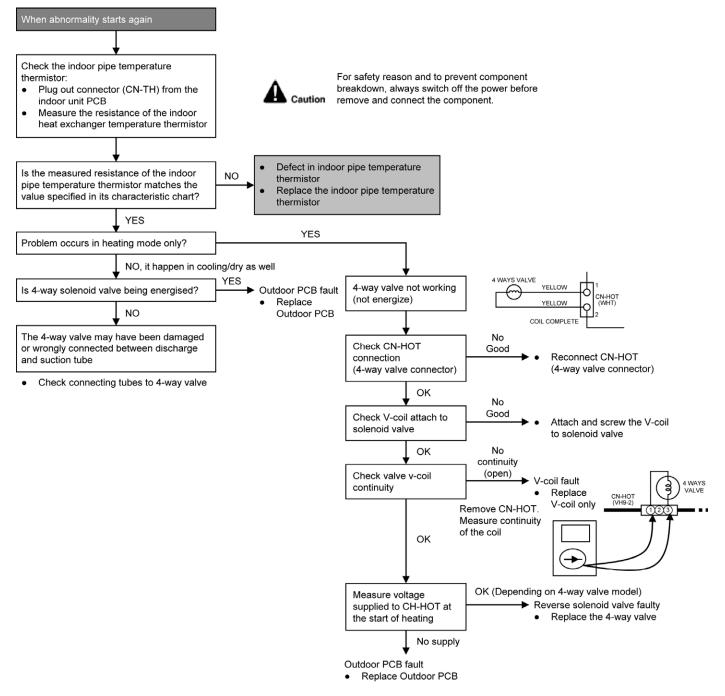

\* Check gas side pipe – for hot gas flow in cooling mode

## 17.5.20 F17 (Indoor Standby Units Freezing Abnormality)

#### **Malfunction Decision Conditions**


 When the different between indoor intake air temperature and indoor pipe temperature is above 10°C or indoor pipe temperature is below -1.0°C.

#### Remark:

When the indoor standby unit is freezing, the outdoor unit transfers F17 error code to the corresponding indoor unit and H39 to other indoor unit(s).

#### **Malfunction Caused**

- Wrong wiring connection
- Faulty sensor
- Faulty expansion valve

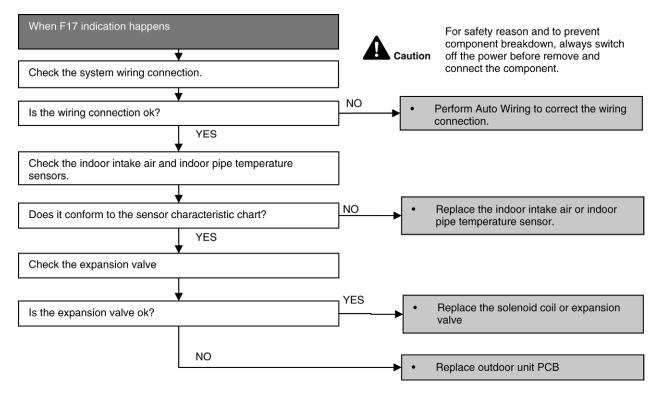


## 17.5.21 F90 (Power Factor Correction Protection)

#### **Malfunction Decision Conditions**

- To maintain DC voltage level supply to power transistor.
- To detect high DC voltage level after rectification.

#### **Malfunction Caused**

- During startup and operation of cooling and heating, when Power Factor Correction (PFC) protection circuitry at the outdoor unit main PCB senses abnormal DC voltage level for power transistors.
- When DC voltage detected is LOW, transistor switching will turn ON by controller to push-up the DC level.
- When DC voltage detected is HIGH (391Vdc 425Vdc), active LOW signal will send by the controller to turn OFF relay RY-C.

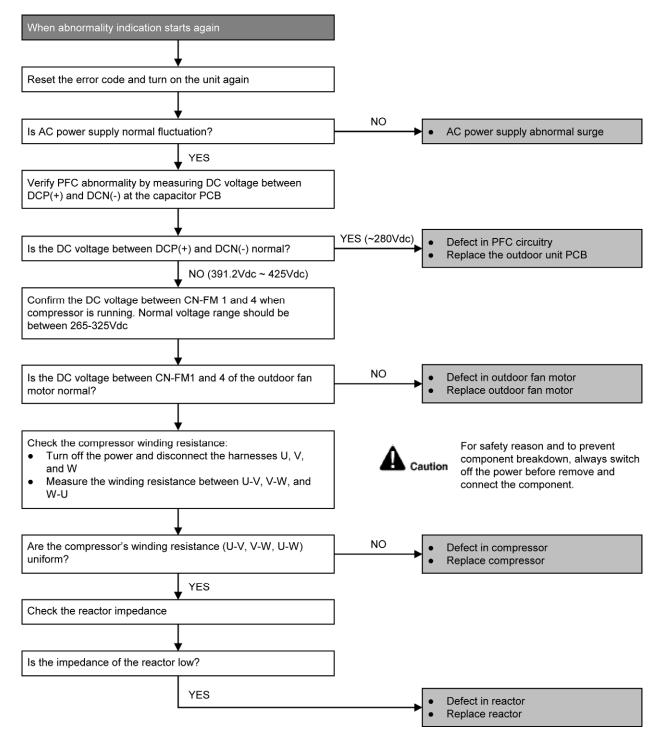


## 17.5.22 F91 (Refrigeration Cycle Abnormality)

#### **Malfunction Decision Conditions**

• The input current is low while the compressor is running at higher than the setting frequency.

#### **Malfunction Caused**

- Lack of gas.
- 3-way valve close.

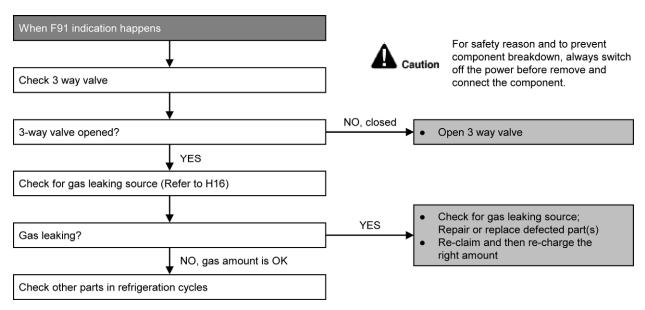


## 17.5.23 F93 (Compressor Rotation Failure)

#### **Malfunction Decision Conditions**

• A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

#### Malfunction Caused

- Compressor terminal disconnect
- Faulty Outdoor PCB
- Faulty compressor

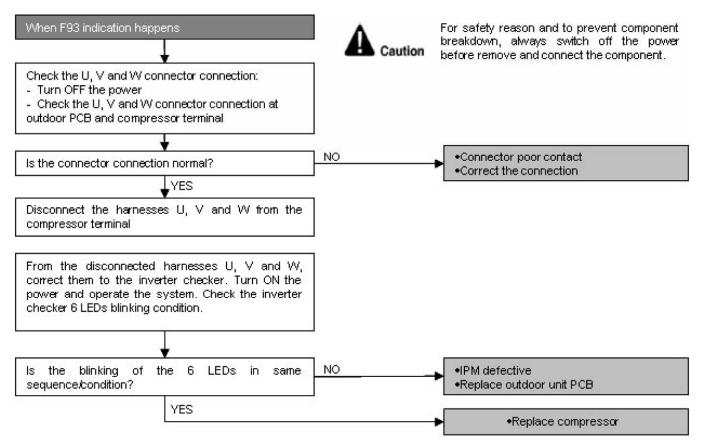


## 17.5.24 F95 (Outdoor High Pressure Protection: Cooling or Soft Dry)

#### **Malfunction Decision Conditions**

 During operation of cooling or soft dry, when outdoor unit heat exchanger high temperature data is detected by the outdoor unit heat exchanger thermistor.

#### **Malfunction Caused**

- Outdoor heat exchanger temperature rise due to short-circuit of hot discharge air flow.
- Outdoor heat exchanger temperature rise due to defective of outdoor fan motor.
- Outdoor heat exchange temperature rise due to defective outdoor heat exchanger thermistor.
- Outdoor heat exchanger temperature rise due to defective of outdoor unit PCB.

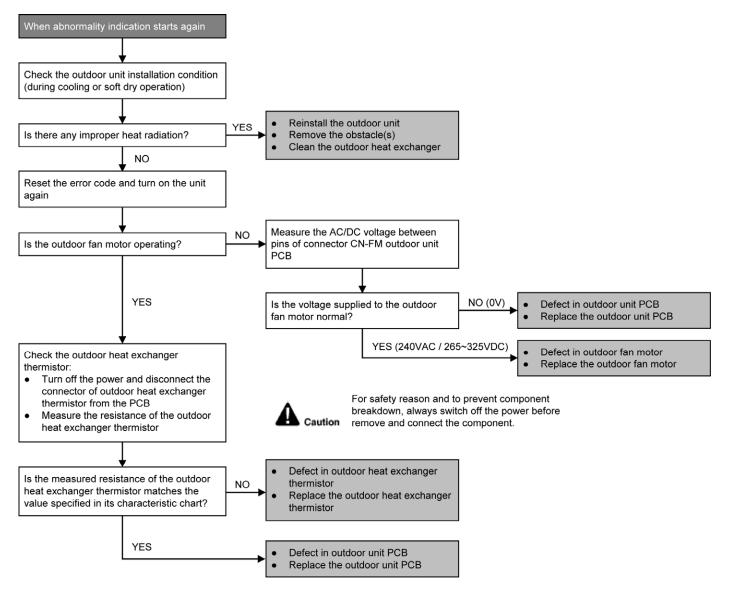

## 17.5.25 F96 (IPM Overheating)

## **Malfunction Decision Conditions**

 During operating of cooling and heating, when IPM temperature data (120°C) is detected by the IPM temperature sensor.

Multi Models Only

- o Compressor Overheating: During operation of cooling and heating, when the compressor OL is activated.
- Heat Sink Overheating: During operation of cooling and heating, when heat sink temperature data (90°C) is detected by the heat sink temperature sensor.

#### **Malfunction Caused**

- IPM overheats due to short circuit of hot discharge air flow.
- IPM overheats due to defective of outdoor fan motor.
- IPM overheats due to defective of internal circuitry of IPM.
- IPM overheats due to defective IPM temperature sensor.

Multi Models Only

- Compressor OL connector poor contact.
- Compressor OL faulty.

When F96 indication happens Check the outdoor unit installation condition (during cooling or soft-dry operation)	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.
Is there any improper heat radiation?	YES	<ul> <li>Reinstall the outdoor unit</li> <li>Remove the obstacle(s)</li> <li>Clean the outdoor heat exchanger</li> </ul>
NO		
Is outdoor fan motor operating?	NO	<ul> <li>Replace the outdoor fan motor.</li> </ul>
YES		
		<ul> <li>Defect in IPM</li> <li>Replace the outdoor unit PCB</li> </ul>


## 17.5.26 F97 (Compressor Overheating)

#### **Malfunction Decision Conditions**

• During operation of cooling and heating, when compressor tank temperature data (112°C) is detected by the compressor tank temperature sensor.

#### **Malfunction Caused**

- Faulty compressor tank temperature sensor
- 2/3 way valve closed
- Refrigerant shortage (refrigerant leakage)
- Faulty outdoor unit PCB
- Faulty compressor

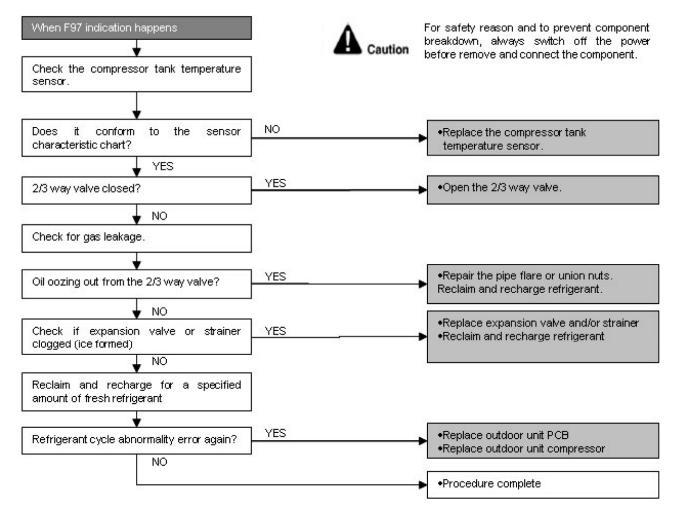


## 17.5.27 F98 (Input Over Current Detection)

#### **Malfunction Decision Conditions**

• During operation of cooling and heating, when an input over-current (X value in Total Running Current Control) is detected by checking the input current value being detected by current transformer (CT) with the compressor running.

#### **Malfunction Caused**

- Excessive refrigerant.
- Faulty outdoor unit PCB.

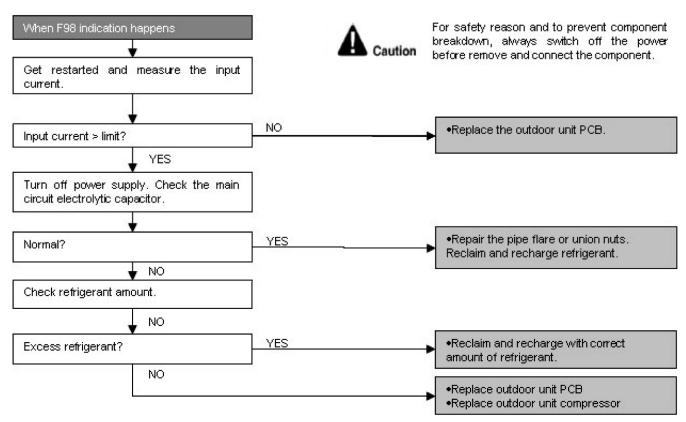


## 17.5.28 F99 (DC Peak Detection)

#### **Malfunction Decision Conditions**

During startup and operation of cooling and heating, when inverter DC peak data is received by the outdoor internal DC Peak sensing circuitry.

#### **Malfunction Caused**

- DC current peak due to compressor failure.
- DC current peak due to defective power transistor(s).
- DC current peak due to defective outdoor unit PCB.
- DC current peak due to short circuit.

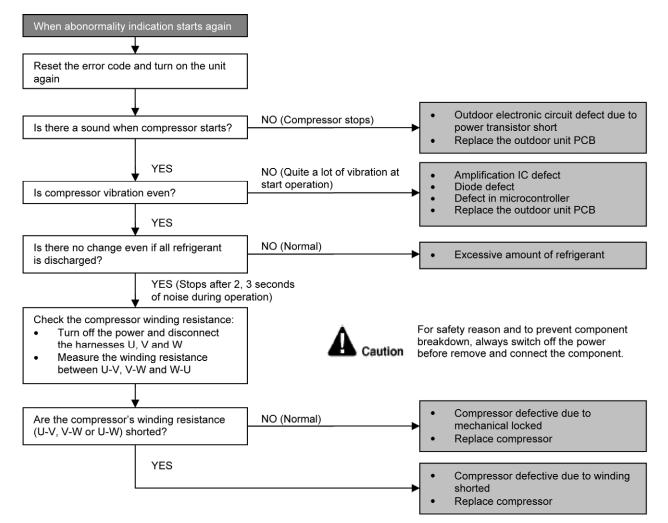


## 18. Disassembly and Assembly Instructions

High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.

## 18.1 CS-FZ25UKE CS-FZ35UKE

18.1.1 Indoor Electronic Controllers, Cross Flow Fan and Indoor Fan Motor Removal Procedures

## 18.1.1.1 To Remove Front Grille

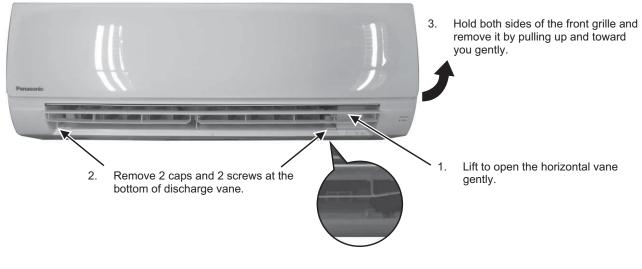



18.1.1.2 To Remove Electronic Controller



 Remove the Control Board cover by releasing the hook.


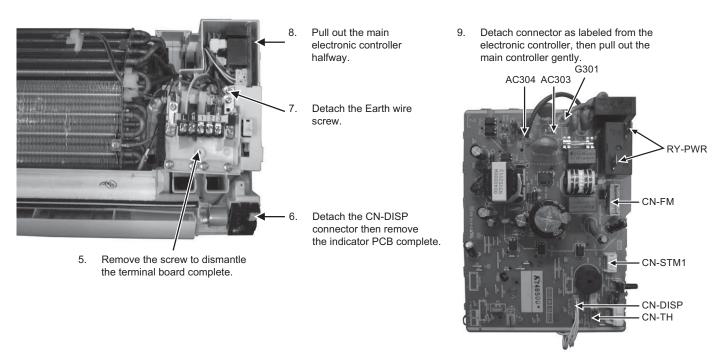


Figure 4







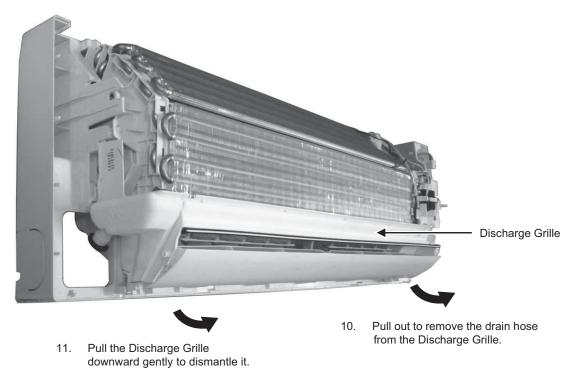

## 18.1.1.4 To Remove Control Board

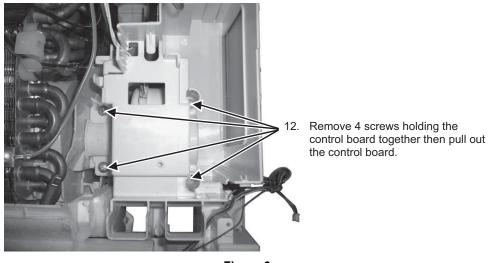


Figure 6

18.1.1.5 To Remove Cross Flow Fan and Indoor Fan Motor



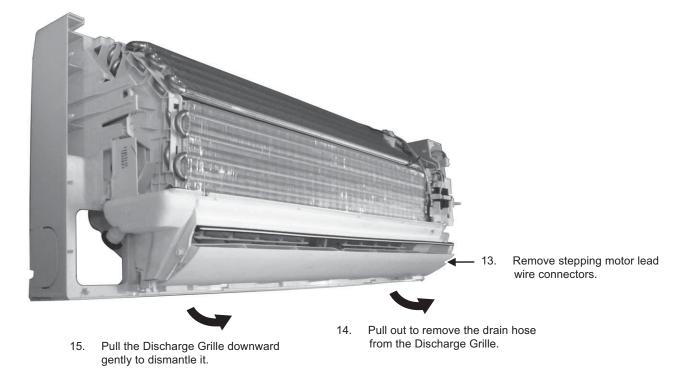


Figure 7

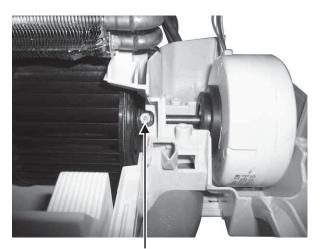


16. Remove the screw that holds the cross flow fan and the fan motor shaft.

Figure 8

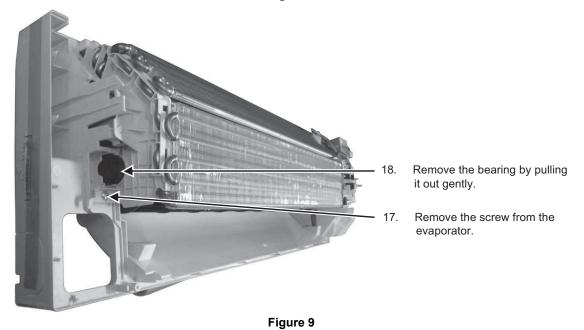

127

19. Push the holdfast to the left and lift up the evaporator.

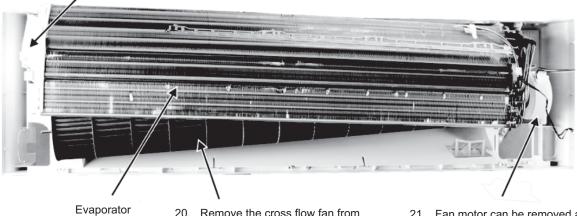


20. Remove the cross flow fan from the unit by pulling it to the left and downward.

21. Fan motor can be removed after the removal of cross flow fan.

Reminder: To reinstall the fan motor, adjust the fan motor connector to 45° towards you before fixing control board.

Figure 10

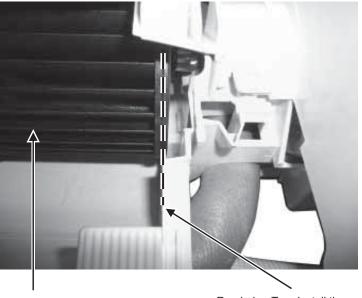

Cross Flow Fan

Reminder: To reinstall the cross flow fan, please ensure cross flow fan is in line as shown in figure 11.


#### 

High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.


## 18.2 CS-FZ50UKE

#### 18.2.1 Indoor Electronic Controllers, Cross Flow Fan and Indoor Fan Motor Removal Procedures

## 18.2.1.1 To Remove Front Grille

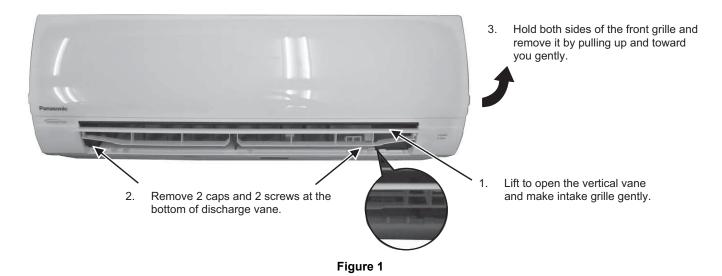

18.2.1.2 To Remove Electronic Controller

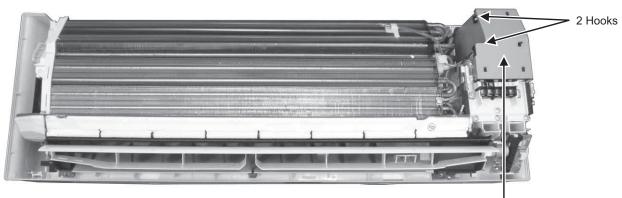

4. Remove the control board cover by releasing 2 hooks.

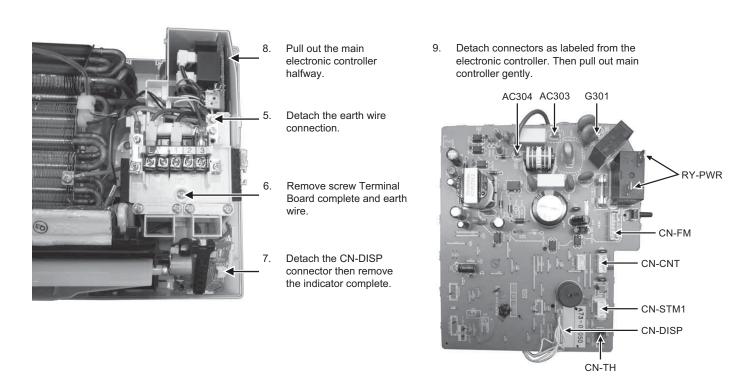


Figure 4

Figure 3






1. Then pull the discharge grille downward gently to dismantle it.

Pull out to remove the drain hose from the discharge grille.


## 18.2.1.4 To Remove Control Board

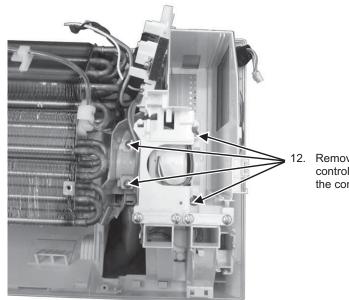


12. Remove 4 screws holding the control board and then pull out the control board.

Figure 6

## 18.2.1.5 To Remove Cross Flow Fan and Indoor Fan Motor

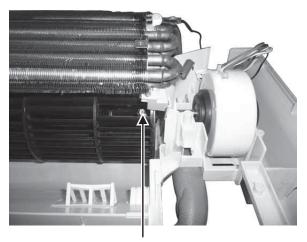



13. Remove the screw that holding the cross flow fan and fan motor shaft.

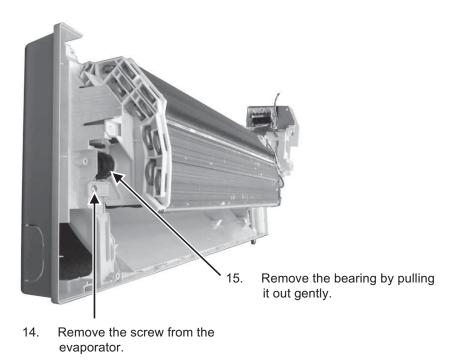

#### Figure 8

16. Push the holdfast to the left and lift up the evaporator.

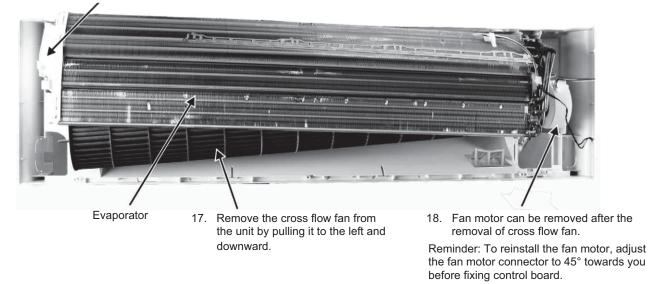

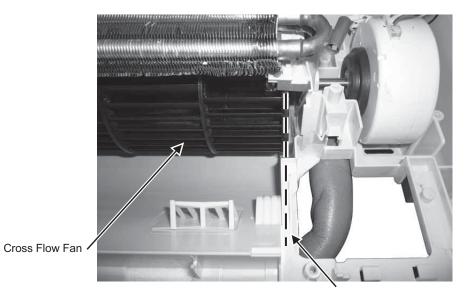

Reminder: To reinstall the cross flow fan, ensure cross flow fan is in line as shown in figure 10.


Figure 10

# High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.

## 18.3 CS-FZ60UKE


## 18.3.1 Indoor Electronic Controllers, Cross Flow Fan and Indoor Fan Motor Removal Procedures

## 18.3.1.1 To Remove Front Grille

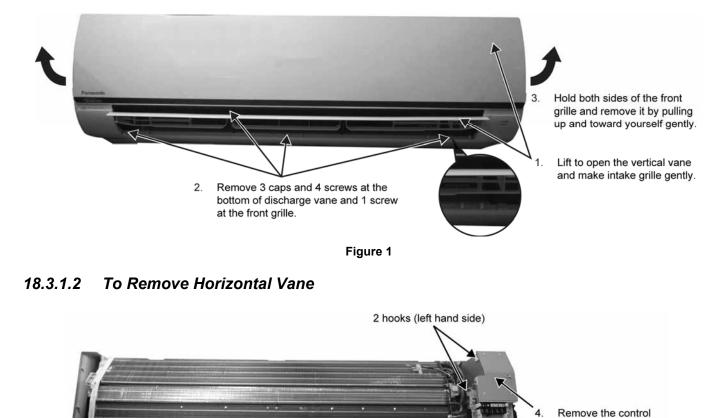

board cover by releasing the 2 books.


Figure 2

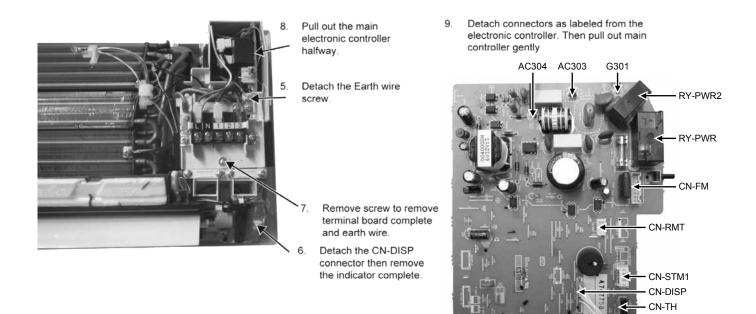


#### Figure 3





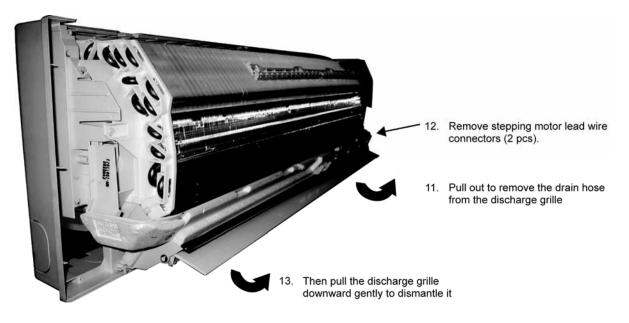

## 18.3.1.4 To Remove Control Board

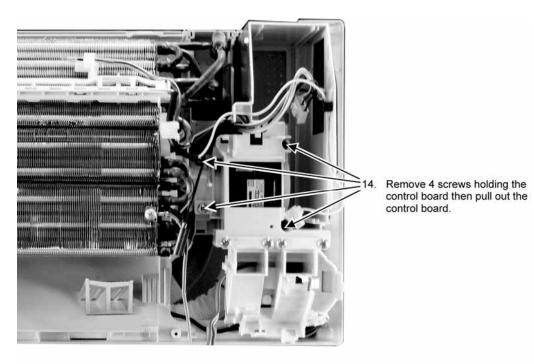

18.3.1.5 To Remove Cross Flow Fan and Indoor Fan Motor


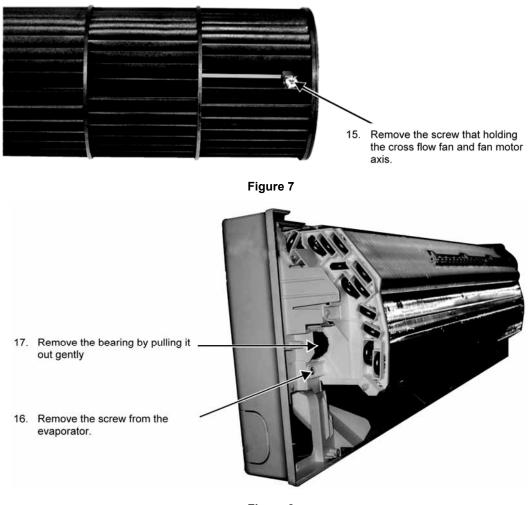


Figure 8

18. Push the holdfast to the left and lift up the evaporator.



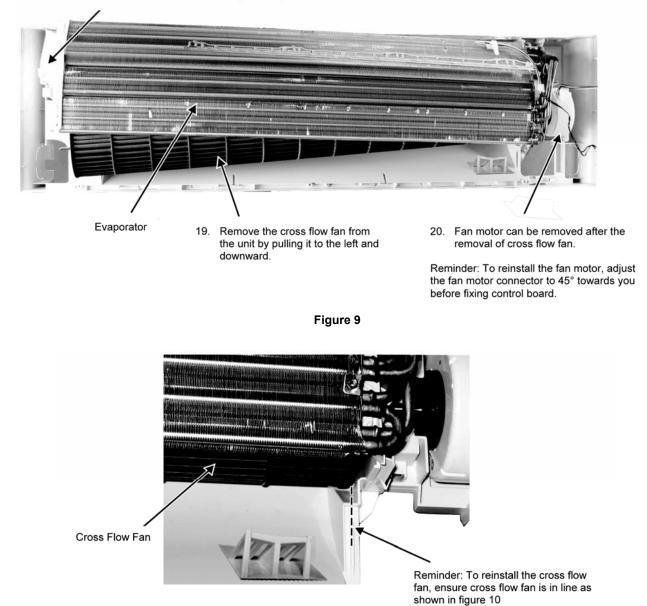

## 18.4 Outdoor Electronic Controller Removal Procedure

## 18.4.1 CU-FZ25UKE CU-FZ35UKE

 $\triangle$  Caution! When handling electronic controller, be careful of electrostatic discharge.

1 Remove the 5 screws of the Top Panel.



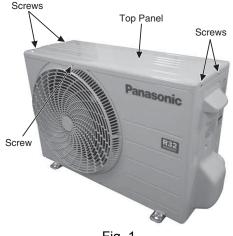


Fig. 1

2 Remove the 6 screws of the Front Panel.

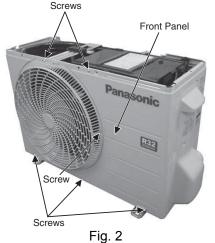

- 3 Remove the screw of the Terminal Board Cover.
- 4 Remove the Top Cover of the Control Board by 4 hooks.

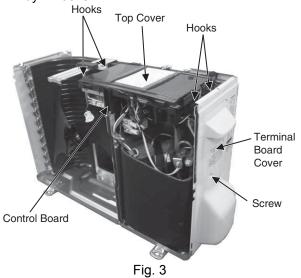

5 Remove the Control Board as follows:

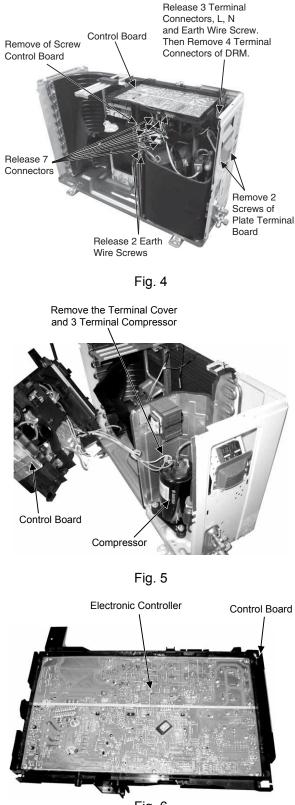


Fig. 6

## 18.4.2 CU-FZ50UKE

 $\Delta$  Caution! When handling electronic controller, be careful of electrostatic discharge.

1. Remove the 5 screws of the Top Panel.

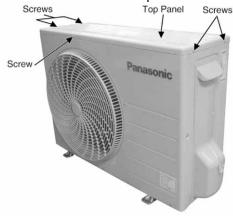


Fig. 1

2. Remove the 8 screws of the Front Panel.

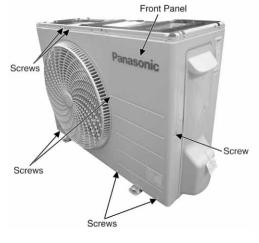


Fig. 2

- 3. Remove the screw of the Terminal Board Cover.
- 4. Remove the Top Cover of the Control Board by 4 hooks.



Fig. 3

5. Remove the Control Board as follows:

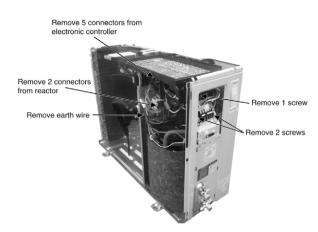
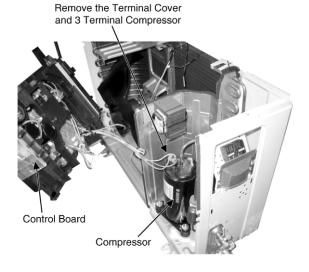


Fig. 4






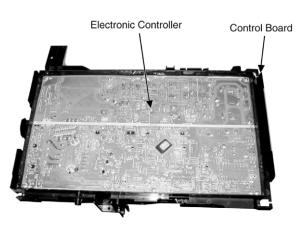



Fig. 6

## 18.4.3 CU-FZ60UKE


- $\triangle$  Caution! When handling electronic controller, be careful of electrostatic discharge.
- 1. Remove the 5 screws of the Top Panel.  $_{\rm Top\ Panel}$

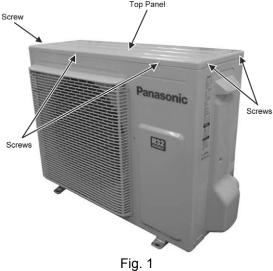


2. Remove the 8 screws of the Front Panel.

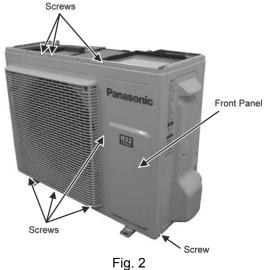

- 3. Remove the screw of the Terminal Board Cover.
- 4. Remove the Top Cover of the Electronic Controller by 4 hooks.

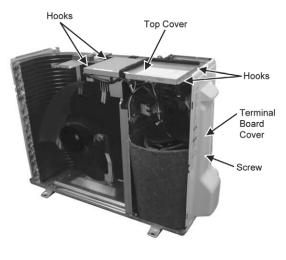

5. Remove 2 screws for the plate of Terminal Board Cover.

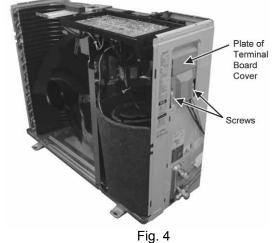

6. Remove the Control Board.


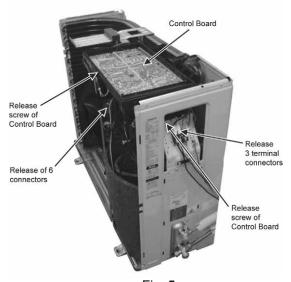


Fig. 5 7. Remove the 4 screws of the Electronic Controller.

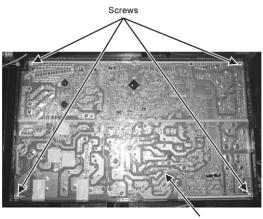

Electronic Controller

Fig. 6

Fig. 3

## **19. Technical Data**

Technical data provided are based on the air conditioner running under free frequency.

## 19.1 Cool Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Cool mode at 16°C Voltage: 230V

## 19.1.1 CS-FZ25UKE CU-FZ25UKE

Indoo	r (°C)										Outd	oor DE	8 (°C)									
			-10			-7			0			5			16			25			35	
DB	WB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	2562	2215	506	2574	2229	503	2585	2197	506	2511	2210	589	2827	2386	402	2635	2332	534	2500	2339	690
21	22.0	2826	1782	512	2781	1781	557	2795	1777	541	2907	1822	469	3113	1938	385	2887	1831	527	2575	1716	693
23	15.7	2289	2266	542	2306	2184	518	2283	2163	566	2297	2274	552	2547	2521	416	2362	2235	539	2090	2069	690
23	18.4	2531	1768	506	2548	1765	490	2566	1776	506	2469	1745	577	2707	1848	405	2577	1823	535	2316	1710	691
20	13.3	2033	2012	619	2014	1994	518	2174	2150	542	2110	2075	566	2396	2372	425	2176	2154	541	1941	1922	689
20	15.8	2309	1744	541	2303	1741	513	2289	1719	569	2245	1695	594	2519	1837	415	2347	1767	538	2105	1661	691

(Dry bulb value based on 46% humidity)

## 19.1.2 CS-FZ35UKE CU-FZ35UKE

Indoo	or (°C)										Outd	oor DE	8 (°C)									
			-10		-7		0		5				16			25			35			
DB	WB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	3788	2853	807	3805	2871	802	3821	2829	807	3712	2846	939	4179	3072	641	3896	3003	851	3400	2771	1100
21	22.0	4178	2295	816	4111	2293	887	4132	2288	863	4297	2346	748	4602	2495	614	4268	2358	841	3806	2210	1105
23	15.7	3383	3349	864	3408	2812	825	3374	2786	903	3395	3361	881	3765	3727	662	3492	2877	859	3089	2756	1100
23	18.4	3741	2276	807	3767	2272	781	3793	2287	807	3650	2247	920	4001	2379	646	3809	2348	852	3424	2202	1101
20	13.3	3005	2975	988	2977	2607	826	3214	2768	864	3119	2671	902	3542	3506	677	3216	2806	862	2869	2629	1098
20	15.8	3413	2246	862	3404	2242	817	3384	2214	907	3319	2183	947	3724	2365	661	3469	2275	858	3112	2139	1101

(Dry bulb value based on 46% humidity)

## 19.1.3 CS-FZ50UKE CU-FZ50UKE

Indoo	or (°C)										Outd	oor DE	8 (°C)									
DB			-10			-7		0		5			16			25			35			
DB	WB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	5124	3416	1232	5149	3437	1225	5169	3387	1232	5022	3407	1434	5653	3678	979	5270	3595	1300	4600	3318	1680
21	22.0	5653	2748	1247	5562	2746	1355	5590	2739	1318	5814	2809	1142	6227	2987	938	5775	2823	1284	5149	2646	1687
23	15.7	4577	4532	1319	4611	3368	1260	4565	3336	1379	4593	4547	1345	5094	5043	1012	4724	3445	1312	4179	3300	1680
23	18.4	5061	2726	1233	5097	2721	1192	5131	2739	1233	4938	2691	1405	5414	2849	987	5154	2811	1302	4633	2637	1682
20	13.3	4065	4024	1508	4028	3122	1261	4349	3314	1320	4219	3199	1377	4792	4744	1034	4351	3360	1317	3882	3148	1676
20	15.8	4618	2690	1316	4606	2684	1248	4578	2651	1385	4490	2613	1447	5038	2832	1010	4693	2725	1310	4211	2561	1681

(Dry bulb value based on 46% humidity)

#### 19.1.4 **CS-FZ60UKE CU-FZ60UKE**

Indoo	r (°C)										Outd	oor DE	8 (°C)									
DB			-10			-7			0		5				16			25				
DB	WB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	7057	5152	1420	7202	5157	1279	7260	5215	1300	7161	5202	1264	7323	5232	1193	6799	4987	1509	6250	4825	1930
21	22.0	7992	4206	1252	8036	4199	1170	7862	4164	1345	7763	4071	1333	8052	4170	1140	7462	3940	1530	6876	3772	1954
23	15.7	6601	5150	1287	6618	5167	1186	6425	5057	1334	6615	5178	1229	6371	4966	1232	6094	4778	1523	5678	4800	1930
23	18.4	7147	4184	1214	7160	4178	1265	6919	4070	1412	7173	4165	1273	7001	3976	1200	6660	3924	1551	6186	3758	1948
20	13.3	5121	4495	1059	5070	4530	1128	4825	4776	885	4361	4318	717	6207	6145	1260	5613	4660	1529	5274	4578	1926
20	15.8	6425	4017	1393	5431	3540	1104	5641	3587	1063	5025	3383	757	6516	3953	1228	6065	3803	1561	5622	3651	1948

(Dry bulb value based on 46% humidity)

TC- Total Cooling Capacity (W)SHC- Sensible Heat Capacity (W)IP- Input Power (W)

## 19.2 Heat Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Heat mode at 30°C Voltage: 230V

#### 19.2.1 **CS-FZ25UKE CU-FZ25UKE**

Indoor (°C)					Outdoor	WB (°C)					
DB	-1	15	-	7		2	-	7	12		
DB	TC	IP	TC IP		TC	IP	TC	IP	TC	IP	
24	1779	873	1948	855	2535	889	2942	771	3131	767	
20	1782	826	2140	850	2610	910	3150	770	3258	767	
16	1679	782	2207	814	2627	866	3363	769	3453	766	

## 19.2.2 CS-FZ35UKE CU-FZ35UKE

Indoor (°C)					Outdoor	WB (°C)					
DB	-1	15	-	7	2	2	7	7	12		
DB	TC	IP	TC IP		TC	IP	TC	IP	TC	IP	
24	1955	1046	2366	1037	3099	1094	3586	1042	3817	1036	
20	1958	990	2600	1030	3190	1120	3840	1040	3971	1036	
16	1845	937	2681	986	3211	1066	4100	1039	4209	1034	

## 19.2.3 CS-FZ50UKE CU-FZ50UKE

Indoor (°C)					Outdoor	WB (°C)					
DB	-1	5	-	7		2	-	7	12		
DB	TC	IP	TC IP		TC	IP	TC	IP	TC	IP	
24	3644	1955	4169	2103	5275	2110	5043	1572	5368	1564	
20	3650	1850	4580	2090	5430	2160	5400	1570	5584	1564	
16	3440	1751	4723	2001	5465	2056	5765	1568	5919	1561	

## 19.2.4 CS-FZ60UKE CU-FZ60UKE

Indoor (°C)					Outdoor	WB (°C)					
DB	-1	15	-	7		2	-	7	12		
DB	TC	IP	TC IP		TC	IP	TC	IP	TC	IP	
24	4159	2153	4751	2455	5930	2431	6380	1939	6561	1930	
20	4299	2074	5240	2450	6160	2420	6800	1940	7098	1930	
16	4645	1963	5419	2445	6613	2055	6698	1930	7591	1939	

TC - Total Cooling Capacity (W)

SHC - Sensible Heat Capacity (W) IP - Input Power (W)


## 20. Service Data

Service data provided are based on the air conditioner running under rated frequency during forced cooling / forced heating mode.


## 20.1 Cool Mode Outdoor Air Temperature Characteristic

Room Temperature: 27/19°C, Cooling Characteristic Fan: High Pipe Length: 5.0m Freq: Rated Fc


## 20.1.1 CS-FZ25UKE CU-FZ25UKE

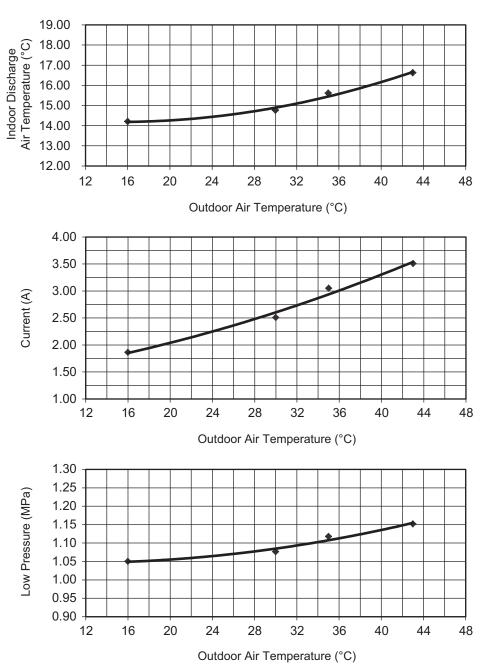


## 20.1.2 CS-FZ35UKE CU-FZ35UKE

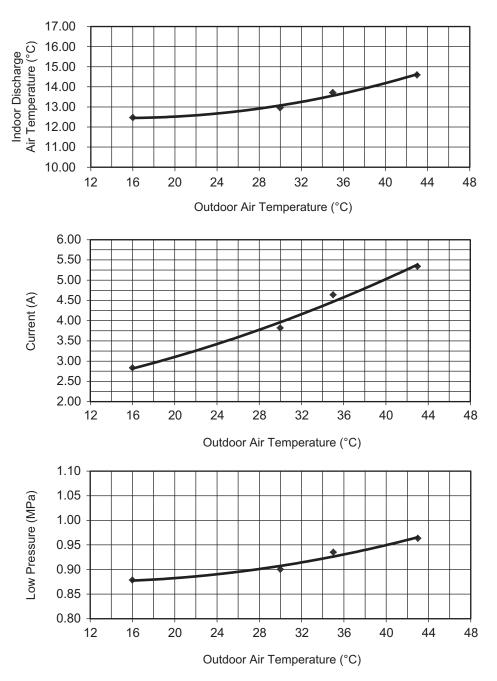

145

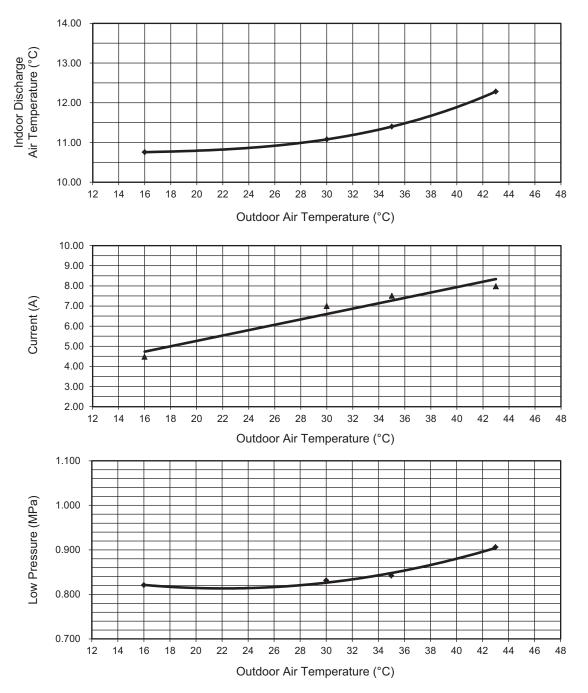


# 20.1.4 CS-FZ60UKE CU-FZ60UKE

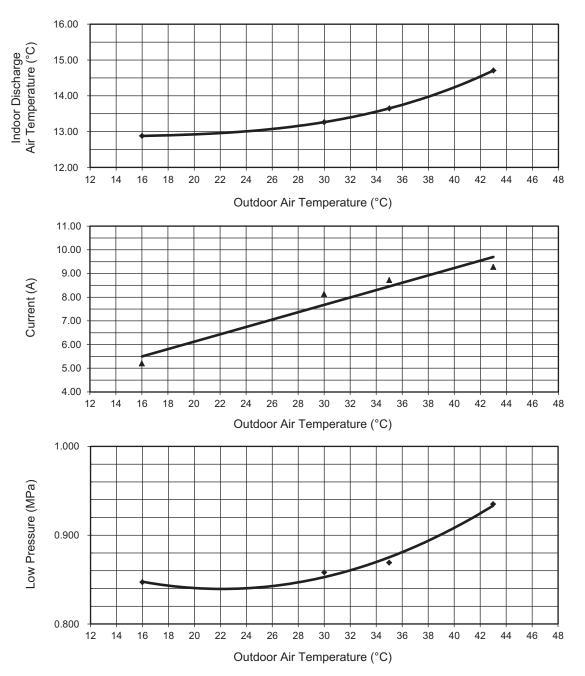


# 20.2 Heat Mode Outdoor Air Temperature Characteristic


Room Temperature: 20°C, Heating Characteristic Fan: High Pipe Length: 5.0m Freq: Rated Fh

# 20.2.1 CS-FZ25UKE CU-FZ25UKE

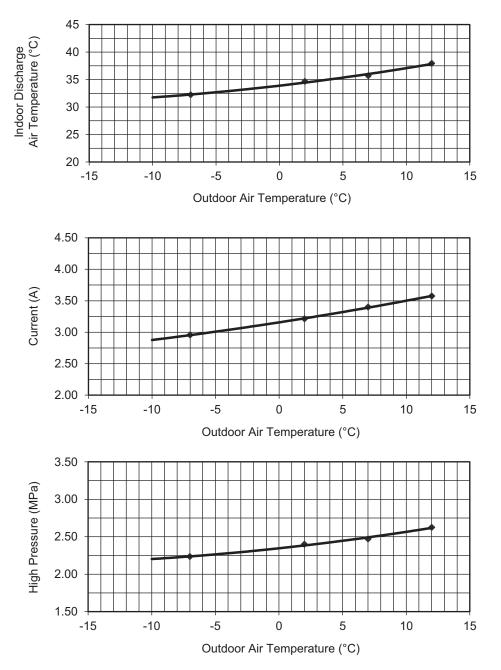


## 20.2.2 CS-FZ35UKE CU-FZ35UKE

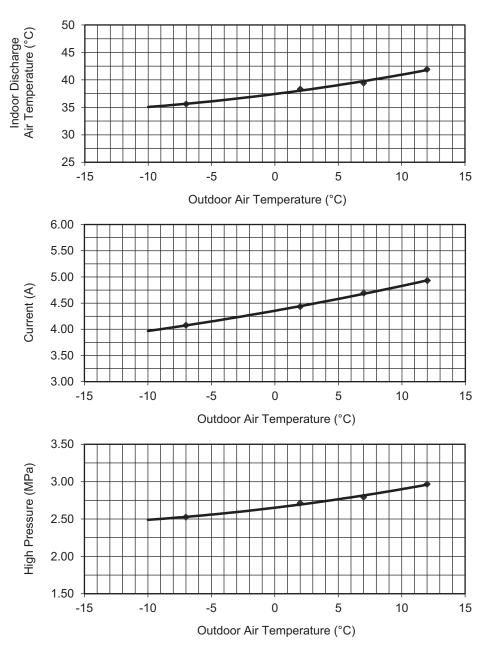

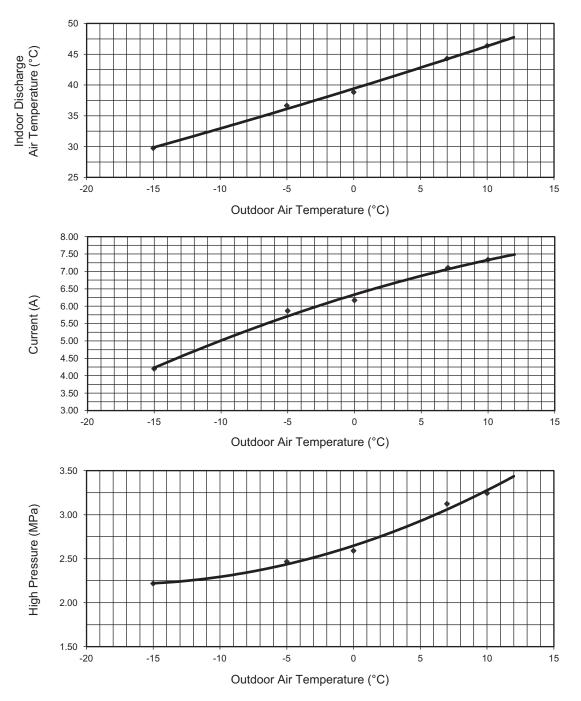


## 20.2.4 CS-FZ60UKE CU-FZ60UKE

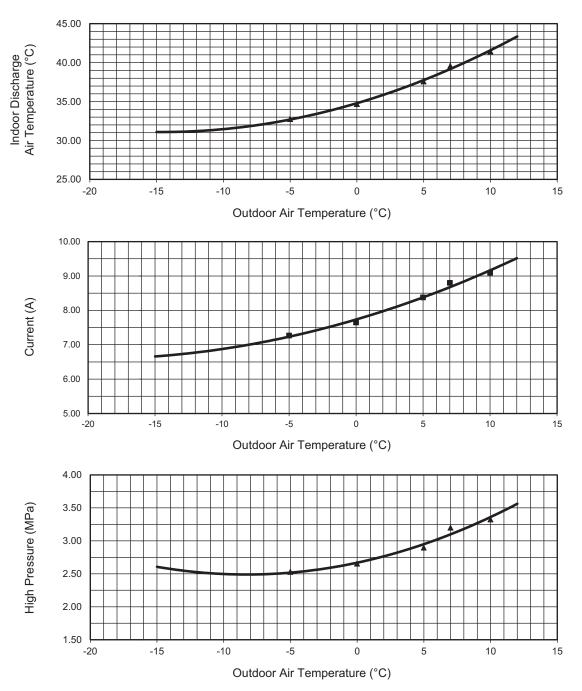

# 20.3 Piping Length Correction Factor

The characteristic of the unit has to be corrected in accordance with the piping length.


# 20.3.1 CS-FZ25UKE CU-FZ25UKE CS-FZ35UKE CU-FZ35UKE

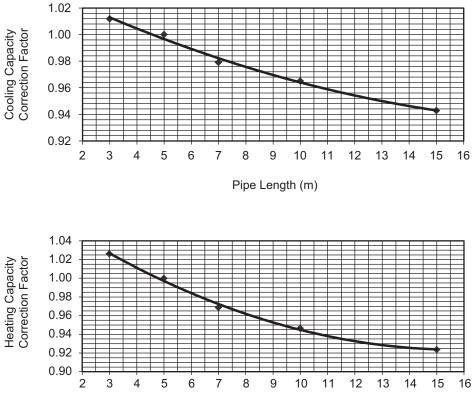

Pipe Length (m)


Note: The graphs show the factor after added right amount of additional refrigerant.

## 20.3.2 CS-FZ50UKE CU-FZ50UKE

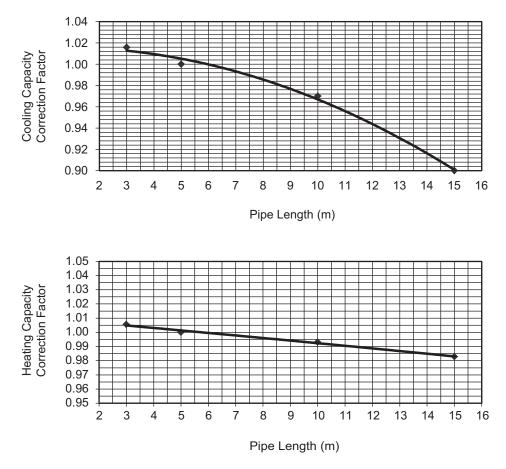

Note: The graphs show the factor after added right amount of additional refrigerant.

## 20.3.3 CS-FZ60UKE CU-FZ60UKE

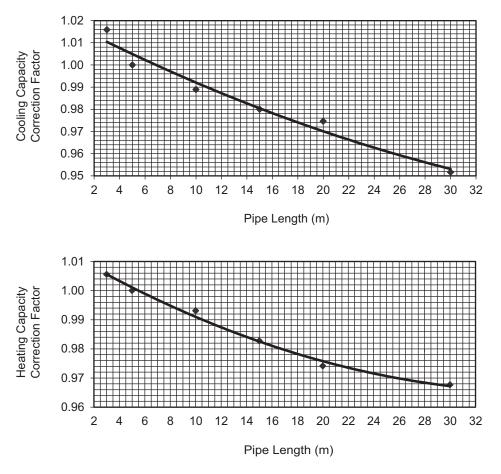


Note: The graphs show the factor after added right amount of additional refrigerant.

# **21. Exploded View and Replacement Parts List**

# 21.1 Indoor Unit


# 21.1.1 CS-FZ25UKE CS-FZ35UKE

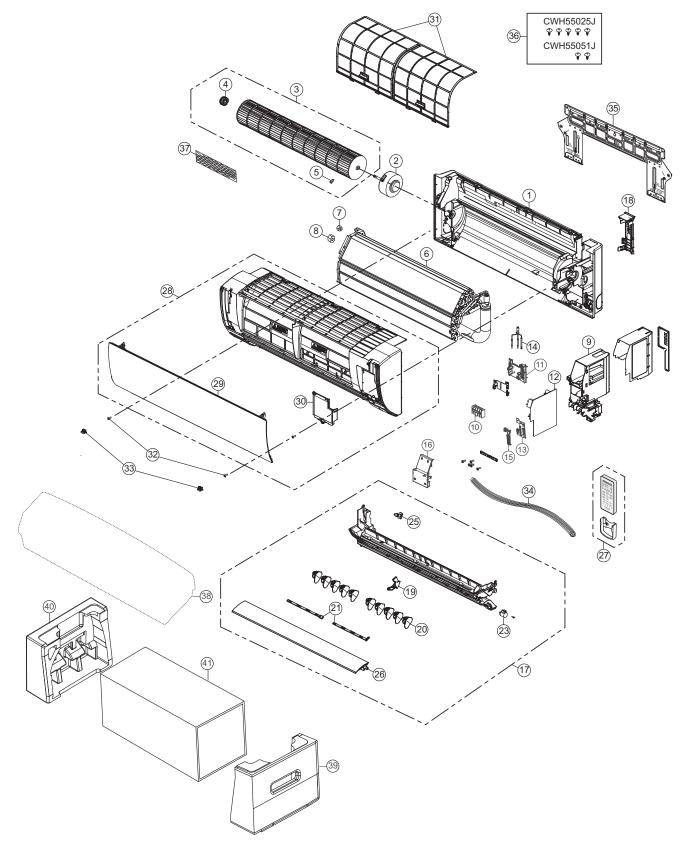

### Note


SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CS-FZ25UKE	CS-FZ35UKE	REMARK
	1	CHASSIS COMPLETE	1	CWD50C1903	←	
$\wedge$	2	FAN MOTOR	1	L6CBYYYL0177	←	0
	3	CROSS-FLOW FAN COMPLETE	1	CWH02C1159	←	
	4	BEARING ASSY	1	CWH64K1006	←	
	5	SCREW - CROSS-FLOW FAN	1	CWH551146	←	
	6	EVAPORATOR	1	ACXB30C16900	←	
	7	FLARE NUT (LIQUID)	1	CWT251048	←	
	8	FLARE NUT (GAS)	1	CWT251049	←	
	9	CONTROL BOARD CASING	1	CWH102573	←	
$\wedge$	10	TERMINAL BOARD COMPLETE	1	CWA28C2671	←	0
	11	PARTICULAR PIECE - TERMINAL	1	ACXD93-01480	←	
$\wedge$	12	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39550	ACXA73C39560	0
$\overline{\Lambda}$	13	ELECTRONIC CONTROLLER - INDICATOR	1	ACXA73-00410	←	0
	14	SENSOR COMPLETE	1	CWA50C2664	←	0
	15	INDICATOR HOLDER	1	CWD933865	←	
	16	CONTROL BOARD FRONT COVER CO.	1	CWH13C1314	←	
	17	DISCHARGE GRILLE COMPLETE	1	CWE20C3433	←	
	18	BACK COVER CHASSIS	1	CWD933857	←	
	19	FULCRUM	1	CWH621164	←	
	20	VERTICAL VANE	10	CWE241447	←	
	21	CONNECTING BAR	2	CWE261308	←	
$\wedge$	23	AIR SWING MOTOR	1	CWA981264	←	0
	25	CAP - DRAIN TRAY	1	CWH521259	←	
	26	HORIZONTAL VANE COMPLETE	1	CWE24C1496	←	
	27	REMOTE CONTROL COMPLETE	1	ACXA75C00450	←	0
	28	FRONT GRILLE COMPLETE	1	ACXE10C00700	←	0
	29	INTAKE GRILLE COMPLETE	1	ACXE22C00230	←	
	30	GRILLE DOOR COMPLETE	1	CWE14C1112	←	
	31	AIR FILTER	2	CWD001385	←	
	32	SCREW - FRONT GRILLE	4	XTT4+16CFJ	←	
	33	CAP - FRONT GRILLE	2	CWH521283	←	
	34	DRAIN HOSE	1	ACXH85-00210	←	
	35	INSTALLATION PLATE	1	CWH361147	←	
	36	BAG COMPLETE - INSTALLATION SCREW	1	CWH82C1705	←	1
	37	AIR PURIFYING FILTER	1	CWD00C1293	←	1
	38	BAG	1	CWG861497	←	
	39	SHOCK ABSORBER - RIGHT	1	CWG713619	←	
	40	SHOCK ABSORBER - LEFT	1	CWG713620	←	
	41	C. C. CASE	1	ACXG50-44340	ACXG50-44350	

(NOTE)
All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).
"O" marked parts are recommended to be kept in stock.

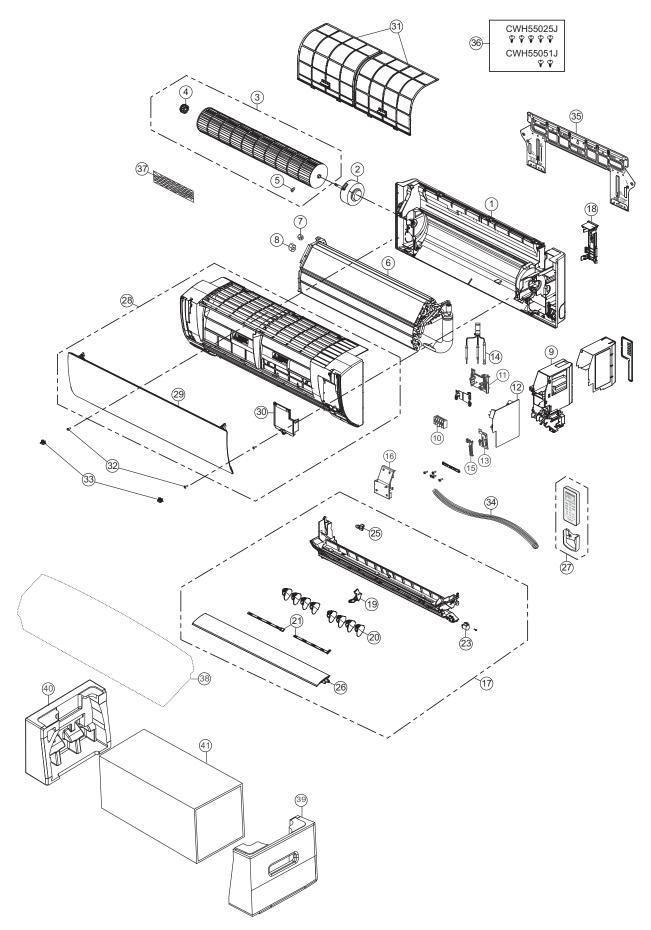

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CS-FZ50UKE	REMARK
	1	CHASSIS COMPLETE	1	CWD50C1901	
$\mathbf{V}$	2	FAN MOTOR	1	L6CBYYYL0175	0
	3	CROSS-FLOW FAN COMPLETE	1	CWH02C1076	
	4	BEARING ASSY	1	CWH64K1006	
	5	SCREW - CROSS-FLOW FAN	1	CWH551146	
	6	EVAPORATOR	1	ACXB30C01130	
	7	FLARE NUT (LIQUID)	1	CWT251048	
	8	FLARE NUT (GAS)	1	CWT251032	
	9	CONTROL BOARD CASING	1	CWH102605	
$\wedge$	10	TERMINAL BOARD COMPLETE	1	CWA28C2742	0
	11	PARTICULAR PIECE - TERMINAL	1	CWD933138	
$\wedge$	12	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39730	0
$\overline{\mathbb{A}}$	13	ELECTRONIC CONTROLLER - INDICATOR	1	CWA746716	0
	14	SENSOR COMPLETE	1	CWA50C2664	0
	15	INDICATOR HOLDER	1	CWD933406	
	16	CONTROL BOARD FRONT COVER CO.	1	CWH13C1247	
	17	DISCHARGE GRILLE COMPLETE	1	CWE20C3236	
	18	BACK COVER CHASSIS	1	CWD933233	
	19	FULCRUM	1	CWH621131	
	20	VERTICAL VANE	8	CWE241374	
	21	CONNECTING BAR	2	CWE261251	
$\wedge$	23	AIR SWING MOTOR	1	CWA981264	0
	25	CAP - DRAIN TRAY	1	CWH521259	
	26	HORIZONTAL VANE COMPLETE	1	CWE24C1385	
	27	REMOTE CONTROL COMPLETE	1	ACXA75C00450	0
	28	FRONT GRILLE COMPLETE	1	ACXE10C01120	0
	29	INTAKE GRILLE COMPLETE	1	ACXE22C00380	
	30	GRILLE DOOR COMPLETE	1	CWE14C1090	
	31	AIR FILTER	2	CWD001279	
	32	SCREW - FRONT GRILLE	4	XTT4+16CFJ	
	33	CAP - FRONT GRILLE	2	CWH521227	
	34	DRAIN HOSE	1	ACXH85-00210	
	35	INSTALLATION PLATE	1	CWH361147	
	36	BAG COMPLETE - INSTALLATION SCREW	1	CWH82C1705	
	37	AIR PURIFYING FILTER	1	CWD00C1293	
	38	BAG	1	CWG861497	
	39	SHOCK ABSORBER - RIGHT	1	CWG713387	
	40	SHOCK ABSORBER - LEFT	1	CWG713386	
	41	C. C. CASE	1	ACXG50-44360	

(NOTE)
All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).
"O" marked parts are recommended to be kept in stock.

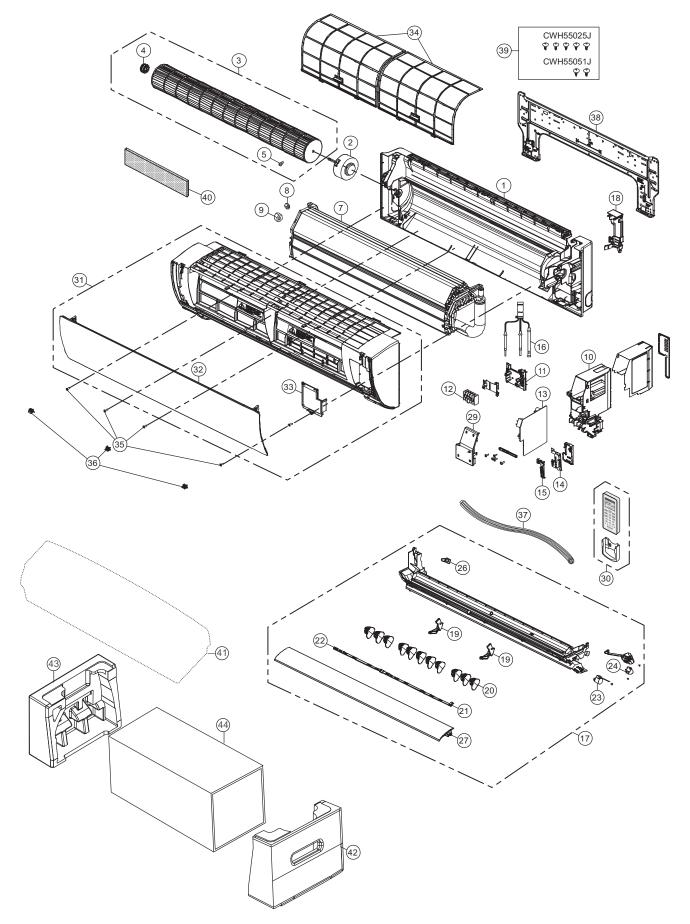


SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CS-FZ60UKE	REMARK
	1	CHASSIS COMPLETE	1	CWD50C1902	
$\Lambda$	2	FAN MOTOR	1	L6CBYYYL0176	0
	3	CROSS-FLOW FAN COMPLETE	1	CWH02C1077	
	4	BEARING ASSY	1	CWH64K1010	
	5	SCREW - CROSS-FLOW FAN	1	CWH551146	
	7	EVAPORATOR	1	ACXB30C16960	
	8	FLARE NUT (LIQUID)	1	CWT251030	
	9	FLARE NUT (GAS)	1	CWT251032	
	10	CONTROL BOARD CASING	1	CWH102605	
	11	PARTICULAR PIECE - TERMINAL	1	CWD933138	
Ŵ	12	TERMINAL BOARD COMPLETE	1	CWA28C2742	0
$\overline{\mathbb{A}}$	13	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39740	0
$\overline{\mathbb{A}}$	14	ELECTRONIC CONTROLLER - INDICATOR	1	CWA746716	0
	15	INDICATOR HOLDER	1	CWD933406	
	16	SENSOR COMPLETE	1	CWA50C2664	0
	17	DISCHARGE GRILLE COMPLETE	1	CWE20C3242	
	18	BACK COVER CHASSIS	1	CWD933031	
	19	FULCRUM	2	CWH621138	
	20	VERTICAL VANE	11	CWE241374	
	21	CONNECTING BAR	2	CWE261257	
	22	CONNECTING BAR	1	CWE261258	
$\wedge$	23	AIR SWING MOTOR ASS'Y	1	CWA98K1018	0
$\overline{\mathbb{A}}$	24	AIR SWING MOTOR	1	CWA981241	0
	26	CAP - DRAIN TRAY	1	CWH521259	
	27	HORIZONTAL VANE COMPLETE	1	CWE24C1392	
	29	CONTROL BOARD FRONT COVER CO.	1	CWH13C1247	
	30	REMOTE CONTROL COMPLETE	1	ACXA75C00430	0
	31	FRONT GRILLE COMPLETE	1	ACXE10C03540	0
	32	INTAKE GRILLE COMPLETE	1	ACXE22C01230	
	33	GRILLE DOOR COMPLETE	1	CWE14C1090	
	34	AIR FILTER	2	CWD001283	
	35	SCREW - FRONT GRILLE	4	XTT4+16CFJ	
	36	CAP - FRONT GRILLE	2	CWH521227	
	37	DRAIN HOSE	1	ACXH85-00210	
	38	INSTALLATION PLATE	1	CWH361098	
	39	BAG COMPLETE - INSTALLATION SCREW	1	CWH82C1705	
	40	AIR PURIFYING FILTER	1	CWD00C1293	
	41	BAG	1	CWG861498	
	42	SHOCK ABSORBER - RIGHT	1	CWG713403	
	43	SHOCK ABSORBER - LEFT	1	CWG713402	
	44	C. C. CASE	1	ACXG50-46360	

(Note)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. •
- •

# 21.2 Outdoor Unit

# 21.2.1 CU-FZ25UKE CU-FZ35UKE

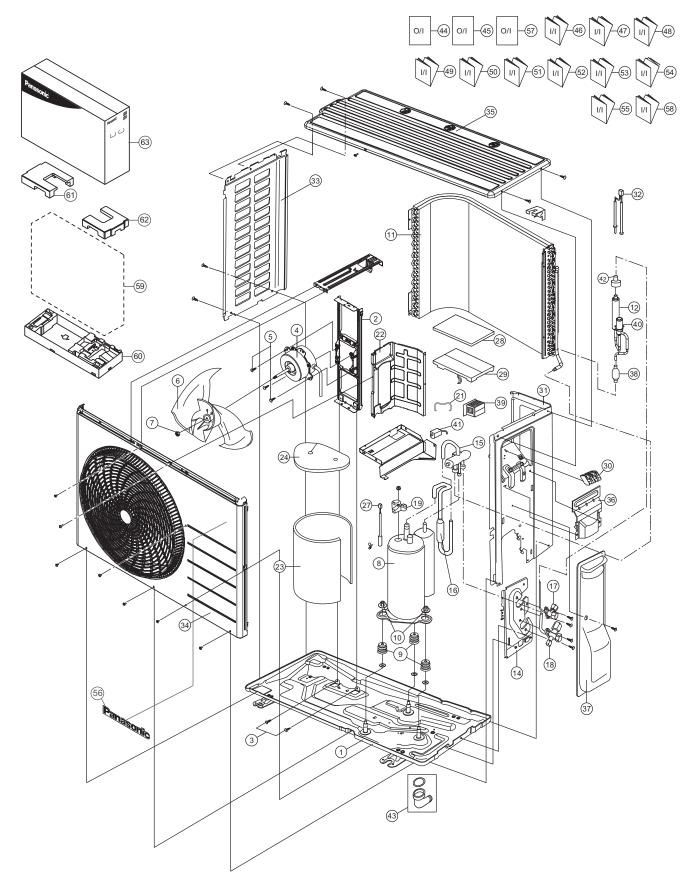


#### Note

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ25UKE	CU-FZ35UKE	REMARK
	1	CHASSIS COMPLETE	1	ACXD52K00150	←	
	2	FAN MOTOR BRACKET	1	CWD541157	←	
	3	SCREW - FAN MOTOR BRACKET	2	CWH551217	$\leftarrow$	
$\Lambda$	4	FAN MOTOR	1	L6CAYYYL0064	$\leftarrow$	0
	5	SCREW - FAN MOTOR MOUNT	4	CWH55252J	$\leftarrow$	
	6	PROPELLER FAN ASSY	1	CWH03K1100	$\leftarrow$	
	7	NUT - PROPELLER FAN	1	CWH56053J	$\leftarrow$	
$\land$	8	COMPRESSOR	1	9SS072XAD21	$\leftarrow$	0
	9	ANTI - VIBRATION BUSHING	3	CWH501038	$\leftarrow$	
	10	NUT - COMPRESSOR MOUNT	3	CWH561096	$\leftarrow$	
	11	CONDENSER	1	ACXB32C14790	ACXB32C00780	
	12	DISCHARGE MUFFLER	1	CWB121021	$\leftarrow$	
	14	HOLDER COUPLING	1	CWH351233	$\leftarrow$	
	15	4-WAYS VALVE	1	ACXB00-00130	$\leftarrow$	
	16	DISCHARGE MUFFLER (4 W. VALVE)	1	CWB121010	←	
	17	2-WAYS VALVE (LIQUID)	1	CWB021180J	$\leftarrow$	0
	18	3-WAY VALVE (GAS)	1	CWB011581	CWB011374	0
	19	TERMINAL COVER	1	CWH171041	$\leftarrow$	
	21	PLATE SPRING	1	CWH71044	-	
	22	SOUND PROOF BOARD	1	CWH151427	$\leftarrow$	
	23	SOUND PROOF MATERIAL	1	ACXG30-00530	$\leftarrow$	
	24	SOUND PROOF MATERIAL	1	CWG302737	$\leftarrow$	
	27	SENSOR CO - COMP TEMP	1	CWA50C2894	$\leftarrow$	0
	28	CONTROL BOARD COVER - TOP	1	ACXH13-00450	$\leftarrow$	
$\square$	29	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39470R	ACXA73C39480R	0
$\square$	30	TERMINAL BOARD ASSY	1	CWA28K1036J	$\leftarrow$	0
	31	CABINET SIDE PLATE CO.	1	ACXE04C05590	$\leftarrow$	
	32	SENSOR CO - AIR TEMP AND PIPE TEMP	1	CWA50C3267	$\leftarrow$	0
	33	CABINET SIDE PLATE	1	ACXE04-00130A	$\leftarrow$	
	34	CABINET FRONT PLATE CO.	1	CWE06C1566	$\leftarrow$	
	35	CABINET TOP PLATE	1	CWE031230A	$\leftarrow$	
	36	PLATE - C. B. COVER TERMINAL	1	CWH131301	$\leftarrow$	
	37	CONTROL BOARD COVER CO.	1	CWH13C1359	$\leftarrow$	
	38	STRAINER	1	CWB11094	$\leftarrow$	
	39	REACTOR	1	G0C103J00047	$\leftarrow$	0
	40	EXPANSION VALVE	1	CWB051078	$\leftarrow$	
$\square$	41	V-COIL COMPLETE - 4-WAY VALVE	1	ACXA43C00250	$\leftarrow$	0
$\triangle$	42	V-COIL COMPLETE - EXP. VALVE	1	ACXA43C00640	$\leftarrow$	0
	43	BAG - COMPLETE	1	CWG87C900	$\leftarrow$	
	44	OPERATING INSTRUCTION	1	ACXF55-18840	$\leftarrow$	
	45	OPERATING INSTRUCTION	1	ACXF55-18850	$\leftarrow$	
	46	INSTALLATION INSTRUCTION	1	ACXF60-27700	$\leftarrow$	
	47	INSTALLATION INSTRUCTION	1	ACXF60-27710	$\leftarrow$	
	48	INSTALLATION INSTRUCTION	1	ACXF60-27720	4	
	49	INSTALLATION INSTRUCTION	1	ACXF60-27730	4	
	50	INSTALLATION INSTRUCTION	1	ACXF60-27740	←	
	51	INSTALLATION INSTRUCTION	1	ACXF60-27750	←	
	52	INSTALLATION INSTRUCTION	1	ACXF60-27760	$\leftarrow$	
	53	INSTALLATION INSTRUCTION	1	ACXF60-27770	←	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ25UKE	CU-FZ35UKE	REMARK
	54	INSTALLATION INSTRUCTION	1	ACXF60-27780	$\leftarrow$	
	55	INSTALLATION INSTRUCTION	1	ACXF60-27790	$\leftarrow$	
	56	PANASONIC BADGE	1	CWE373439	$\leftarrow$	
	57	OPERATING INSTRUCTION	1	ACXF55-19970	$\leftarrow$	
	58	INSTALLATION INSTRUCTION	1	ACXF60-27800	$\leftarrow$	
	59	BAG	1	CWG861078	$\leftarrow$	
	60	BASE BOARD - COMPLETE	1	CWG62C1223	$\leftarrow$	
	61	SHOCK ABSORBER - LEFT	1	CWG713778	$\leftarrow$	
	62	SHOCK ABSORBER - RIGHT	1	CWG713779	$\leftarrow$	
	63	C. C. CASE	1	ACXG50-06590	$\leftarrow$	

(Note)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. •
- •

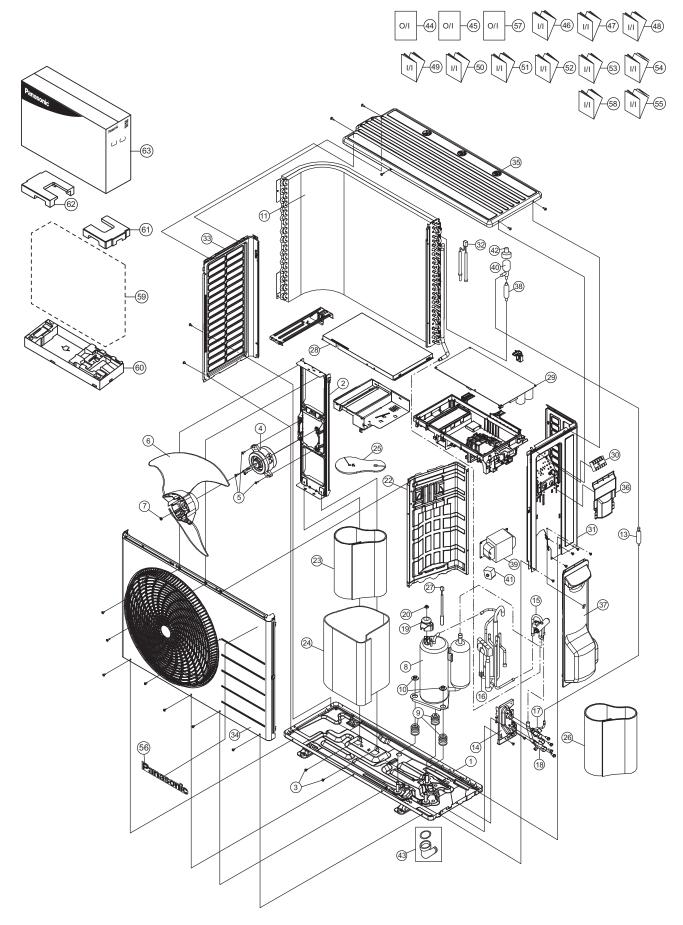


SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ50UKE	REMARK
	1	CHASSIS COMPLETE	1	CWD52K1277	
	2	FAN MOTOR BRACKET	1	CWD541167	
	3	SCREW - FAN MOTOR BRACKET	2	CWH551217	
$\triangle$	4	FAN MOTOR	1	L6CAYYYL0064	0
	5	SCREW - FAN MOTOR MOUNT	4	CWH55252J	
	6	PROPELLER FAN ASSY	1	CWH03K1066	
	7	NUT - PROPELLER FAN	1	CWH56053J	
$\triangle$	8	COMPRESSOR	1	5RD132XBE21	0
	9	ANTI - VIBRATION BUSHING	3	CWH50077	
	10	NUT - COMPRESSOR MOUNT	3	CWH561096	
	11	CONDENSER	1	CWB32C3547	
	13	ACCUMULATOR	1	CWB131065	
	14	HOLDER COUPLING	1	CWH351233	
	15	4-WAYS VALVE	1	ACXB00-00130	
	16	DISCHARGE MUFFLER (4 W. VALVE)	1	CWB121010	
	17	2-WAYS VALVE (LIQUID)	1	CWB021589	0
	18	3-WAY VALVE (GAS)	1	CWB011806	0
	19	TERMINAL COVER	1	CWH171039A	
	20	NUT - TERMINAL COVER	1	CWH7080300J	
	22	SOUND PROOF BOARD	1	CWH151273	
	23	SOUND PROOF MATERIAL	1	CWG302740	
	24	SOUND PROOF MATERIAL	1	CWG302952	
	25	SOUND PROOF MATERIAL - COMP. TOP	1	CWG302630	
	26	SOUND PROOF MATERIAL	1	CWG302745	
	27	SENSOR CO - COMP TEMP	1	CWA50C2894	0
	28	CONTROL BOARD COVER - TOP	1	CWH131473	
$\square$	29	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39580R	0
$\triangle$	30	TERMINAL BOARD ASSY	1	CWA28K1036J	0
	31	CABINET SIDE PLATE CO.	1	CWE04C1481	
	32	SENSOR CO - AIR TEMP AND PIPE TEMP	1	CWA50C2893	0
	33	CABINET SIDE PLATE - LEFT	1	CWE041616A	
	34	CABINET FRONT PLATE CO.	1	ACXE06C02900	
	35	CABINET TOP PLATE	1	CWE031148A	
	36	PLATE - C. B. COVER TERMINAL	1	CWH131470	
	37	CONTROL BOARD COVER CO.	1	CWH13C1253	
	38	STRAINER	1	CWB11094	
	39	REACTOR	1	G0C392J00027	0
	40	EXPANSION VALVE	1	CWB051078	
$\triangle$	41	V-COIL COMPLETE - 4 WAY VALVE	1	ACXA43C00250	0
$\square$	42	V-COIL COMPLETE - EXP. VALVE	1	ACXA43C00640	0
	43	BAG - COMPLETE	1	CWG87C900	
	44	OPERATING INSTRUCTION	1	ACXF55-18840	
	45	OPERATING INSTRUCTION	1	ACXF55-18850	
	46	INSTALLATION INSTRUCTION	1	ACXF60-27700	
	47	INSTALLATION INSTRUCTION	1	ACXF60-27710	
	48	INSTALLATION INSTRUCTION	1	ACXF60-27720	
	49	INSTALLATION INSTRUCTION	1	ACXF60-27730	
	50	INSTALLATION INSTRUCTION	1	ACXF60-27740	1
	51	INSTALLATION INSTRUCTION	1	ACXF60-27750	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ50UKE	REMARK
	52	INSTALLATION INSTRUCTION	1	ACXF60-27760	
	53	INSTALLATION INSTRUCTION	1	ACXF60-27770	
	54	INSTALLATION INSTRUCTION	1	ACXF60-27780	
	55	INSTALLATION INSTRUCTION	1	ACXF60-27790	
	56	PANASONIC BADGE	1	CWE373439	
	57	OPERATING INSTRUCTION	1	ACXF55-19970	
	58	INSTALLATION INSTRUCTION	1	ACXF60-27800	
	59	BAG	1	ACXG86-03760	
	60	BASE BOARD - COMPLETE	1	CWG62C1144	
	61	SHOCK ABSORBER - RIGHT	1	CWG713415	
	62	SHOCK ABSORBER - LEFT	1	CWG713416	
	63	C. C. CASE	1	CWG568358	

(NOTE)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock.
- •

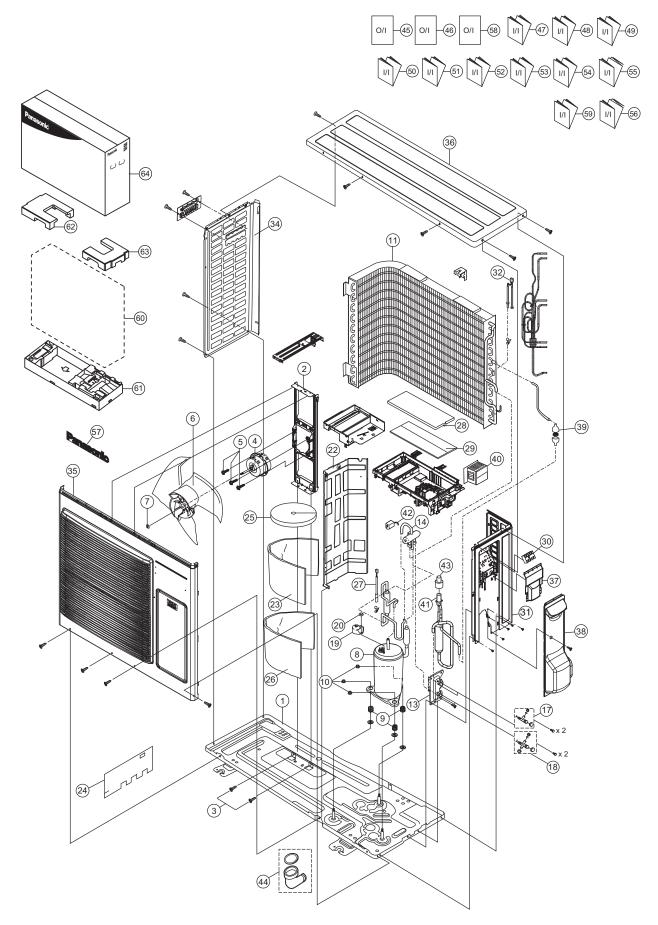

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ60UKE	REMARK
	1	CHASSIS COMPLETE	1	ACXD52K00320	
	2	FAN MOTOR BRACKET	1	ACXD54-00140	
	3	SCREW - FAN MOTOR BRACKET	2	CWH551217	
$\triangle$	4	FAN MOTOR	1	L6CAYYYL0076	0
	5	SCREW - FAN MOTOR MOUNT	4	CWH551106J	
	6	PROPELLER FAN ASSY	1	ACXH03K00070	
	7	NUT - PROPELLER FAN	1	CWH56053J	
$\triangle$	8	COMPRESSOR	1	9RD132XAA21	0
	9	ANTI - VIBRATION BUSHING	3	CWH50077	
	10	NUT - COMPRESSOR MOUNT	3	CWH561096	
	11	CONDENSER	1	ACXB32C08610	
	13	HOLDER COUPLING	1	ACXH35-00080	
	14	4-WAYS VALVE	1	ACXB00-00140	
	17	2-WAYS VALVE (LIQUID)	1	ACXB02-00210	0
	18	3-WAY VALVE (GAS)	1	ACXB01-00580	0
	19	TERMINAL COVER	1	CWH171039A	
	20	NUT - TERMINAL COVER	1	CWH7080300J	
	22	SOUND PROOF BOARD	1	ACXH15-00200	
	23	SOUND PROOF MATERIAL	1	CWG302950	
	24	SOUND PROOF MATERIAL	1	CWG302632	
	25	SOUND PROOF MATERIAL - COMP. TOP	1	CWG302630	
	26	SOUND PROOF MATERIAL	1	CWG302636	
	27	SENSOR CO - COMP TEMP	1	CWA50C2185	0
	28	CONTROL BOARD COVER - TOP	1	ACXH13-00490	
$\triangle$	29	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39590R	0
$\triangle$	30	TERMINAL BOARD ASSY	1	CWA28K1036J	0
	31	CABINET SIDE PLATE CO.	1	ACXE04C00990	
	32	SENSOR CO - AIR TEMP AND PIPE TEMP	1	CWA50C3079	0
	34	CABINET SIDE PLATE	1	ACXE04-00670	
	35	CABINET FRONT PLATE CO.	1	ACXE06K00080	
	36	CABINET TOP PLATE	1	ACXE03-00200	
	37	PLATE - C. B. COVER TERMINAL	1	CWH131470	
	38	CONTROL BOARD COVER CO.	1	ACXH13C00170	
	39	STRAINER	1	CWB11094	
	40	REACTOR	1	G0C392J00027	0
	41	EXPANSION VALVE	1	CWB051078	
$\triangle$	42	V-COIL COMPLETE - 4 WAY VALVE	1	ACXA43C00250	0
$\triangle$	43	V-COIL COMPLETE - EXP. VALVE	1	ACXA43C00640	0
	44	BAG - COMPLETE	1	CWG87C900	
	45	OPERATING INSTRUCTION	1	ACXF55-18840	
	46	OPERATING INSTRUCTION	1	ACXF55-18850	
	47	INSTALLATION INSTRUCTION	1	ACXF60-27700	
	48	INSTALLATION INSTRUCTION	1	ACXF60-27710	
	49	INSTALLATION INSTRUCTION	1	ACXF60-27720	
	50	INSTALLATION INSTRUCTION	1	ACXF60-27730	
	51	INSTALLATION INSTRUCTION	1	ACXF60-27740	
	52	INSTALLATION INSTRUCTION	1	ACXF60-27750	
	53	INSTALLATION INSTRUCTION	1	ACXF60-27760	
	54	INSTALLATION INSTRUCTION	1	ACXF60-27770	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-FZ60UKE	REMARK
	55	INSTALLATION INSTRUCTION	1	ACXF60-27780	
	56	INSTALLATION INSTRUCTION	1	ACXF60-27790	
	57	PANASONIC BADGE	1	CWE373439	
	58	OPERATING INSTRUCTION	1	ACXF55-19970	
	59	INSTALLATION INSTRUCTION	1	ACXF60-27800	
	60	BAG	1	CWG861461	
	61	BASE BOARD - COMPLETE	1	CWG62C1131	
	62	SHOCK ABSORBER - LEFT	1	CWG713217	
	63	SHOCK ABSORBER - RIGHT	1	CWG713218	
	64	C. C. CASE	1	CWG568359	

(NOTE)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. •
- •